

# *USER'S MANUAL*

*notebook*



**For Windows 7 & 8**



## Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©January 2014

## Trademarks

**Intel** and **Intel Core** are trademarks/registered trademarks of Intel Corporation.

## Preface

### R&TTE Directive

This device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom, Cyprus, Czech Republic, Estonia, Hungary, Latvia, Lithuania, Malta, Slovakia, Poland, Slovenia.

### CE Marking

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters “CE”. The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number 0560 after the CE mark.

The CE Marking is not a quality mark. Foremost, it refers to the safety rather than to the quality of a product. Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.



## **FCC Statement (Federal Communications Commission)**

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

### **Operation is subject to the following two conditions:**

1. This device may not cause interference.  
And
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



#### Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

### ErP Off Mode Power Consumption Statement:

The figures below note the power consumption of this computer in compliance with European Commission (EC) regulations on power consumption in off mode:

- Off Mode <math>< 0.5W</math>

## IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit (Full Range AC/DC Adapter - AC Input 100 - 240V, 50 - 60Hz DC Output 19.5V, 16.92A (**330W**) **OR** 20V, 15A (**300W**) minimum).

**This Computer's Optical Device is a Laser Class 1 Product**


### Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:





1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.

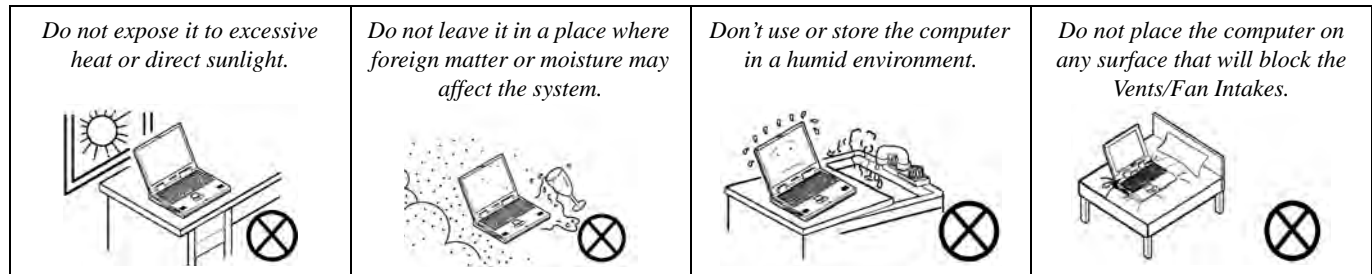



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.



3. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
4. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

<p><i>Do not turn off the power until you properly shut down all programs.</i></p> 	<p><i>Do not turn off any peripheral devices when the computer is on.</i></p> 	<p><i>Do not disassemble the computer by yourself.</i></p> 	<p><i>Perform routine maintenance on your computer.</i></p> 
--	---	---	---

5. **Take care when using peripheral devices.**

<p><i>Use only approved brands of peripherals.</i></p> 	<p><i>Unplug the power cord before attaching peripheral devices.</i></p> 
--	---

### Power Safety

The computer has specific power requirements:



#### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord).

You must also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer.**

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).


*Do not plug in the power cord if you are wet.*



*Do not use the power cord if it is broken.*



*Do not place heavy objects on the power cord.*

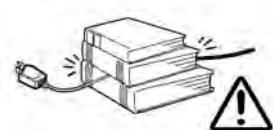

## Polymer Battery Precautions

Note the following information which is specific to polymer batteries only, and where applicable, this overrides the general battery precaution information overleaf.

- Polymer batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using polymer batteries. Do not use polymer batteries in high ambient temperature environments, and do not store unused batteries for extended periods.

See also the general battery precautionary information overleaf for further information.

### Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.



#### Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.



## Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

## Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.



### Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:

- Hazardous moving parts.
- Keep away from moving fan blades.

# Travel Considerations

## Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your "papers" are handy.



### Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vents/Fan Intakes to be blocked. To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intakes while the computer is in use.

## On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

**Hand-carry the notebook** - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with "normal" luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

**Beware of Electromagnetic fields** - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note:** Some airports also scan luggage with these devices.

**Fly safely** - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

**Get power where you can** - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.

**Keep it dry** - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

### Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:



- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.



#### Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.

## Lighting

Proper lighting and a comfortable viewing angle can reduce eye strain and shoulder and neck muscle fatigue.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

## LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

## LCD Electro-Plated Logos

Note that in computers featuring a raised LCD electro-plated logo, the logo is covered by a protective adhesive. Due to general wear and tear, this adhesive may deteriorate over time and the exposed logo may develop sharp edges. Be careful when handling the computer in this case, and avoid touching the raised LCD electro-plated logo. Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your service center.



## Contents

Notice .....	I
FCC Statement .....	III
FCC RF Radiation Exposure Statement: .....	IV
ErP Off Mode Power Consumption Statement: .....	IV
Instructions for Care and Operation .....	VI
Power Safety .....	VIII
Polymer Battery Precautions .....	IX
Battery Precautions .....	X
Cleaning .....	XI
Servicing .....	XI
Travel Considerations .....	XII

## Quick Start Guide

Overview .....	1-1
Advanced Users .....	1-2
Beginners and Not-So-Advanced Users .....	1-2
Warning Boxes .....	1-2
Model Differences .....	1-3
Not Included .....	1-3
System Software .....	1-4
RAID & AHCI Setup .....	1-4

## Preface

System Startup .....	1-5
System Map: LCD Panel Open & Top View .....	1-6
LED Indicators .....	1-8
Touch Sensor Instant Keys .....	1-9
Keyboard .....	1-10
Keyboard LED .....	1-11
Effects Buttons & Help .....	1-13
Function Keys & Visual Indicators .....	1-14
Control Center .....	1-15
System Map: Front & Rear Views .....	1-16
System Map: Right View .....	1-17
System Map: Left View .....	1-18
System Map: Bottom View .....	1-20
Windows 7 Start Menu & Control Panel .....	1-21
Video Features .....	1-22
Screen Resolution .....	1-23
NVIDIA Control Panel .....	1-24
Catalyst Control Center .....	1-25
Power Options .....	1-26

## Storage Devices, Mouse & Audio

Overview .....	2-1
----------------	-----



Hard Disk Drive .....	2-2
Optical Device .....	2-3
Loading Discs .....	2-3
Handling CDs or DVDs .....	2-4
DVD Regional Codes .....	2-5
Multi-In-1 Card Reader .....	2-6
ExpressCard Slot .....	2-7
Inserting and Removing ExpressCards .....	2-7
Audio Features .....	2-8
Setup for 5.1 or 7.1 Surround Sound .....	2-9
Setup for Audio Recording .....	2-11
Audio Notes for Fn + 5 .....	2-12
TouchPad and Buttons/Mouse .....	2-13
Gestures and Device Settings .....	2-14

## Power Management

Overview .....	3-1
The Power Sources .....	3-2
AC/DC Adapter .....	3-2
Battery .....	3-2
Turning On the Computer .....	3-3
Power Plans .....	3-4

## Preface

Power-Saving States .....	3-6
Sleep .....	3-6
Hibernate .....	3-7
Shut down .....	3-7
Configuring the Power Buttons .....	3-8
Resuming Operation .....	3-9
Power Conservation Modes .....	3-10
Battery Information .....	3-11
Conserving Battery Power .....	3-12
Battery Life .....	3-13
New Battery .....	3-13
Recharging the Battery with the AC/DC Adapter .....	3-13
Proper handling of the Battery Pack .....	3-14
Battery FAQ .....	3-15
Multi GPU Configuration & Power .....	3-19

## Drivers & Utilities

RAID & AHCI Setup .....	4-1
What to Install .....	4-1
Driver Installation .....	4-2
Manual Driver Installation .....	4-4
Updating/Reinstalling Individual Drivers .....	4-4

User Account Control .....4-5

Windows Security Message .....4-5

New Hardware Found .....4-5

Driver Installation Procedure .....4-6

Chipset .....4-6

USB 3.0 (Win 7 Only) .....4-6

NVIDIA Video (VGA) .....4-7

AMD Video (VGA) .....4-7

LAN .....4-7

Card Reader .....4-8

TouchPad .....4-8

Hot Key .....4-8

MEI Driver .....4-8

Audio .....4-8

Optional Drivers .....4-9

**BIOS Utilities**

Overview .....5-1

The Power-On Self Test (POST) .....5-2

Failing the POST .....5-3

Fatal Errors .....5-3

Non-Fatal Errors .....5-3

## Preface

The Setup Utility .....	5-4
Entering Setup .....	5-4
Setup Screens .....	5-5
Main Menu .....	5-6
System Time & Date (Main Menu) .....	5-6
SATA Port # (Main Menu) .....	5-7
System/Extended Memory (Main Menu) .....	5-7
BIOS Revision/ KBC/EC firmware Revision / VGA Card etc. (Main Menu) .....	5-7
Advanced Menu .....	5-8
Advanced Chipset Control (Advanced Menu) .....	5-8
Bluetooth Power Setting (Advanced Menu > Advanced Chipset Control) .....	5-9
Intel(R) Rapid Storage Technology (Advanced Menu) .....	5-9
SATA Mode (Advanced Menu) .....	5-9
Boot Logo (Advanced Menu) .....	5-10
Power On Boot Beep (Advanced Menu) .....	5-10
Battery Low Alarm Beep (Advanced Menu) .....	5-10
Security Menu .....	5-11
Set Supervisor Password (Security Menu) .....	5-11
Set User Password (Security Menu) .....	5-12
Password on boot (Security Menu) .....	5-12
Secure Boot Control (Security Menu) .....	5-12
Trusted Computing (Security Menu) .....	5-13

TPM State (Security Menu > TPM Support Enabled) .....5-14  
 Pending TPM operation (Security Menu > TPM Support & TPM State Enabled) .....5-15  
 Boot Menu .....5-16  
 Boot Option Priorities (Boot Menu) .....5-17  
 OS Select (Boot Menu) .....5-17  
 UEFI Boot (Boot Menu > OS Select) .....5-17  
 Save & Exit Menu .....5-18

## Upgrading The Computer

Overview .....6-1  
 When Not to Upgrade .....6-2  
 Removing the Battery .....6-4  
 Upgrading the Optical (CD/DVD) Device .....6-5  
 Upgrading the Hard Disk Drive(s) .....6-6  
 Upgrading the System Memory (RAM) .....6-12  
 Upgrading the Video Card .....6-25

## Modules

Overview .....7-1  
 Setting Up SATA RAID or AHCI Mode .....7-2  
 AHCI Mode .....7-2  
 RAID .....7-2  
 Intel® Rapid Storage Technology Application .....7-2

## Preface

SATA RAID Setup Procedure (BIOS) .....	7-5
RAID Setup (Intel Matrix) .....	7-6
Intel Rapid Storage Technology .....	7-11
IRST Driver Installation .....	7-11
Intel® Rapid Storage Technology for RAID Systems .....	7-12
RAID Volume Data Verification and Repair .....	7-14
PC Camera Module .....	7-17
PC Camera Driver Installation .....	7-18
PC Camera Audio Setup .....	7-19
Wireless LAN Module .....	7-25
3rd Party 802.11b/g/n WLAN Combo Driver Installation .....	7-26
Intel® WLAN Driver Installation .....	7-27
Qualcomm Atheros WLAN Combo Driver Installation .....	7-30
Qualcomm Atheros Killer Network Manager .....	7-31
Connecting to a Wireless Network in Windows 7 .....	7-37
Connecting to a Wireless Network Using Intel® PROSet Wireless .....	7-40
Windows Mobility Center .....	7-42
Security Modules (Fingerprint & TPM) .....	7-43
Fingerprint Reader Module .....	7-44
AuthenTec TrueSuite Fingerprint Reader Driver Installation .....	7-45
BioExcess Fingerprint Reader Driver Installation .....	7-45
AuthenTec TrueSuite Application .....	7-46

BioExcess Application .....7-56

Bluetooth Module .....7-67

3rd Party Bluetooth (V4.0) Combo Driver Installation .....7-69

Intel Bluetooth Combo Driver Installation .....7-70

Standard Bluetooth Configuration in Windows 7 .....7-71

Trusted Platform Module .....7-75

Enabling & Activating TPM .....7-76

Trusted Platform Module (TPM) Driver Installation .....7-78

Initializing TPM .....7-79

Infineon Security Platform Settings Tool .....7-81

Sound Blaster Audio .....7-89

Sound Blaster X-Fi MB-3 Audio AP Installation .....7-89

IRST Driver .....7-98

**Troubleshooting**

Overview .....8-1

Basic Hints and Tips .....8-2

Backup and General Maintenance .....8-3

Viruses .....8-4

Upgrading and Adding New Hardware/Software .....8-5

Problems & Possible Solutions .....8-7

Bluetooth Connection Problems .....8-19

## Preface

Intel® My WiFi Configuration .....	8-23
------------------------------------	------

## Interface (Ports & Jacks)

Overview .....	A-1
Ports and Jacks .....	A-2
Card Reader .....	A-2
DC-In Jack .....	A-2
DisplayPort .....	A-2
DVI-Out Port .....	A-2
e-SATA/Powered USB 3.0 Port .....	A-3
HDMI-Out Port .....	A-3
Headphone-Out Jack .....	A-3
Line-In Jack .....	A-4
Microphone-In Jack .....	A-4
Mini-IEEE 1394 Port .....	A-4
RJ-45 LAN Jack .....	A-4
S/PDIF-Out Jack .....	A-4
Security Lock Slot .....	A-5
USB 2.0/1.1 Ports* .....	A-5
USB 3.0 Port .....	A-5

## Control Center

Overview .....	B-1
----------------	-----



## NVIDIA Video Driver Controls

NVIDIA Video Driver Installation .....	C-1
NVIDIA Control Panel .....	C-2
Display Devices .....	C-5
Configuring an External Display (NVIDIA) .....	C-6
Extending the Display .....	C-7
Multiple Display Connection to HDMI-Out Port & DisplayPort .....	C-10
Attaching Other Displays (Win 7) .....	C-11
Configuring an External Display in Windows 7 .....	C-11
Using the Windows Logo Key + P/Fn + F7 Key Combination to Switch Displays .....	C-13
NVIDIA® SLI Multi GPU Configuration .....	C-14
NVIDIA® SLI Multi GPU Configuration & Power .....	C-15
Manage 3D Settings .....	C-16
Adjust Video Settings .....	C-17
HDMI Audio Configuration .....	C-18
Audio Setup for HDMI .....	C-19
HDMI Notes .....	C-21
HDMI Video Configuration .....	C-21
HDCP Status .....	C-22
NVIDIA 3D Shutter Glasses Kit .....	C-23
Stereoscopic 3D Hardware Setup .....	C-24
Viewing Angles .....	C-25

## Preface

Set Up Stereoscopic 3D .....	C-26
------------------------------	------

### AMD Video Driver Controls

Video Driver Installation .....	D-1
Video (VGA) .....	D-1
Catalyst™ Control Center .....	D-2
Display Devices & Options .....	D-7
Configuring an External Display In the CCC.....	D-8
Configuring an External Display In Windows 7 .....	D-12
AMD CrossFireX™ Multi GPU Configuration .....	D-16
AMD CrossFireX™ Multi GPU Configuration & Power .....	D-17
HDMI Audio Configuration .....	D-18

### Specifications

Processor .....	E-2
Core Logic .....	E-2
Display .....	E-2
Memory .....	E-2
Video Adapter .....	E-2
BIOS .....	E-3
Storage .....	E-3
Audio .....	E-4
Keyboard & Pointing Device .....	E-4

Card Reader .....	E-4
Slots .....	E-4
Interface .....	E-4
Communication .....	E-4
Indicators .....	E-5
Security .....	E-5
Operating System .....	E-5
Design Feature .....	E-5
Power Management .....	E-5
Power .....	E-5
Environmental Spec .....	E-5
Physical Dimensions & Weight .....	E-5

## Windows 8

Overview .....	F-1
Windows 8 Start Screen & Desktop .....	F-2
Apps & Tiles .....	F-3
Accessing Pining/Unpinning All Apps .....	F-3
Desktop Application .....	F-4
Windows 8 Charms Bar .....	F-6
Charms Bar Items .....	F-7
Windows 8 Control Panel .....	F-8

## Preface

Windows 8 Taskbar .....	F-11
LED Indicators .....	F-12
Keyboard - Windows 8 .....	F-13
Keyboard Shortcuts .....	F-14
Function/Hot Key Indicators & Control Center .....	F-15
Video Features .....	F-16
To Configure Displays from Devices (Charms Bar): .....	F-16
Power Options .....	F-17
Shut Down, Restart or Sleep .....	F-17
Ctrl + Alt + Delete Key Combination .....	F-18
Wake On LAN Settings .....	F-19
Running Metro UI Apps .....	F-20
Screen Resolution Settings .....	F-20
User Account Control Settings .....	F-21
Drivers & Utilities .....	F-22
Driver Installation (Windows 8) .....	F-23
PC Camera (Windows 8) .....	F-25
Metro UI Camera App .....	F-26
Taking Pictures/Capturing Video .....	F-28
Wireless LAN Settings (Windows 8) .....	F-30
WLAN Configuration in Windows 8 .....	F-31
Charms Bar .....	F-31

Desktop Mode .....	F-34
Control Panel .....	F-35
Fingerprint Reader Module (Windows 8) .....	F-37
Protector Suite Fingerprint Reader Driver Installation (Windows 8) .....	F-38
BioExcess Fingerprint Reader Driver Installation (Windows 8) .....	F-38
Protector Suite Application (Windows 8) .....	F-39
Enabling the .NET Framework 3.5 in the Windows Control Panel .....	F-39
User Enrollment .....	F-41
Fingerprint Control Center Features .....	F-47
Application Launcher .....	F-47
E-Wallet .....	F-47
Personal Safe .....	F-47
Strong Password Generator .....	F-47
Bluetooth Settings (Windows 8) .....	F-48
Bluetooth Configuration in Windows 8 .....	F-49
Desktop Mode .....	F-49
Charms Bar .....	F-49
To Make your Computer Discoverable to Bluetooth Devices .....	F-52
RAID Setup (Windows 8) .....	F-53
SATA RAID Setup Procedure (Windows 8) .....	F-55
IRST Driver Installation .....	F-60
Deleting a RAID (Windows 8) .....	F-61




# Chapter 1: Quick Start Guide

## Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices (hard disk, optical device, Multi-In-1 card reader), Game Keys, TouchPad & Mouse & Audio Features.**
- **Chapter 3** The computer's **power** management options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** Instructions for **upgrading** your computer.
- **Chapter 7** A quick guide to the computer's **RAID, PC Camera, Wireless LAN, Fingerprint and Bluetooth & WLAN Combo** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 8** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface, ports/jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on the **Control Center.**
- **Appendix C** Information on the **NVIDIA** Video driver controls.
- **Appendix D** Information on the **AMD** Video driver controls.
- **Appendix E** The computer's **specification.**
- **Appendix F** Information on the *Windows 8* operating system.

## Advanced Users


If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *“Drivers & Utilities” on page 4 - 1*, *“BIOS Utilities” on page 5 - 1* and *“Upgrading The Computer” on page 6 - 1* in the User’s Manual. You may also find the notes marked with a  of interest to you.




### Notes

Check the light colored boxes with the mark above to find detailed information about the computer’s features.

## Beginners and Not-So-Advanced Users

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in this Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User’s Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a  as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *“Interface (Ports & Jacks)” on page A - 1*.

## Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the  symbol. Also please note the safety and handling instructions as indicated in the *Preface*.



## Model Differences

This notebook series includes **two** different model types (only **Model B** computers support 3D). Note that your model may appear slightly different from those pictured in this manual.

## Not Included

Operating Systems (e.g. *Windows 7*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals. For information on the *Windows 8* operating system see [Appendix F](#).



### Drivers

If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the appropriate drivers. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed in [Table 4 - 1, on page 4 - 3](#). You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you), refer to ["Drivers & Utilities" on page 4 - 1](#) for installation instructions.

### Ports and Jacks

See ["Ports and Jacks" on page A - 2](#) for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

## System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the *Windows 7 (with Service Pack 1 installed)* and *Windows 8 (64 bit)* operating systems are supported.

The majority of this menu covers information related to the *Windows 7* operating system, however for specific information on the *Windows 8* operating system see [Appendix F](#). The *Windows 8 .1* interface is slightly different in appearance and in methods of navigation, and a separate manual is provided on the *Device Drivers & Manual Disc* for **Windows 8.1**.

**Note:** In order to run *Windows 7 (SP1)* without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM).



### Windows 7/8 OS

In order to run *Windows 7 (32 Bit)* without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM), however if you are running *Windows 7 or Windows 8 (64 bit)* your computer requires a minimum **2GB** of system memory (RAM).

## RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS* (see [“Setting Up SATA RAID or AHCI Mode” on page 7 - 2](#)). See [“RAID Setup \(Windows 8\)” on page F - 53](#) for *Windows 8* RAID information.

## System Startup

1. Remove all packing materials, and place the computer on a stable surface.
2. Securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
3. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
4. Use one hand to raise the lid/LCD to a comfortable viewing angle (it is preferable not to exceed 135 degrees); use the other hand (as illustrated in **Figure 1 - 1** below) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
5. Raise the lid/LCD to a comfortable viewing angle, and press the power button.

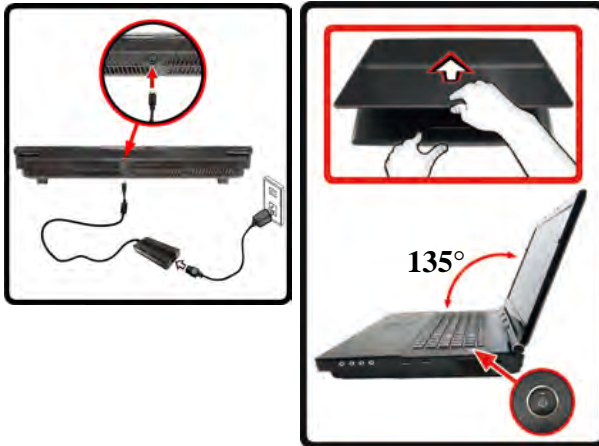


Figure 1 - 1 - Computer with AC/DC Adapter Plugged-In/Opening the Lid/LCD



### Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Start** menu in **Windows 7**. This will help prevent hard disk or system problems.



### NVIDIA® SLI or AMD™ CrossfireX Multi GPU Configuration & Power

Note that where **two video adapters** are installed in an **SLI** or a **Crossfire** configuration, **dual power adapters connected to a power converter box** are required to power the system (see pages **C - 15** & **D - 17**).

Single video adapter configurations only require a single power adapter.

Figure 1 - 2  
LCD Panel Open  
& Top View

1. Built-In PC Camera
2. Built-In Microphone
3. PC Camera LED
4. LCD
5. LED Status Indicators
6. Touch Sensor Instant Keys
7. Speakers
8. 3D IR Emitter  
(Model B Only)
9. Power Button
10. Keyboard
11. TouchPad and Buttons
12. Fingerprint Reader Module
13. LCD Panel Color LED



## System Map: LCD Panel Open & Top View



### Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN or Bluetooth) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF if you are using the computer aboard aircraft.

Use the appropriate function key combination to toggle power to any wireless modules, and check the indicators to see if any modules are powered on or not (see [Table 1 - 2, on page 1 - 9](#)).

### Speaker Note

Note that the speaker area **1** is covered by a protective mylar film on shipping. In order to prevent any impairment to audio quality, this film should be removed when the system is ready for use.



Figure 1 - 3 - Speaker Area

## LED Indicators

The two sets of LED indicators (**LED Status Indicators** and **LED Power Indicators**) display helpful information about the current status of the computer.


 







Icon	Color	Description	Icon	Color	Description
	Blinking Blue	HDD/ODD Activity		Orange	DC Power is Plugged In
	Blue	Number Lock is Activated 		Blinking Green	The Computer is In Sleep Mode
	Blue	Caps Lock is Activated 		Blinking Orange*	The Powered USB Port is On*
	Blue	Scroll Lock is Activated 		Orange	The Battery is Charging
				Blinking Orange	The Battery has Reached Critically Low Power Status
				Green	The Battery is Fully Charged

Table 1 - 1 - LED Status Indicators

**\*Note:** The powered USB 3.0/e-SATA port (see [Figure 1 - 8 on page 1 - 18](#)) may be toggled on /off by means of the **Fn + Power Button** key combination (**press for around 1 to 2 seconds** to toggle). When the powered USB port is on it will supply power (**for charging devices only, not for operating devices**) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page [8 - 13](#)).

# Touch Sensor Instant Keys

Press the Touch Sensor Instant Keys on the computer to toggle the appropriate function on/off. When a module is powered on the appropriate icon will be highlighted blue.







Icon	Description
	 <p>Mute Toggle</p>
	<p>Bluetooth Module (<b>optional</b>) Power Toggle  <i>Win 8 - Indicates the (optional) Bluetooth Module is Installed (this is not a power on/off indicator in Windows 8)</i></p>
	<p>Wireless LAN Module (<b>optional</b>) Power Toggle  <i>Win 8 - Indicates the (optional) WLAN Module is Installed (this is not a power on/off indicator in Windows 8)</i></p>
	<p>PC Camera Module Power Toggle</p>
	<p>Volume Control (Press and hold your finger at either end <b>V-</b> / <b>V+</b> of the volume control to adjust the system volume)</p>

Table 1 - 2 - Touch Sensor Instant Keys

Note that you can also use the function key combinations for all of the functions above (see page [1 - 13](#)).



### Other Keyboards

If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

### Num Lk & Scr Lk

Hold down the **Fn Key** and **Scr Lk/Num Lk** to enable scroll lock/number lock, and check the LED indicator for status.

## Keyboard

The keyboard has an embedded numerical keypad for easy numeric data input, and features function keys to allow you to change operational features instantly. See *Table 1 - 5, on page 1 - 14* for full function key combination details.



Figure 1 - 4 - Keyboard









### Special Characters

Some software applications allow the number-keys to be used with **Alt** to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that **NumLk** is on.



## Keyboard LED

Press **Fn** plus the  **2** key to toggle the keyboard LED on/off. The keyboard LED may be configured using the **Fn + key combination** outlined in the table below. In addition press **Fn** plus the  **1** key to launch the keyboard backlight application to configure the settings (see overleaf).

Keyboard LED Function key Combinations	
Fn + 	<b>1</b> Launch the Keyboard Backlight Application
Fn + 	<b>2</b> Toggle the Keyboard Backlight On/Off
Fn + 	<b>3</b> Keyboard LED Illumination Decrease (for <b>Custom Mode</b> only - see <a href="#">Table 1 - 4, on page 1 - 13</a> )
Fn + 	<b>4</b> Keyboard LED Illumination Increase (for <b>Custom Mode</b> only - see <a href="#">Table 1 - 4, on page 1 - 13</a> )

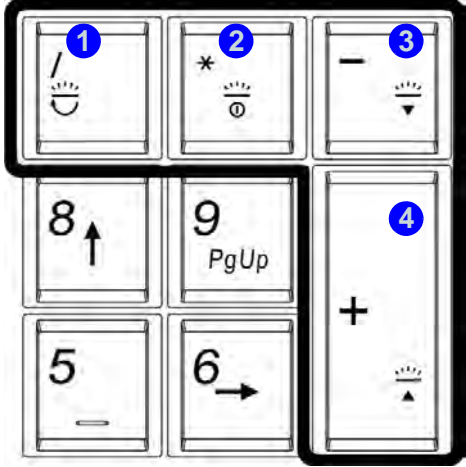





Table 1 - 3 - Keyboard LEDs

## Quick Start Guide

### Keyboard Backlight Application

The **keyboard Backlight application** can be accessed by pressing the **Fn** plus  key. Click the **Help** button  in the application to display the configuration keys.

- Click the **Custom** button  to display the three sections of the keyboard which may be configured.
- Click a section of the keyboard and the color buttons will be displayed.
- Click a **color swatch** to apply the color to the selected section when not overridden by any effect applied.
- Click on any of the effect buttons to apply random colors, wave or flashing effects etc (see over).

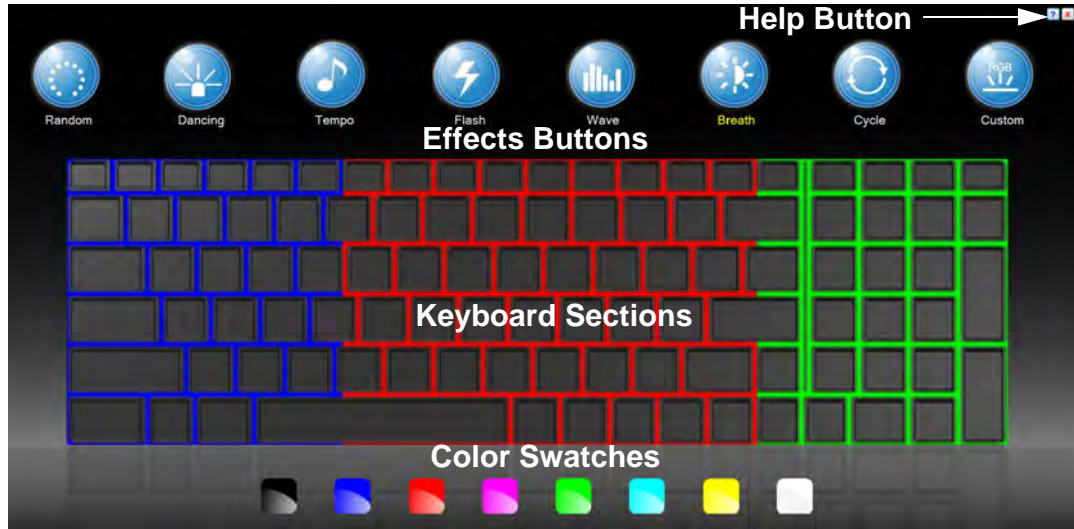


Figure 1 - 5 - Keyboard Backlight Application

## Effects Buttons &amp; Help










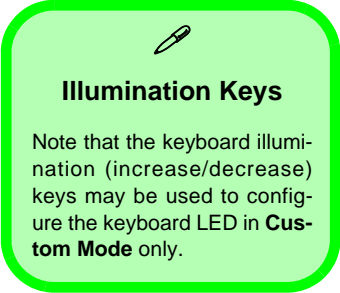
LED Effects Buttons			
	Random Color		Up/Down Wave
	Dancing Effect		Breathing (All Colors)
	Tempo Beat		Cycle (Colors as Selected in RGB)
	Flashing		<b>Custom Mode</b> - Display & Configure Keyboard Sections & Colors
			

Table 1 - 4 - LED Effects Buttons &amp; Help

## Quick Start Guide

### Function Keys & Visual Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. Visual indicators (see the table below) are available when the Hot Key driver is installed (see *“Hot Key” on page 4 - 7*).










Keys	Function/Visual Indicators		Keys	Function/Visual Indicators	
Fn + ~	Play/Pause (in Audio/Video Programs)		Fn + Esc	<b>Control Center</b> Toggle (see over)	
Fn + F1	Touchpad Toggle		Fn + F8/F9	Brightness Decrease/Increase	
Fn + F2	Turn LCD Backlight Off (Press a key to or use Touchpad to turn on)		Fn + F10	PC Camera Power Toggle	
Fn + F3	Mute Toggle		Fn + F11	WLAN Module Power Toggle	
Fn + F4	Sleep Toggle		Fn + F12	Bluetooth Module Power Toggle	
Fn + F5/F6	Volume Decrease/ Increase		Fn + <b>Power Button</b>	Powered USB 3.0 Port Power Toggle (press for around 1 to 2 seconds to toggle)	
Fn + F7	Display Toggle (see pages <a href="#">C - 13</a> & <a href="#">D - 14</a> )		Fn + 	Keyboard LED Toggle (see page <a href="#">1 - 11</a> )	
Fn + 1	Fan Control Toggle - Toggle between Auto- matic Fan Control / Full Power		Fn + 5	Audio Toggle - Toggle between Stereo and 5.1 Surround Sound Modes (see page <a href="#">2 - 12</a> )	

Table 1 - 5 - Function Keys & Visual Indicators

## 1 - 14 Keyboard LED

## Control Center

Press the **Fn + Esc** key combination, or **double-click the icon**  in the **notification area of the taskbar** to toggle the **Control Center** on/off. The **Control Center** gives quick access to frequently used controls and enables you to quickly turn modules on/off. The **Control Center** in **Windows 8** works under the **Desktop** app and not under the Start screen, and does not feature the wireless/Bluetooth buttons and Airplane Mode etc., (see page **F - 8** for **Windows 8** information).



### Control Center

Click on any button to turn any of the **modules** (e.g. **TouchPad**, **Camera**) on/off.

Click on the power conservation modes to switch between **Performance**, **Balanced** or **Energy Star** modes (see page **3 - 10**). To remove the Power Conservation Modes screen just click in a blank area of the icon or press a key on the keyboard.

Click on the buttons (or just click and hold the mouse button) to adjust the slider for **Brightness/Volume**.

Click on **Display Switch** and click to choose a display mode from the menu (see page **C - 13**).

Click on **K/B LED** to turn the keyboard LED on/off.




Table 1 - 6 - Control Center

Figure 1 - 6  
Front & Rear Views

1. LED Power Indicators
2. Express Card Slot
3. Multi-In-1 Card Reader
4. DC-In Jack

See [Appendix A](#) for a more detailed description of the ports & jacks etc.

## System Map: Front & Rear Views

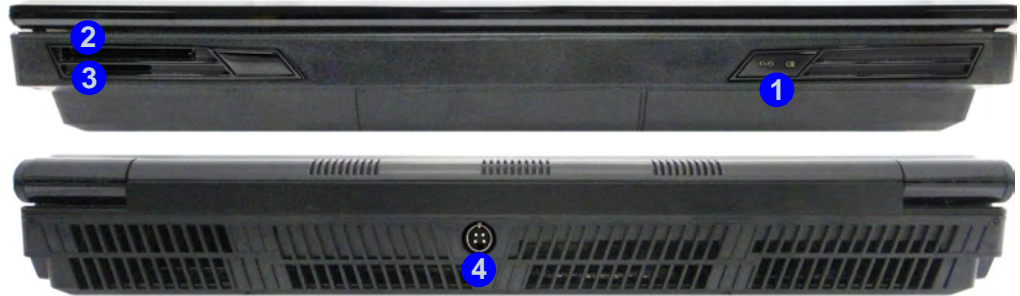

### ExpressCard Slot

The ExpressCard Slot accepts either **ExpressCard/34** or **ExpressCard/54** formats.

### Multi-in-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / RSMC  
SD (Secure Digital) / Mini SD / SDHC / SDXC  
MS (Memory Stick) / MS Pro / MS Duo

## System Map: Right View



### USB Ports

Note that the connections to the USB ports only fit one way, do not force them. USB 3.0 ports are denoted by their blue color; USB 2.0 ports are colored black.

*Figure 1 - 7*  
**Right View**

1. Line-In Jack
2. S/PDIF-Out Jack
3. Microphone-In Jack
4. Headphone-Out Jack
5. 2 \* USB 2.0 Ports
6. Sub Woofer
7. Security Lock Slot

See [Appendix A](#) for a more detailed description of the ports & jacks etc.

Figure 1 - 8  
Left View

1. DVI-Out Port
2. RJ-45 LAN Jack
3. HDMI-Out Port
4. Display Port
5. 2 \* USB 3.0 Ports
6. Combined eSATA/  
Powered USB 3.0  
Port
7. Mini-IEEE 1394b  
Port
8. Optical Device  
Drive Bay

See [Appendix A](#) for a more detailed description of the ports & jacks etc.



#### Mini-IEEE 1394b Port

The Mini-IEEE 1394 port only supports **SELF POWERED** IEEE 1394 devices.

## System Map: Left View



#### HDMI Port

Note that the HDMI Port supports video and audio signals to attached external displays (also see [“HDMI Audio Configuration” on page C - 18](#)). Note that Sound Blaster Audio will be disabled when you are connecting to an external display through an HDMI connection (see page [7 - 110](#)).

#### USB 3.0 Ports & USB Port Power

USB 3.0 ports are denoted by their blue color; USB 2.0 ports are colored black. Note that the USB 3.0 port requires a driver installation (see [“USB 3.0” on page 4 - 7](#)) and is not operational under DOS.

The powered USB 3.0 **6**/e-SATA port can supply power (**for charging devices only, not for operating devices**) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page [8 - 12](#)). Toggle power to this port by using **Fn + power button** (press for around **1 to 2 seconds** to toggle).





### Disk Eject Warning

Don't try to eject a CD/DVD while the system is accessing it. This may cause the system to "crash". Stop the disk first then eject it, or press the stop button twice.

### CD/DVD Emergency Eject

If you need to manually eject a CD/DVD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. Do not use a sharpened pencil or any object that may break and become lodged in the hole. Don't try to remove a floppy disk/CD/DVD while the system is accessing it. This may cause the system to "crash".



### Changing DVD Regional Codes


Go to the **Control Panel** and double-click **Device Manager (Hardware and Sound)**, then click the **+** next to **DVD/CD-ROM drives**. Double-click on the DVD-ROM device to bring up the **Properties** dialog box, and select the **DVD Region** (tab) to bring up the control panel to allow you to adjust the regional code.

DVD region detection is device dependent, not OS-dependent. You can select your module's region code **5** times. The fifth selection is permanent. This cannot be altered even if you change your operating system or you use the module in another computer.

Figure 1 - 9  
Bottom View

## System Map: Bottom View

1. Fan Outlet/Intake
2. Component Bay Cover
3. Battery (HDD Bay located under the battery)
4. HDD Bay

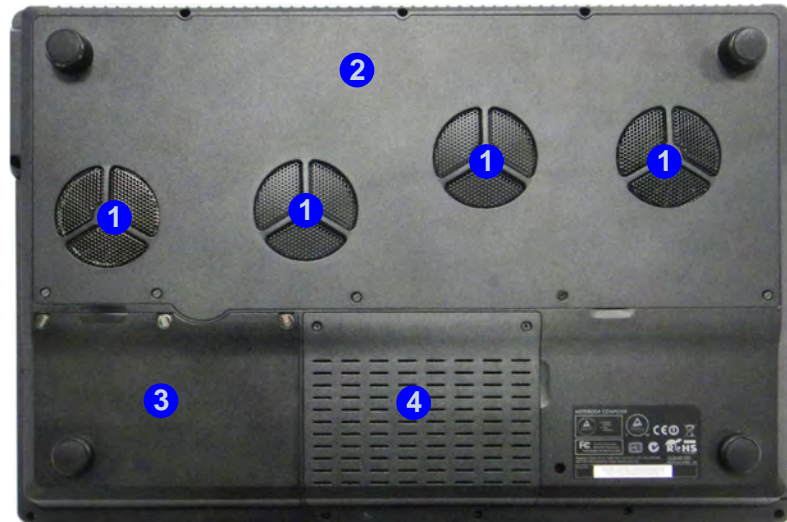

### Overheating


To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.



### Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***"Battery Information" on page 3 - 11*** for full instructions.

## Windows 7 Start Menu & Control Panel

Most of the control panels, utilities and programs within *Windows 7* are accessed from the **Start** menu (see [Appendix F](#) for information on the **Windows 8** OS). When you install programs and utilities they will be installed on your hard disk drive, and a shortcut will usually be placed in the **Start** menu and/or the desktop. Right-click the **Start menu** icon , and then select **Properties** if you want to customize the appearance of the **Start** menu.

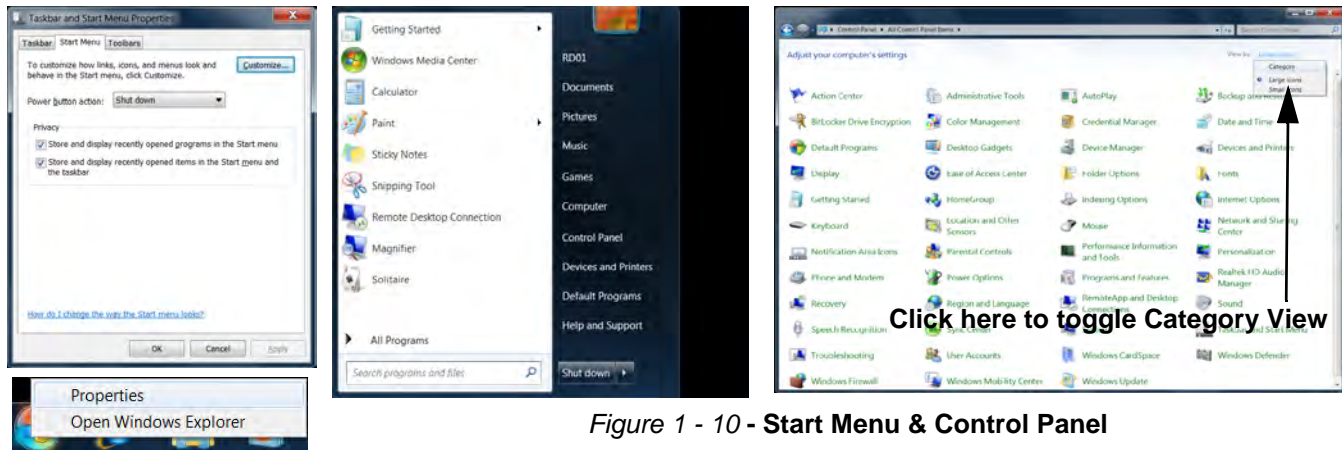


Figure 1 - 10 - Start Menu & Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The **Control Panel** is accessed from the **Start** menu, and it allows you to configure the settings for most of the key features in *Windows* (e.g. power, video, network, audio etc.). *Windows 7* provides basic controls for many of the features, however many new controls are added (or existing ones are enhanced) when you install the drivers. To see all controls it may be necessary to toggle off *Category View* to view the control panel icons.

## Video Features

This computer features two different (either **AMD** or **NVIDIA**) video options. You can switch display devices, and configure display options, from the **Display** control panel (in **Appearances and Personalization**) in *Windows 7* (see *“Video Features” on page F - 16* for information on the **Windows 8 OS**).

To access **Display (Control Panel)** and **Screen Resolution** in *Windows*:

1. Click **Start** and click **Control Panel**.
2. Click **Display** (icon) - In the **Appearances and Personalization** category.
3. Click **Adjust Screen Resolution/Adjust resolution**.

**OR**

4. Alternatively you can right-click the desktop and select **Screen resolution** ❶ (*Figure 1 - 11 on page 1 - 23*).
5. Use the dropbox to select the screen **Resolution** ❷ (*Figure 1 - 11 on page 1 - 23*).



### NVIDIA/AMD Video Driver Controls

More detailed video controls are provided by the **NVIDIA Control Panel** or **Catalyst Control Center**. For more detailed information see *“NVIDIA Control Panel” on page 1 - 24/“Catalyst Control Center” on page 1 - 25* and **Appendix C** or **Appendix C**.

You can also access the control panels by right-clicking the desktop and selecting **NVIDIA Control Panel/Catalyst (TM) Control Center** (*Figure 1 - 12 on page 1 - 24/Figure 1 - 13 on page 1 - 25*).

# Screen Resolution

**Video Options**

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.

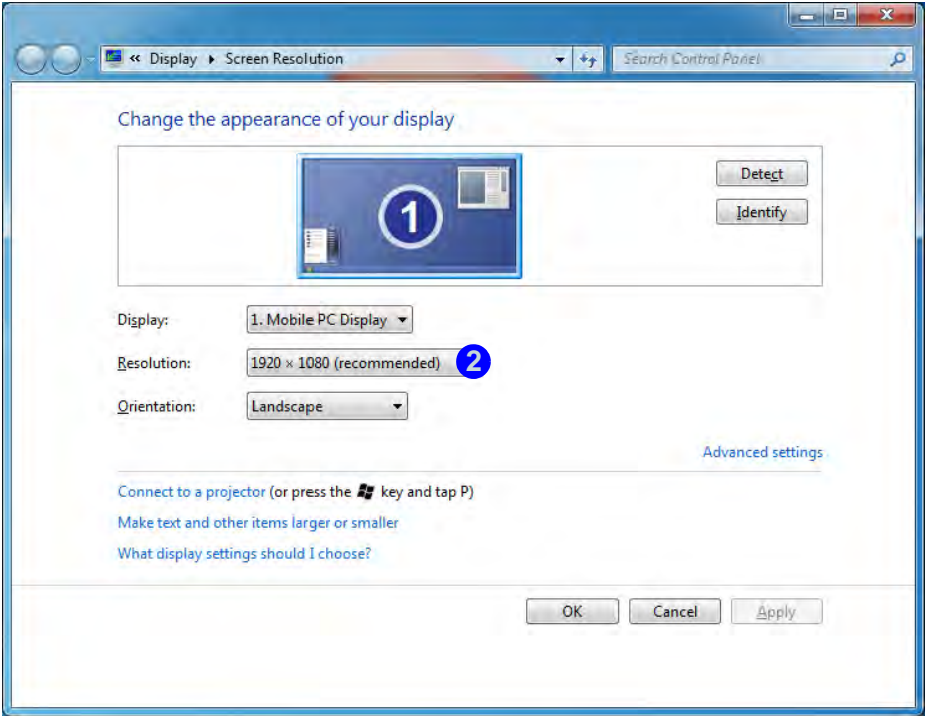


Figure 1 - 11 - Screen Resolution

## Quick Start Guide

### NVIDIA Control Panel

You can access the **NVIDIA Control Panel** as follows:

1. Click **Start**, and click **Control Panel**.
2. Click **NVIDIA Control Panel** **1** (Figure 1 - 12) - In the **Appearance and Personalization** category.
3. See **"NVIDIA Video Driver Controls" on page B - 1** for full details on control panels etc.  
**OR**
4. You can also access the control panel by right-clicking the desktop and selecting **NVIDIA Control Panel** **2**.

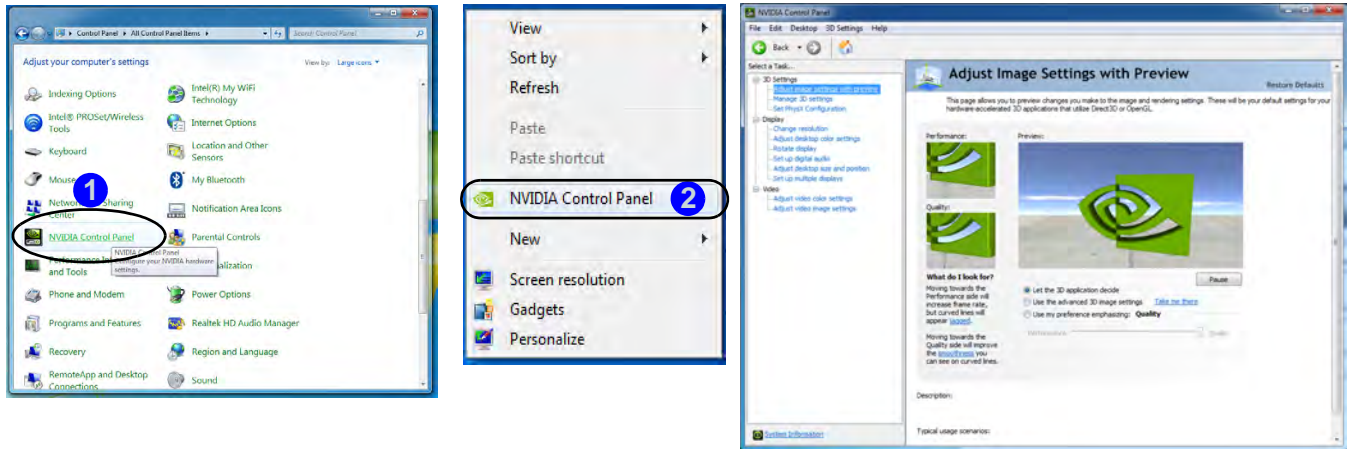


Figure 1 - 12 - NVIDIA Control Panel

## Catalyst Control Center

You can access the **Catalyst™ Control Center** as follows:

1. Right-click the desktop and select **Catalyst Control Center** ① (*Figure 1 - 13*).  
**OR**
2. Double-click (or right-click the icon and select **Catalyst Control Center**) the icon ② (*Figure 1 - 13*) in the **Windows** system tray notification area (make sure “**Enable System Tray Menu**” is clicked in **Preferences**).
3. See “**AMD Video Driver Controls**” on page **D - 1** for full details on control panels etc.

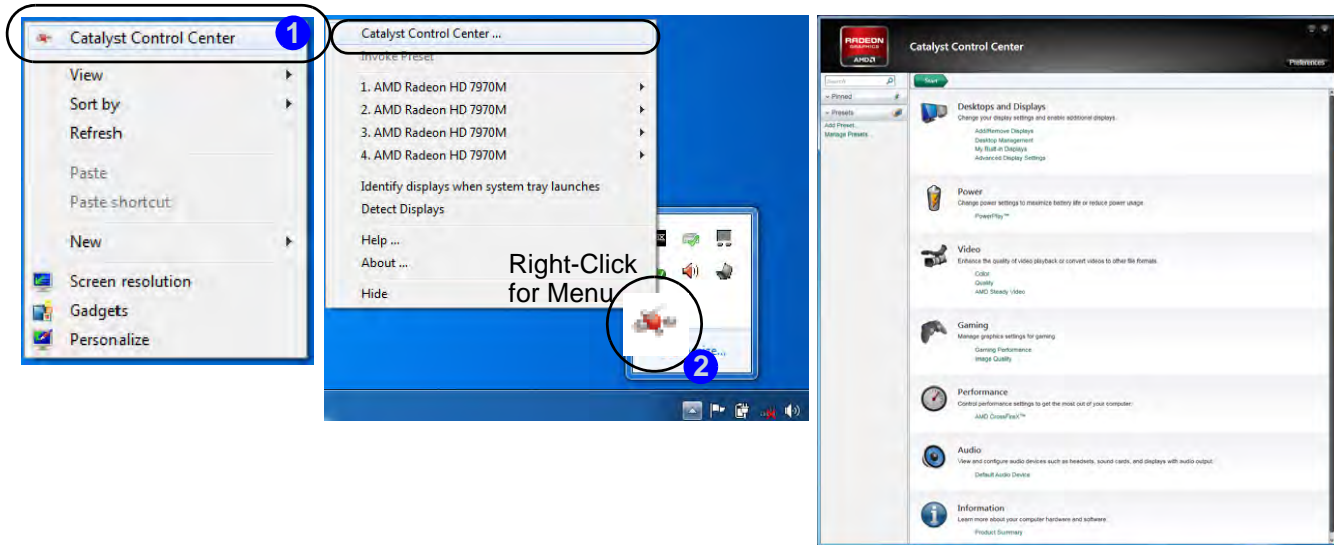


Figure 1 - 13 - Catalyst Control Center Access



## Power Options

The **Power Options** (**Hardware and Sound** menu) control panel icon in *Windows* (see page *1 - 21* or page *1 - 21* or see *Appendix F* for information on the **Windows 8** OS) allows you to configure power management features for your computer. You can conserve power by means of **power plans** and configure the options for the **power button**, **sleep button**, **computer lid (when closed)**, **display** and **sleep** mode from the left menu. Note that the **Power saver** plan may have an affect on computer performance.

Click to select one of the existing plans, or click *Create a power plan* in the left menu and select the options to create a new plan. Click *Change plan settings* and click *Change advanced power settings* to access further configuration options. Pay attention to the instructions on battery care in *“Power Conservation Modes” on page 3 - 10*.

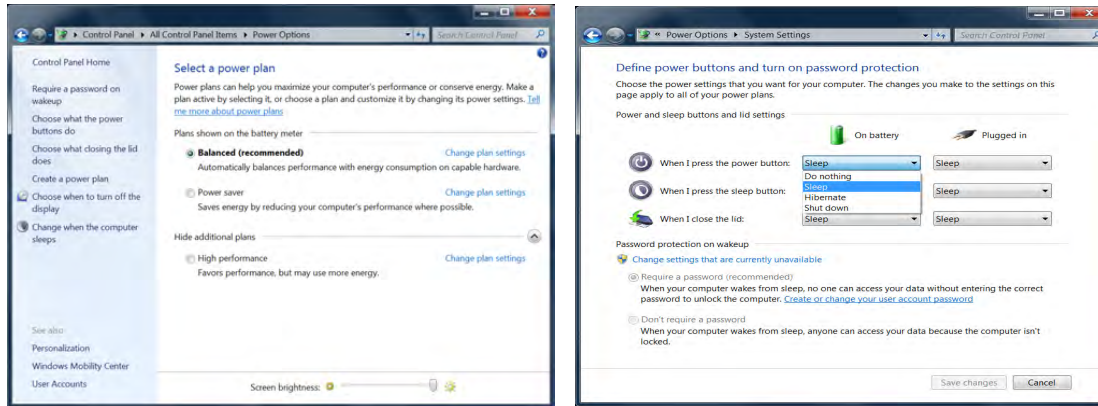


Figure 1 - 14 - Power Options



# Chapter 2: Storage Devices, Mouse & Audio

## Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive
- Optical Device
- Multi-In-1 Card Reader
- ExpressCard Slot
- Audio Features
- TouchPad and Buttons/Mouse

For information on the *Windows 8* operating system see [Appendix F](#).



### Power Safety

Before attempting to access any of the internal components of your computer please ensure that the machine is not connected to the AC power, and that the machine is turned off. Also ensure that all peripheral cables, including phone lines, are disconnected from the computer.

## Hard Disk Drive

The hard disk drive(s) is(are) used to store your data in the computer. The hard disk(s) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5 mm. The primary hard disk bay ① is accessible from the bottom of your computer as seen below.

The computer can accommodate up to three hard disks (two in the primary bay, and one under the battery ②), and these may be configured in **RAID**, **AHCI** or **IDE** modes. Further details on removing and inserting the hard disk are available in *“Upgrading the Hard Disk Drive(s)” on page 6 - 6* and.

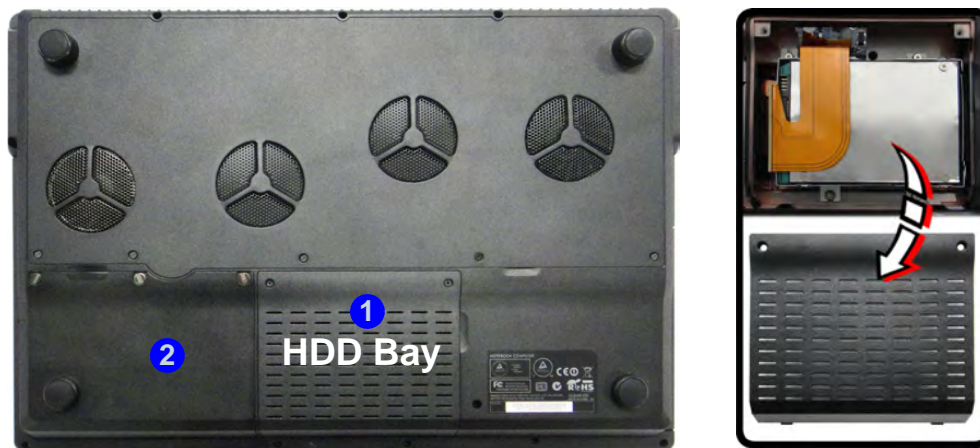



Figure 2 - 1  
Hard Disk Bay

## Optical Device

There is a bay for a 5.25" optical (CD/DVD) device (12.7mm height). The actual device will depend on the model you purchased (see “*Storage*” on page E - 3). The optical device is usually labeled “**Drive D:**” and may be used as a boot device if properly set in the **BIOS** (see “*Boot Menu*” on page 5 - 16).

### Loading Discs

To insert a CD/DVD, press the open button ❶ and carefully place a CD/DVD onto the disc tray with label-side facing up (use just enough force for the disc to click onto the tray’s spindle). Gently push the CD/DVD tray in until its lock “clicks” and you are ready to start. The busy indicator ❷ will light up while data is being accessed, or while an audio/video CD, or DVD, is playing. If power is unexpectedly interrupted, insert an object such as a straightened paper clip into the emergency eject hole ❸ to open the tray.

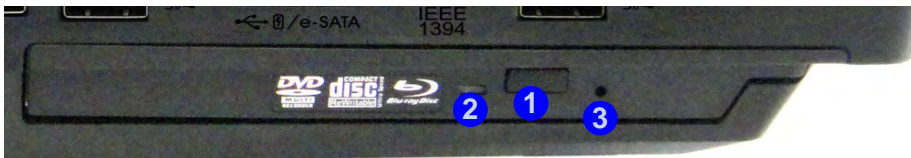

### Sound Volume Adjustment

How high the sound volume can be set depends on the setting of the volume control within **Windows**. Click the **Volume** icon on the taskbar to check the setting.

Peripherals must be connected before you turn on the system.

Figure 2 - 2  
Optical Device



### CD Emergency Eject

If you need to manually eject a CD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. However please do NOT use a sharpened pencil or similar object that may break and become lodged in the hole.

### Disk Eject Warning

Don't try to remove a CD/DVD while the system is accessing it. This may cause the system to "crash".

## Handling CDs or DVDs

Proper handling of your CDs/DVDs will prevent them from being damaged. Please follow the advice below to make sure that the data stored on your CDs/DVDs can be accessed.

Note the following:

- Hold the CD or DVD by the edges; do not touch the surface of the disc.
- Use a clean, soft, dry cloth to remove dust or fingerprints.
- Do not write on the surface with a pen.
- Do not attach paper or other materials to the surface of the disc.
- Do not store or place the CD or DVD in high-temperature areas.
- Do not use benzene, thinner, or other cleaners to clean the CD or DVD.
- Do not bend the CD or DVD.
- Do not drop or subject the CD or DVD to shock.

## DVD Regional Codes

To change the DVD regional codes see *“Changing DVD Regional Codes”* on page 1 - 19.

DVD Regional Coding	
Region	Geographical Location
1	USA, Canada
2	Western Europe, Japan, South Africa, Middle East & Egypt
3	South-East Asia, Taiwan, South Korea, The Philippines, Indonesia, Hong Kong
4	South & Central America, Mexico, Australia, New Zealand
5	N Korea, Russia, Eastern Europe, India & Most of Africa
6	China

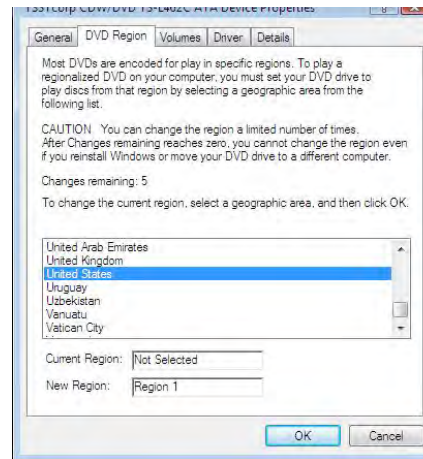


Table 2 - 1  
DVD Regional Coding



### Card Reader Cover

Make sure you keep the cover in the card reader when not in use. This will help prevent foreign objects and/or dust getting in to the card reader.

## Multi-In-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the Card Reader driver (see *“Card Reader” on page 4 - 8*).

- MMC (MultiMedia Card) / RSMMC
- SD (Secure Digital) / Mini SD / SDHC / SDXC
- MS (Memory Stick) / MS Pro / MS Duo

PC adapters may be required for some of these cards and are usually supplied with them.

*Figure 2 - 3*  
**Right View**

1. Card Reader



## ExpressCard Slot

The computer is equipped with an **ExpressCard/34/54** slot that reads Express Card/34 and ExpressCard/54 formats. ExpressCards are the successors to PCMCIA (PC Cards).

ExpressCard/54 is used for applications which require a larger interface slot, e.g. CompactFlash card reader. The number denotes the card width; 54mm for the Express Card/54 and 34mm for the ExpressCard/34. Make sure you install the ExpressCard driver (see *“Card Reader/ExpressCard” on page 4 - 6*).

### Inserting and Removing ExpressCards

- Align the ExpressCard with the slot and push it in until it locks into place.
- To remove an ExpressCard, simply press the card to eject it.



#### ExpressCard Slot Cover

Make sure you keep the cover in the ExpressCard slot when not in use. This will help prevent foreign objects and/or dust getting in to the ExpressCard Slot.

*Figure 2 - 4*  
**Express Card Slot**

1. ExpressCard Slot



### Volume Adjustment

The sound volume level is set using the volume control within **Windows** (and the volume function keys on the computer). Click the volume icon in the notification area to check the setting.

### Headphone Configuration

It is recommended that you set the **Speaker Configuration** to **Stereo** (not to 5.1 or 7.1 Speaker) when listening through headphones in order to maximize audio quality.


Figure 2 - 5  
Realtek Audio Manager

## Audio Features

You can configure the audio options on your computer from the **Sound** control panel in **Windows**, or from the **Realtek HD Audio Manager** icon in the notification area/control panel (right-click the taskbar notification area icon to bring up an audio menu). The volume may also be adjusted by means of the **Fn + F5/F6** key combination (see [Table 1 - 5, on page 1 - 14](#)).



Right-click the icon to access the menu above.

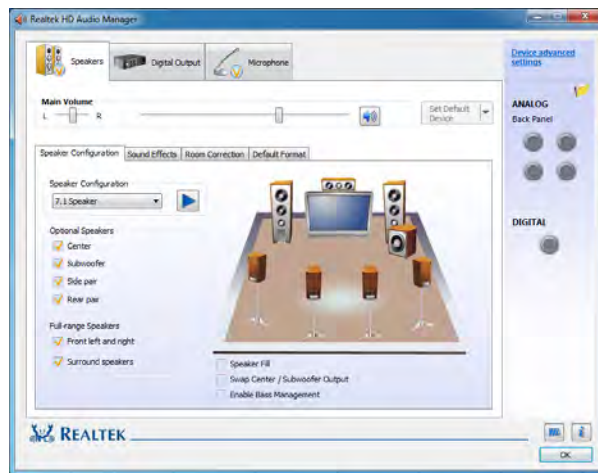


See [“HDMI Audio Configuration” on page C - 18](#) for a description of the audio configuration when connecting an HDMI supported display device.  
See [“Sound Blaster Audio” on page 7 - 89](#) for further audio information.




## Setup for 5.1 or 7.1 Surround Sound

To setup your system for 5.1 or 7.1 surround sound you will need to connect the audio cables to the Headphone-Out, Line-In, Microphone-In jack and S/PDIF-Out jacks (*note: the S/PDIF jack is used for 7.1 surround sound only*).

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the notification area icon  and select **Sound Manager**).
3. Click **Speakers** (tab) and click **Speaker Configuration** (tab).
4. Select **5.1 or 7.1 Speaker** from the **Speaker Configuration** pull-down menu.



### Auto Popup Dialog

You should enable the auto popup dialog to automatically detect when a device has been plugged-in. If disabled, double-click **connector settings**  and click the box to enable the auto popup detection of plugged-in devices.



### Sound Blaster Audio & HDMI

Note that the Sound Blaster audio effects **do not apply** to audio generated through an HDMI connection (see page 7 - 97).

#### Fn + 5 Audio Toggle

The **Fn + 5** key combination allows you to toggle the audio system between stereo and surround modes. The stereo mode will allow for a louder audio volume.

Note that if you have stereo mode enabled, and attempt to demo the speaker configuration, then the sound will only be enabled through the front and rear speakers (see page 2 - 12).

Figure 2 - 6  
Speaker  
Configuration (7.1)

5. Plug the **front speaker** cables into the **Headphone-Out Jack**.
6. Plug in the other cables (you may require an adapter to connect each cable to the appropriate jack e.g a stereo mini to dual RCA adapter) from your speakers as follows:
  - Line-In Jack = Rear Speaker Out
  - Microphone-In Jack = Center/Subwoofer Speaker Out
  - S/PDIF-Out Jack = Side Speaker Out (**for 7.1 Surround Sound Only**)
7. As you plug in each cable a dialog box will pop up (see **“Auto Popup Dialog” on page 2 - 9**).
8. Click to put a tick in the appropriate box according to the speaker plugged-in (e.g. Rear Speaker Out), and then click **OK** to save the setting.
9. Click **OK** to exit **Realtek HD Audio Manager**.




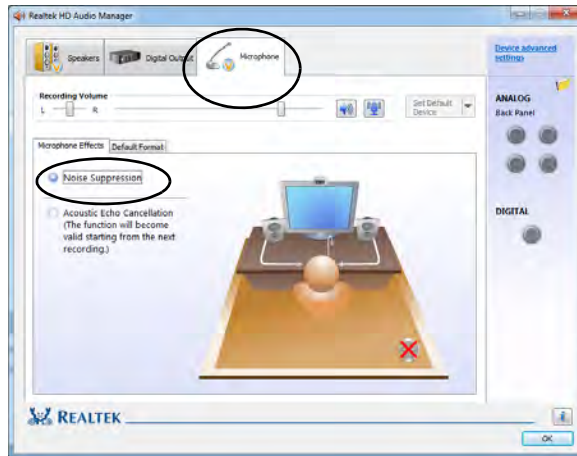
**Note: Side Speaker Out is required for 7.1 Surround only.**

*Figure 2 - 7*  
**Connected Device  
Auto Popup**

## Setup for Audio Recording

To record audio sources on your computer at optimum quality follow the instructions below:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the taskbar icon  and select **Sound Manager**).
3. Click **Microphone Effects** (tab) in **Microphone** (tab), and then click to select **Noise Suppression** (button), or adjust the **Recording Volume** level to around **60**, to obtain the optimum recording quality.
4. Click **OK** to close the control panel and save the settings.



*Figure 2 - 8*  
**Realtek Audio  
Manager -  
Recording Setup**

### Audio Notes for Fn + 5


This computer features an **Fn +5** key combination to **toggle** between standard audio and enhanced audio. Note the following which applies to **software mode audio configuration through the computer's internal speakers only** (this does not apply to surround sound when configured through external Quadraphonic, 5.1 or 7.1 speaker systems):


- When the **Speaker Configuration** in **Realtek HD Audio Manager** is set to **Stereo**, you can use the **Fn + 5** key combination to help increase the volume through the speakers.
- When the **Speaker Configuration** in **Realtek HD Audio Manager** is set to **5.1/7.1 Speaker**, the best audio configuration will be obtained with the combination of the **Speaker Configuration** set to **Quadraphonic/5.1/7.1 Speaker**, and the **Sound Blaster AP** turned **ON**.

Note that the **Fn + 5** key combination is a toggle so you will need to press the key combination to test if the affect is applied or not.

## TouchPad and Buttons/Mouse

The TouchPad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The TouchPad buttons function in much the same way as a two-button mouse.

Once you have installed the TouchPad driver (see *“TouchPad” on page 4 - 8*) you can configure the functions from the Mouse control panel in *Windows*, or by double-clicking the TouchPad driver icon  in the notification area of the **taskbar**. You may then configure the TouchPad tapping, buttons, scrolling, pointer motion and sensitivity options to your preferences. Use the **Fn + F1** key combination to toggle the TouchPad on/off.

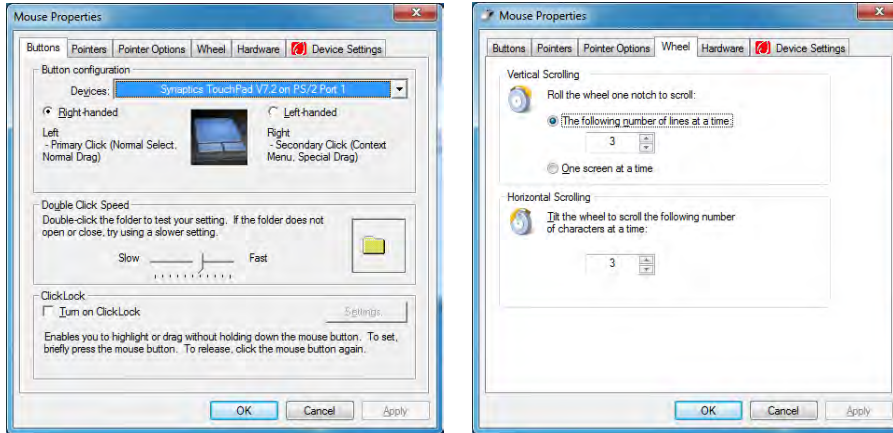

### TouchPad Scrolling

This computer model series may feature different TouchPad versions.

These TouchPads may differ in their vertical scrolling function in most scrollable windows.

Some TouchPads require sliding the finger up and down on the right of the TouchPad to scroll the window. Other versions require tapping/holding down the finger at the top right or bottom right of the TouchPad to scroll the window.

*Figure 2 - 9*  
**Mouse Properties**



### Show Video

You can get a clearer view of the gestures involved by clicking the **Show Video** option for each gesture item.

Select the gesture (**Pinch Zoom, Rotating, Three Fingers Down and Three Finger Flick**) in the **Device Settings > Settings** left tree menu and click the **Show Video** button to see the demonstration video.

For more details on any of the gestures see the **help** in the lower part of the right menu window.


*Figure 2 - 10*  
**Mouse Properties - Device Settings**

## Gestures and Device Settings

The Synaptics Gestures Suite application allows you to use a specific gesture (action) on the surface of the Touchpad to perform specific actions to manipulate documents, objects and applications.

You can configure the settings from the Device Settings tab in **Mouse Properties**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Mouse (Hardware and Sound)**.
3. Click **Device Settings** (tab) and click **Settings**.
4. Use the menu tree on the left to access the user configurable settings.

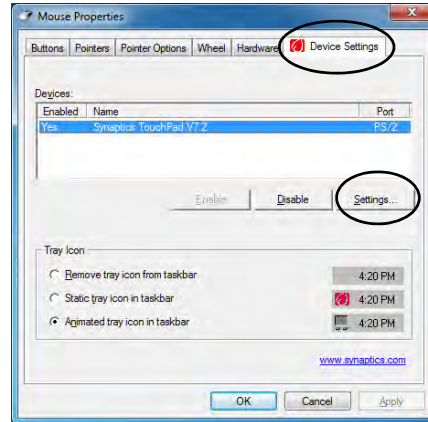

## Smart Sense

The Smart Sense feature helps prevent operating the Touchpad by accident, by recognizing when your palm is resting on it or brushing its surface while you are typing. You can adjust the sensitivity of Smart Sense by moving the slider towards **Max** (to help remove undesired pointer movement or clicks) or **Off** (if it misses intended motions or taps).

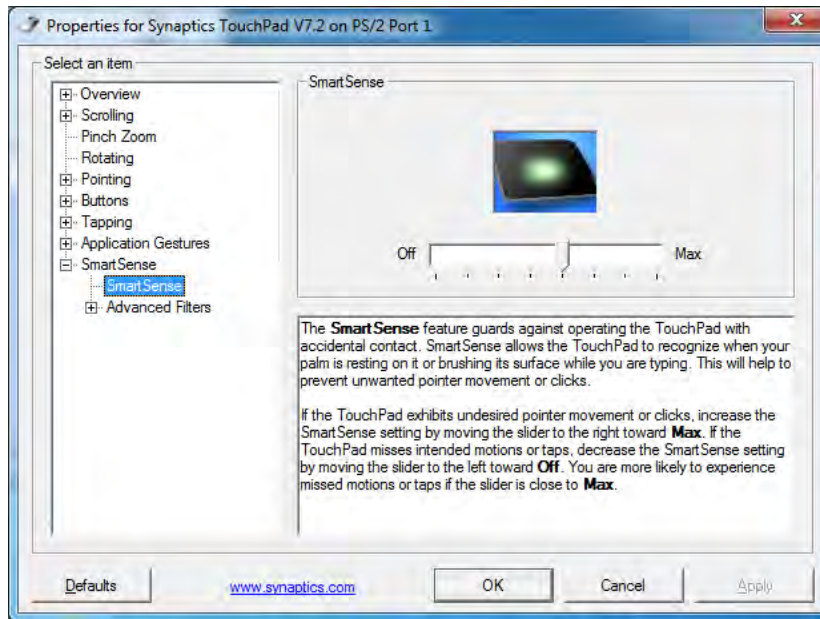


Figure 2 - 11  
SmartSense

*Figure 2 - 12*  
**Scrolling Gesture**



### Mouse Driver

If you are using an external mouse your operating system may be able to auto-configure your mouse during its installation or only enable its basic functions. Be sure to check the device's user documentation for details.

*Figure 2 - 13*  
**Zooming Gesture**

### Scrolling

The Two-Finger scrolling feature works in most scrollable windows and allows you to scroll horizontally and vertically. Place two fingers, slightly separated, on the TouchPad surface and slide both fingers in the direction required (in a straight continuous motion).



### Zooming

The Pinch Zoom gesture can be used to perform the same function as a scroll wheel in *Windows* applications that support CTRL + scroll wheel zoom functionality. Place two fingers on the TouchPad (for best results use the tips of the fingers) and slide them apart to zoom in, or closer together to zoom out.





## Rotating


Use the Pivot Rotate gesture to rotate objects (e.g. photos) in 90 degree increments. Place a finger down on the left “target” zone and keep it stationary. Place another finger near the middle of the TouchPad and slide it in a circular motion around the stationary finger (clockwise or counterclockwise) to rotate the object.



*Figure 2 - 14*  
**Rotating Gesture**

## Three Finger-Flick/Three Fingers Down (Press)

The Three Finger-Flick gesture may be used to enhance navigation with a variety of applications such as browsing the Internet or scrolling through a photo viewer. The Three Fingers Down gesture may be used to launch user-selectable applications.

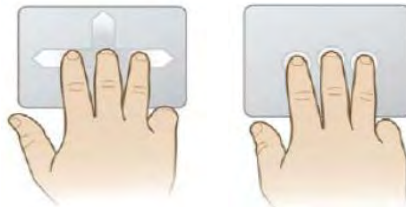

*Figure 2 - 15*  
**Flick/Press**  
**Gesture**



# Chapter 3: Power Management

## Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the LCD and hard disk drive) or the whole system.

This chapter covers:

- The Power Sources
- Turning On the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Power Conservation Modes
- Multi GPU Configuration & Power

For information on the *Windows 8* operating system see [Appendix F](#).

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.



### OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.

(**Note:** All pictures used on the following pages are from the *Windows 7* OS.)

# The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

## AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components (see page [E - 5](#)).

1. Attach the AC/DC adapter to the DC-In jack at the rear of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn “On”.

## Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *“How do I completely discharge the battery?” on page 3 - 15*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *“Power Conservation Modes” on page 3 - 10*.


# Turning On the Computer

Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options** in the *Windows* control panel to configure this feature.

## Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the bottom right of the **Start** menu in *Windows*. This will help prevent hard disk or system problems.

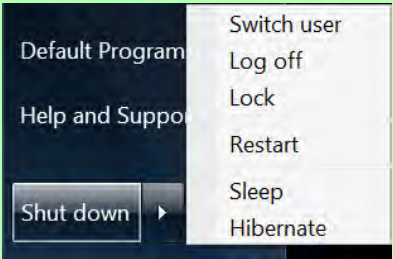

### Forced Off

If the system “hangs”, and the **Ctrl + Alt + Del** key combination doesn’t work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

### Power Button as Stand by or Hibernate Button

You can use the OS’s **Power Options** control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS’s documentation, or *“Configuring the Power Buttons” on page 3 - 8* for details).

### Resuming Operation

See [Table 3 - 1](#), on [page 3 - 9](#) for information on how to resume from a power-saving state.

### Password

It is recommended that you enable a password on system resume in order to protect your data.

## Power Plans

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click *Change plan settings* and then click *Change advanced power settings* to access further configuration options in **Advanced Settings**.


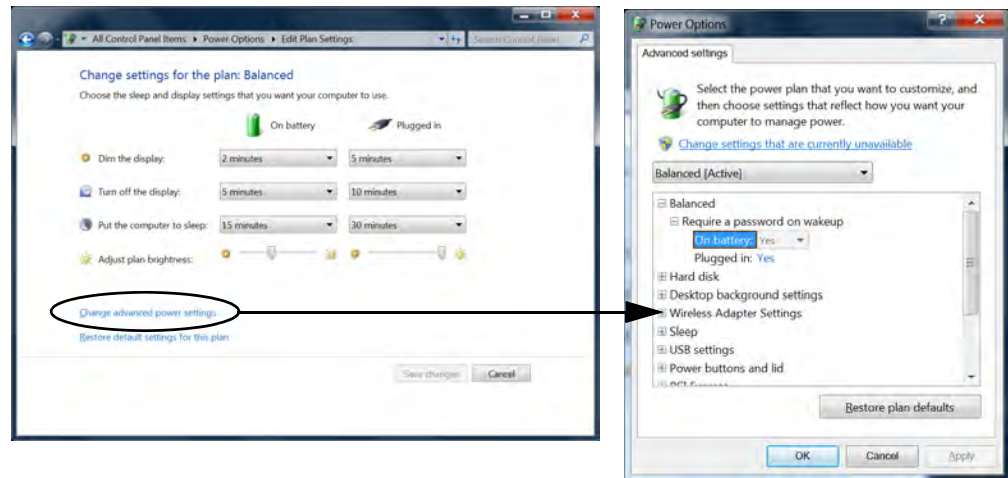


Figure 3 - 1  
Power Plan  
Advanced Settings  
(Win 7)

Each **Windows power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

Click to Show/Hide additional power plans

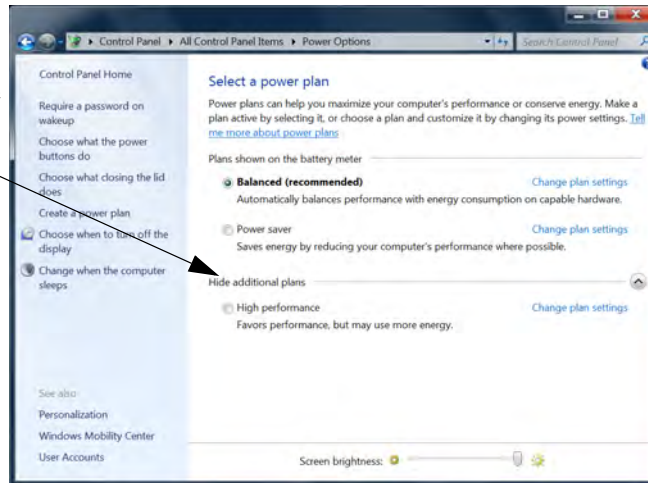

*Figure 3 - 2*  
**Power Plans (Win 7)**

# Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. *Win 7* uses the **Sleep**, **Hibernate** and **Shut Down** power-saving states.

## Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.





### Hibernate

**Hibernate** uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery.

 
### Shut down


 
You should **Shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.

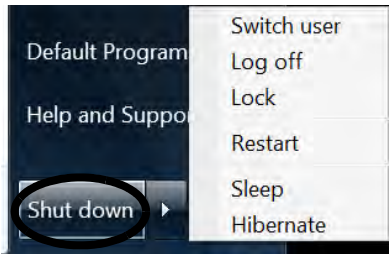



**Silent Mode**

You can use **Silent Mode** to reduce power consumption and fan noise. Use the **Silent Mode** Touch Sensor Instant Key  to toggle this mode on/off.

On screen visual indicators  and the Touch Sensor Instant Key  will display the **Silent Mode** status (see [Table 1 - 2, on page 1 - 9](#)).

Note **Silent Mode** may reduce computer performance.

Figure 3 - 3 Start Menu Power



### Password Protection


It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking **Require a password on wakeup** in the left menu, and selecting the options (click **Change settings that are currently unavailable**).

*Figure 3 - 4*  
**Power Options**  
**Define Power Buttons**


## Configuring the Power Buttons


The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

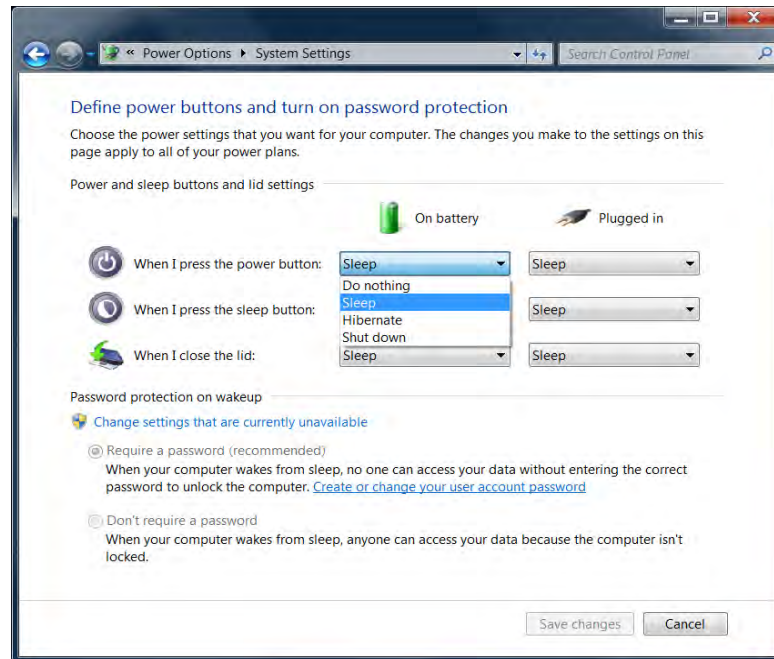

### Resuming Operation

 You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F4** key combo).


Power Status	Icon  Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad



**Closing the Lid**

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.

*Table 3 - 1*  
**Resuming Operation**



**Power Button**

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).



### Power Conservation Modes

The **Energy Star** setting will result in maximum power saving, but with the possible loss of some performance.


Setting the mode to **Bal-ance** will give power saving matched with performance.

**Performance** will give optimum computer performance but with less power conservation.

### Power Conservation Modes

This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity. Adjust **Power Conservation Modes** from the **Control Center**:

1. Press the **Fn + Esc** key combination to toggle the **Control Center** on/off.
2. Click either the **Performance**, **Balanced** or **Energy Star** button.
3. Click in a blank area of the icon or press a key on the keyboard to exit **Power Conservation Mode** without making any changes.

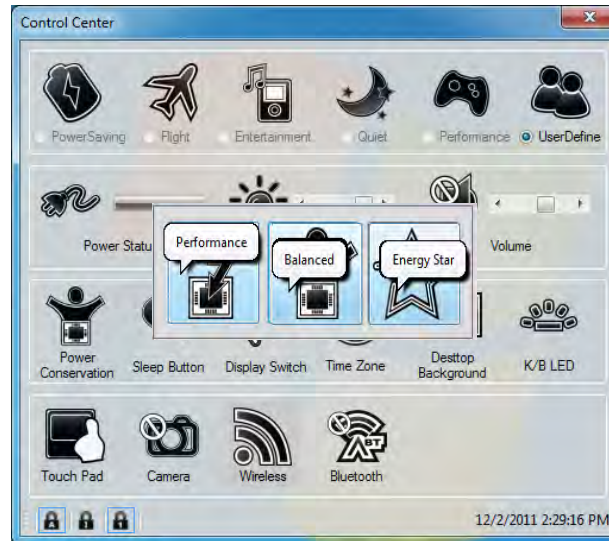


*Figure 3 - 5*  
**Control Center**

# Battery Information

Follow these simple guidelines to get the best use out of your battery.


## Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure 3 - 1 on page 3 - 4*).

Click the battery icon  in the taskbar to see the current battery level and charge status.

  
**Low Battery Warning**

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

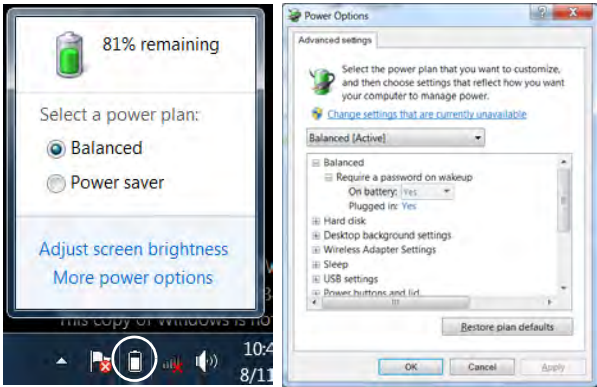

*Figure 3 - 6*  
**Battery Icon (Taskbar) & Battery Advanced Settings**




### Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

## Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

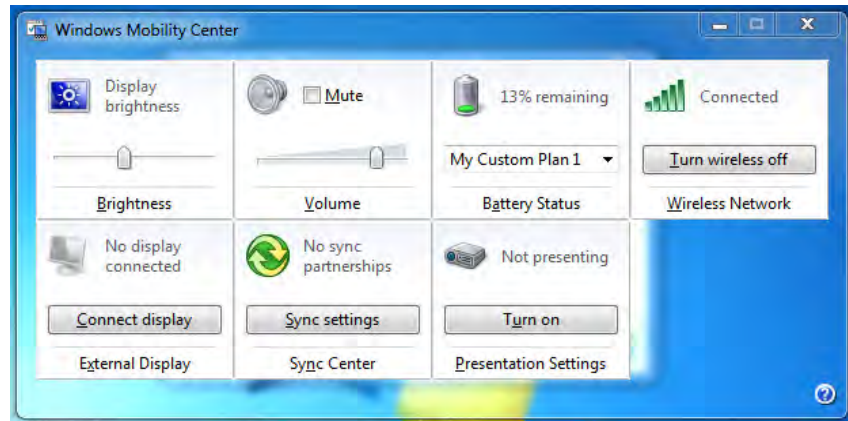

*Figure 3 - 7*  
**Windows Mobility Center**

## Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days.**

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see *“Removing the Battery” on page 6 - 4.*

## New Battery

Always completely discharge, then fully charge, a new battery (see *“Battery FAQ” on page 3 - 15* for instructions on how to do this).

## Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. (Refer to *“- Speaker Area” on page 1 - 7* for information on the battery charge status, and to *“Power Conservation Modes” on page 3 - 10* for more information on how to maintain and properly recharge the battery pack.)



### Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

### Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances.
- DO NOT expose the battery to fire or high temperatures, it may explode.
- DO NOT connect the metal terminals (+, -) to each other.



### Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your service center. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.



## Battery FAQ

### How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create a power plan** for discharging the battery and set all the options to **Never**.



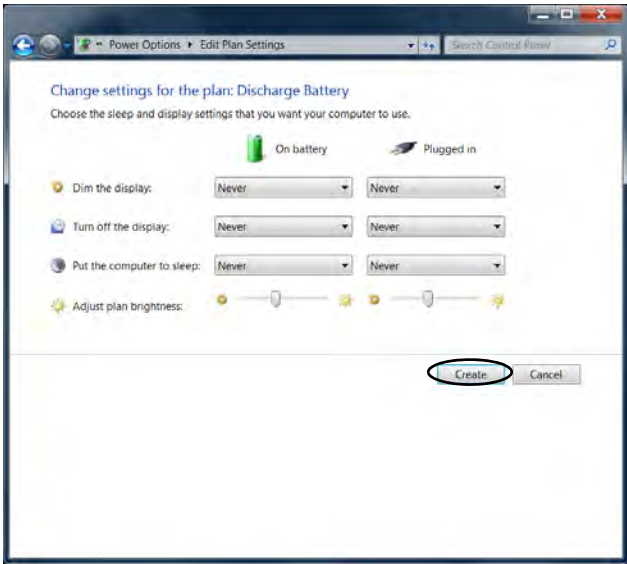


Figure 3 - 8  
Power Plan Create

## Power Management

3. Click **Change plan settings** (after creating it) and click **Change plan settings > Change advanced power settings**.

*Figure 3 - 9*  
**Change Plan  
Settings / Change  
Advanced Power  
Settings**

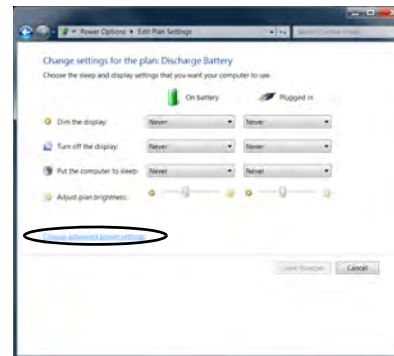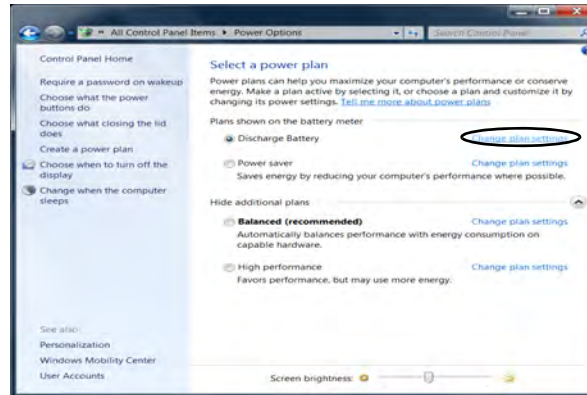

- 4. Scroll down to **Battery** and click **+** to expand the battery options.
- 5. Choose the options below (click **Yes** if a warning appears):

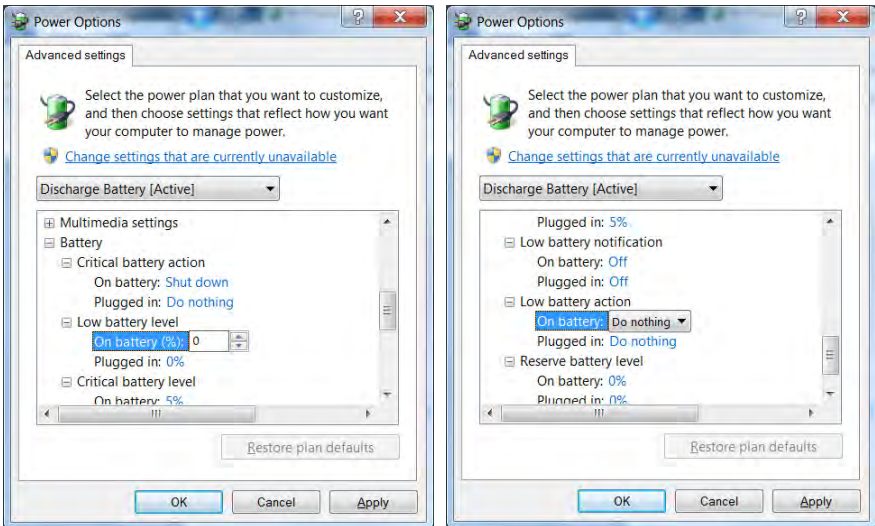


Figure 3 - 10  
Power Options  
Advanced Settings -  
Battery

- Low battery levels = 0%
- Critical battery Levels = 1%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

### **How do I fully charge the battery?**

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

### **How do I maintain the battery?**


Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

# Multi GPU Configuration & Power

Note that due to the high power and system demands created **when two video adapters are installed** in a multi GPU (NVIDIA® SLI or AMD CrossFireX™) configuration, **you should not power the system using the battery only** and you **will require identical (300W) dual power adapters, connected to a power converter box, to power the system.**



Figure 3 - 11 - Dual Power Adapters & Converter Box

  
**Multi GPU Configuration & Multiple Displays**  
Note that if a multi configuration is enabled only a **Single** display may be used as the display device.

- Only **enable a multi GPU configuration** if the system is powered by **identical dual power adapters connected by means of the power converter box.**
- If the computer is currently powered by battery only **do not enable a multi GPU configuration.**
- If you have currently enabled a **multi GPU configuration**, and the computer is powered by the dual AC/DC adapters, **do not switch to battery power only** (or go to the NVIDIA Control Panel/Catalyst™ Control Center and disable the multi GPU configuration before switching to battery power only).



# Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities. For information on the *Windows 8* OS see [Appendix F](#).

## RAID & AHCI Setup

Note that setting up a RAID, or AHCI mode, needs to be done prior to installing the *Windows OS*, and therefore before installing the other drivers listed here (see "[Setting Up SATA RAID or AHCI Mode](#)" on page 7 - 2). See "[RAID Setup \(Windows 8\)](#)" on page F - 53 for *Windows 8* RAID information.

## What to Install

The *Device Drivers & Utilities + User's Manual* disc contains the drivers and utilities necessary for the proper operation of the computer. [Table 4 - 1, on page 4 - 3](#) lists what you need to install and **it is very important that the drivers are installed in the order indicated**. The procedures for installing drivers for the **PC Camera**, **WLAN**, **Fingerprint**, **Bluetooth** and **Sound Blaster** modules are provided in "[Modules](#)" on page 7 - 1.



### Driver Installation & Power

When installing drivers make sure your computer is powered by the AC/DC adapter connected to a working power source. Some drivers draw a significant amount of power during the installation procedure, and if the remaining battery capacity is not adequate this may cause the system to shut down and cause system problems (note that there is no safety issue involved here, and the battery will be rechargeable within 1 minute).

# Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Install Drivers** (button), or **Option Drivers** (button) to access the **Optional** driver menu.

4



Figure 4 - 1 - Drivers Installer Screen 1

1. Check the driver installation order from [Table 4 - 1, on page 4 - 3](#) (the drivers must be installed in this order) which is the same as that listed in the **Drivers Installer** menu below.
2. Click to select the driver you wish to install, (you should note down the drivers as you install them).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.



Figure 4 - 2 - Drivers Installer Screen 2



Win 7 SP1/Win 8 Driver			
Chipset	Page 4 - 6	Intel Rapid Storage Technology (for RAID & AHCI mode Hard Disk Drives)	Page 7 - 11
USB 3.0 (Win 7 Only)	Page 4 - 6	PC Camera Module	Page 7 - 17
NVIDIA Video (VGA) AMD Video (VGA)	Page 4 - 7	Wireless LAN Module	Page 7 - 25
LAN	Page 4 - 7	Fingerprint Reader Module	Page 7 - 44
Card Reader	Page 4 - 8	Bluetooth Module	Page 7 - 67
TouchPad	Page 4 - 8	Sound Blaster Audio	Page 7 - 89
Hot Key	Page 4 - 8	*Note that the information included on the following pages are Windows 7 with Service Pack 1 or Windows 8 64 bit. A separate manual and set of drivers are provided on the Device Drivers & Manual Disc for Windows 8.1.	
MEI Driver	Page 4 - 8		
Audio	Page 4 - 8		

Table 4 - 1 - Driver Installation

All drivers provided are for Windows 7 with Service Pack 1 or Windows 8 64 bit (see [Appendix F](#) for Win 8 information).

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules, however the Qualcomm Atheros WLAN (Combo) module only requires the WLAN driver installation.

### Manual Driver Installation

Click the **Browse CD/DVD** button in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

#### 4

### Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft). See “*Windows Update*” on page 4-9 for instructions.

### Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver. To do this go to the **Control Panel** in the *Windows OS* and double-click the **Programs and Features** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Device Manager (Hardware and Sound > Device Manager)**.
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click “+” to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

## User Account Control

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue/Allow**, and follow the installation procedure as directed.

## Windows Security Message

If you receive a *Windows* security message as part of the driver installation process. Just click ***“Install this driver software anyway”*** or **Install** to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of *Windows* you are currently using. All the drivers provided will have already received certification for *Windows*.

## New Hardware Found

If you see the message “**New Hardware Found**” during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.

### Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Install Drivers** (button), or **Option Drivers** (button) to access the **Optional** driver menu.



#### Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

**RAID Note:** Setting up a **RAID**, or **AHCI** mode, needs to be done prior to installing the **Windows OS**, and therefore before installing the other drivers listed here.

### Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

### USB 3.0 (Win 7 Only)

1. Click **2.Install USB 3.0 Driver > Yes**.
2. Select the language for the installation and click **OK**.
3. Click **Next**.
4. Click the button to accept the license and then click **Next**.
5. Click **Finish**.

## NVIDIA Video (VGA)

1. Click **3./2.Install VGA Driver > Yes**.
2. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
3. Click **Next**.
4. Click the **RESTART NOW** button to restart the computer.

## AMD Video (VGA)

1. Click **3./2.Install VGA Driver > Yes**.
2. Click **Next > Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish > Yes** to restart the computer.
6. After the computer has restarted, click **Restart Now** to restart again to refresh the video driver.

Note that when attempting to access the **AMD Catalyst™ Control Center** in *Windows 7*, you may be prompted to **install Microsoft.net Framework VX.X**. To get the **Microsoft.net Framework** file go to the *Microsoft* website, search for the file, download it and then install it.

After the Video (VGA) driver has been installed, and the system restarted, the OS will automatically run the "Winsat.exe" to rate the performance. Allow time for this process to finish and do not restart during this process (if you have restarted the system see "*Windows Update*" on page 4 - 9).

## LAN

1. Click **4./3.Install LAN Driver > Yes**.
2. Click **Install Drivers and Software** (button).
3. Click **Next**.
4. Click the button to accept the license agreement and click **Next**.
5. Click **Next > Install**.
6. Click **Finish**.

### Card Reader

1. Click **5./4.Install Cardreader Driver > Yes.**
2. Click **Finish** to complete the installation.

### TouchPad

1. Click **6./5.Install Touchpad Driver > Yes.**
2. Click **Next.**
3. Click the button to accept the license, and then click **Next.**
4. Click **Finish > Restart Now** to restart the computer.

### Hot Key

1. Click **7./6.Install Hotkey AP > Yes.**
2. Click **Next > Next.**
3. Click **Finish > Finish** to restart your computer.

### MEI Driver

1. Click **8./7.Install MEI Driver > Yes.**
2. Click **Next > Yes > Next > Next.**
3. Click **Finish.**

### Audio

1. Click **9./8.Install Audio Driver > Yes.**
2. Click **Next.**
3. Click **Finish** to restart the computer.

After installing the audio driver the system will not return to the **Drivers Installer** screen. To install any of the optional drivers, eject the *Device Drivers & Utilities + User's Manual* disc and then reinsert it (or double-click the disc icon in My Computer), and click **Option Drivers** (button) to access the optional driver menu.

It is recommended that you install the **Sound Blaster Audio** application (see *“Sound Blaster Audio” on page 7 - 89*) and **Intel Rapid Storage Technology** driver (see *“IRST Driver Installation” on page 7 - 11* - required for AHCI & RAID mode hard disks).



### Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update** make sure you are **connected to the internet**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Check for updates (Security)**, or double-click **Security Center** and click **Windows Update**.
3. Double-click **Check for updates (button)**.
4. The computer will now check for updates (you need to be connected to the internet).
5. Click **Install now** (button) to install the updates.

## Optional Drivers

See the pages indicated for the driver installation procedures for any modules included in your purchase option.



Figure 4 - 3 - Optional Drivers Installer Screen





# Chapter 5: BIOS Utilities

## Overview

This chapter gives a brief introduction to the computer's built-in software:

**Diagnostics:** The **POST** (Power-On Self Test)

**Configuration:** The *Setup* utility

If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in *Setup*. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your service representative.



### BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

## The Power-On Self Test (POST)

If you enable the **Boot-time Diagnostic Screen** in the Setup Utility, each time you turn on the computer the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run *Setup*.

If there are no problems, the *Setup* prompt will disappear and the system will load the operating system. Once that starts, you can't get into *Setup* without rebooting.

## Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

### Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized service center as soon as possible.

### Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) followed by the prompt:

- Press <F1> to resume
- <F2> to enter Setup

Press **F1** to see if the boot process can continue. It may work, without the correct configuration.

Press **F2** to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.



### BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Setup* and restore the *Previous Values* with <F2>, or *Optimized Defaults* with <F3>.

## The Setup Utility

The **Aptio Setup Utility** tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

### Entering Setup

To enter *Setup*, turn on the computer and press **F2** during the **POST**. The prompt “*Press F2 to Enter Setup*” is usually present for a few seconds after you turn on the system. If you get a “Keyboard Error”, (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The *Setup* main menu will appear.

## Setup Screens

The following pages contain additional advice on portions of the *Setup*. Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to *Setup*.

Instructions on how to navigate each screen are in the box at the bottom right side of the screen.

```
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F3: Optimized Defaults
F4: Save Changes & Exit
ESC: Exit
```

If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the upper right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ► next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.




### Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

*Figure 5 - 1*  
**Navigation Menu**

# Main Menu

Figure 5 - 2  
Main Menu

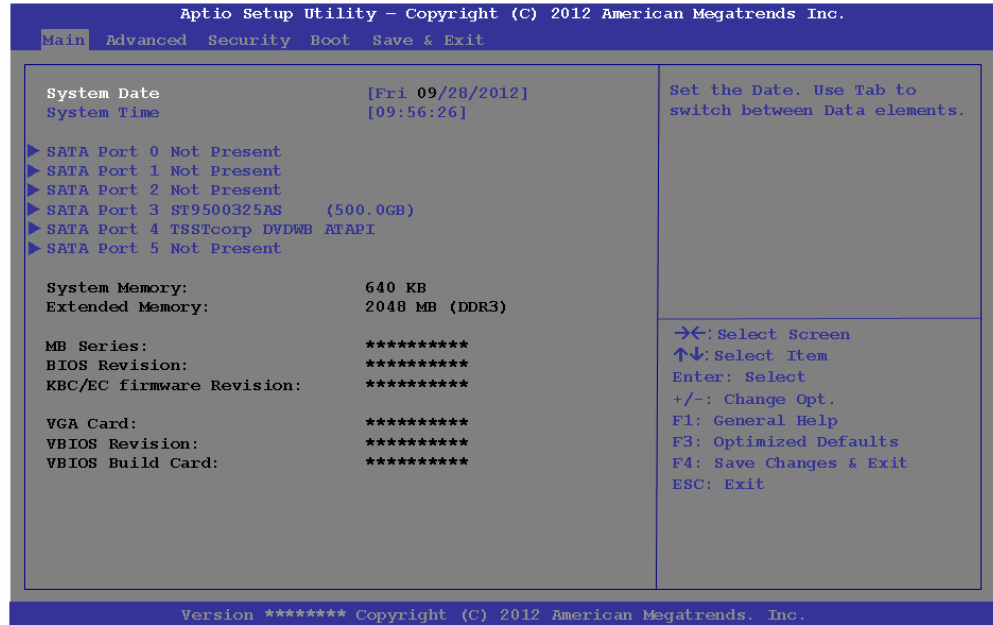

## System Time & Date (Main Menu)

The hour setting uses the 24-hour system (i.e., 00 = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

*SATA Port # (Main Menu)*

Pressing **Enter** opens the sub-menu to show the configuration of a optical Device/ HDD on the computer's SATA ports.

*System/Extended Memory (Main Menu)*


This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

*BIOS Revision/ KBC/EC firmware Revision / VGA Card etc. (Main Menu)*

This item contains information on the BIOS version and video card etc., and is not user configurable.

## Advanced Menu

Figure 5 - 3  
Advanced Menu

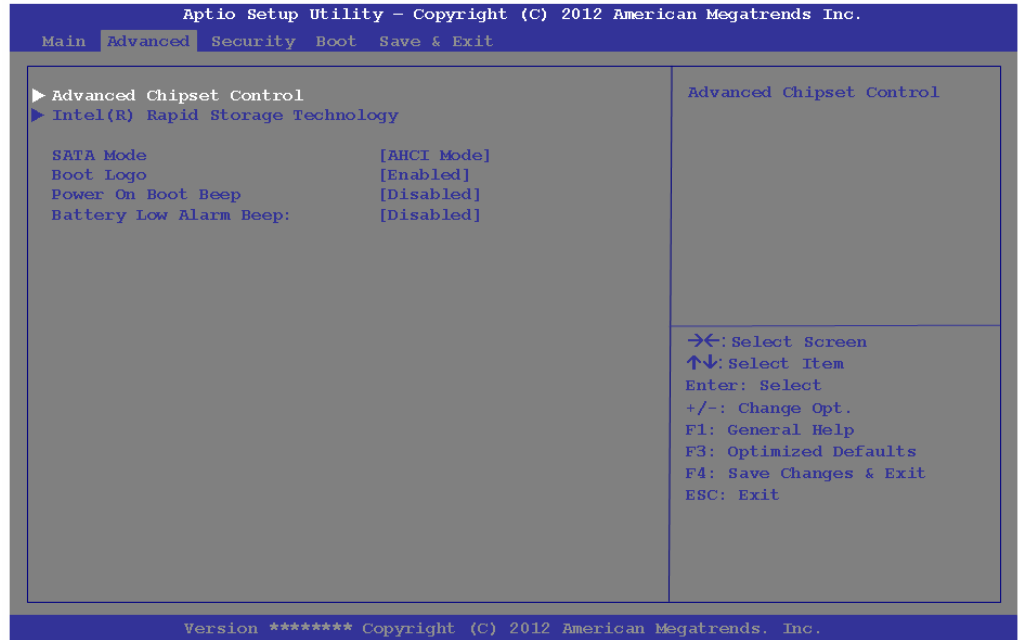

*Advanced Chipset Control (Advanced Menu)*

The sub-menu here allows you to adjust the **Bluetooth Power Setting**.



### *Bluetooth Power Setting (Advanced Menu > Advanced Chipset Control)*

You can adjust the Bluetooth module power setting to your preference. The default setting (**Disabled**) will see the Bluetooth module powered off when the system is started up or restarted. Enabling the power setting will have the module retain the last power status (on or off) before any restart or shut down.

### *Intel(R) Rapid Storage Technology (Advanced Menu)*

Enable/disable **Intel(R) Rapid Storage Technology** from this menu to provide high-performance SATA RAID capabilities for *Windows 8*. Note that this menu item will be available if the **OS Select** is set to **Windows 8 (Win8)** in the **Boot Menu** (see *“Boot Menu” on page 5 - 16*) and **UEFI Boot is enabled** (in the OS Select sub-menu) and the **SATA Mode** (Advanced Menu) is set to **RAID** (see *“SATA Mode (Advanced Menu)” on page 5 - 9*). See *“SATA RAID Setup Procedure (Windows 8)” on page F - 55*.

### *SATA Mode (Advanced Menu)*

You can configure SATA (Serial ATA) control to operate in either **AHCI** (Advanced Host Controller Interface) or **RAID** (Redundant Array of Independent Disks) modes from this menu. The **SATA mode** should be set **BEFORE installing an operating system**, and after you have backed up all necessary files and data (see sidebar). See *“Setting Up SATA RAID Mode” on page 7 - 2* for details if you are configuring you hard disks in a **RAID** in *Windows 7* or *“SATA RAID Setup Procedure (Windows 8)” on page F - 55* for *Windows 8*.



#### SATA Mode Selection

Set the SATA mode **BEFORE** installing your *Windows* OS. **Do not change the mode** unless you intend to reinstall your operating system, and make sure you back up all necessary files and data before doing so.

### *Boot Logo (Advanced Menu)*

Use this menu item to enable/disable the Boot Logo screen at system startup.


### *Power On Boot Beep (Advanced Menu)*

Use this menu item to enable/disable the beep as the computer starts up.

### *Battery Low Alarm Beep (Advanced Menu)*

Use this menu item to enable/disable the battery low alarm beep.

# Security Menu

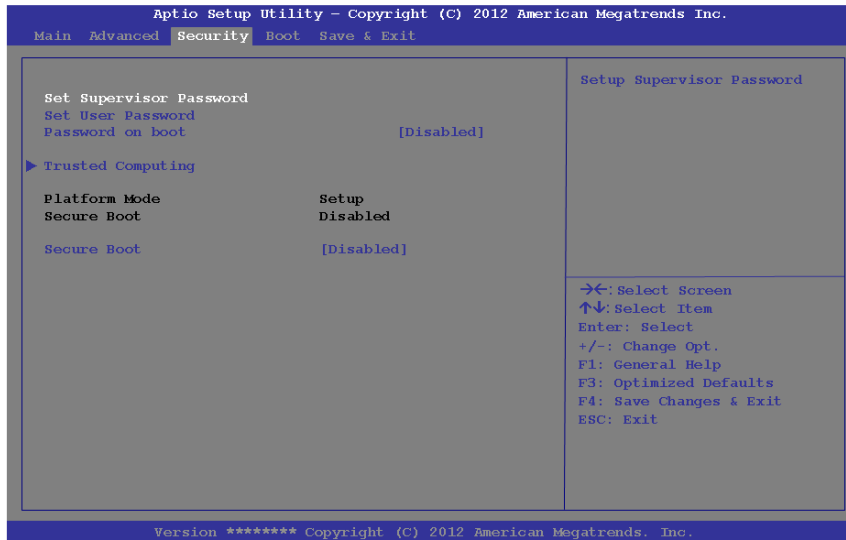

## *Set Supervisor Password (Security Menu)*

You can set a password for access to the **Aptio Setup Utility**. This will not affect access to the computer OS (only the **Aptio Setup Utility**).

**Note:** To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.



## Security Menu

The changes you make here affect the access to the **Setup** utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

5

*Figure 5 - 4*  
**Security Menu**



### Password Warning

If you set a boot password (Password on boot is “Enabled”), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

### *Set User Password (Security Menu)*

You can set a password for user mode access to the **Aptio Setup Utility**. This will not affect access to the computer OS, (only the *Setup* utility) unless you choose to set a **Password on Boot** (see below). Many menu items in the **Aptio Setup Utility** cannot be modified in user mode. You can only set the user password after you have set the supervisor password.

### *Password on boot (Security Menu)*

Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If “*Enabled*” is selected, only users who enter a correct password can boot the system (**see the warning in the sidebar**). The default setting is “*Disabled*”.


**Note:** To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

### *Secure Boot Control (Security Menu)*

Secure Boot prevents unauthorized operating systems and software from loading during the startup process. **Secure Boot Control** is available as a menu option if you have **Windows 8** set as your operating system, and have **enabled UEFI Boot** (see “*Boot Menu*” on page 5 - 16). Enabling Secure Boot Control will bring up the **Secure Boot Mode** menu to enable you to configure Secure Boot as **Standard** (with a fixed secure boot policy), or **Custom** (which enables you to make changes to the **Image Execution Policy** and **Key Management** database).

*Trusted Computing (Security Menu)*

This sub-menu will allow you to enable/disable Trusted Platform Module (TPM) support, and to configure the TPM State. Select **Trusted Computing** and press Enter to access the sub-menu. Press Enter to access the **TPM Support** menu and select **Enable** to display the full TPM configuration menu (see *“Trusted Platform Module” on page 7 - 96* for details).

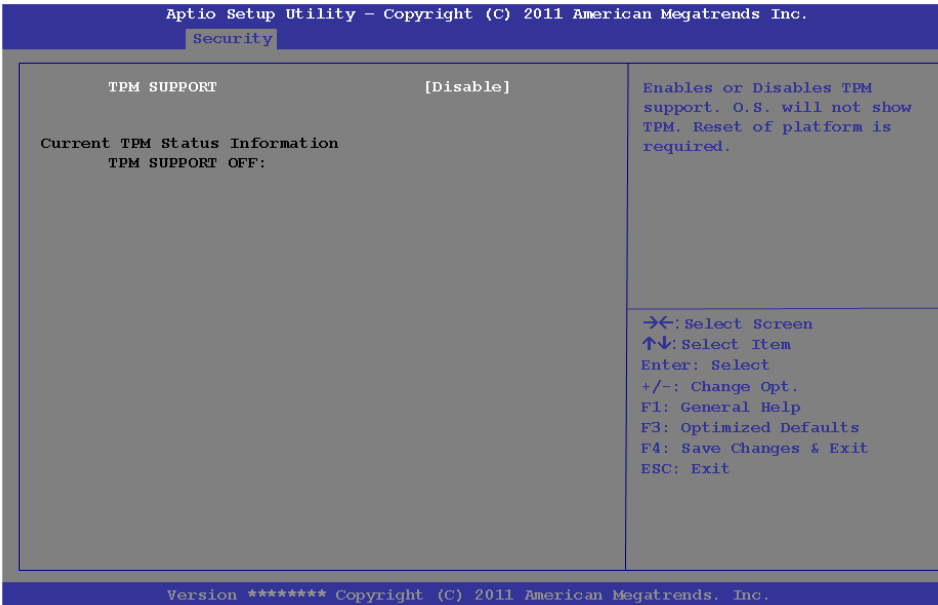


*Figure 5 - 5*  
**TPM Support**

### *TPM State (Security Menu > TPM Support Enabled)*

Select **TPM State**, press Enter and select **Enable** to change the TPM state to enabled. You will then need to press **F4** to save the changes and restart the computer.


5

*Figure 5 - 6*  
**TPM State (Enabled)**

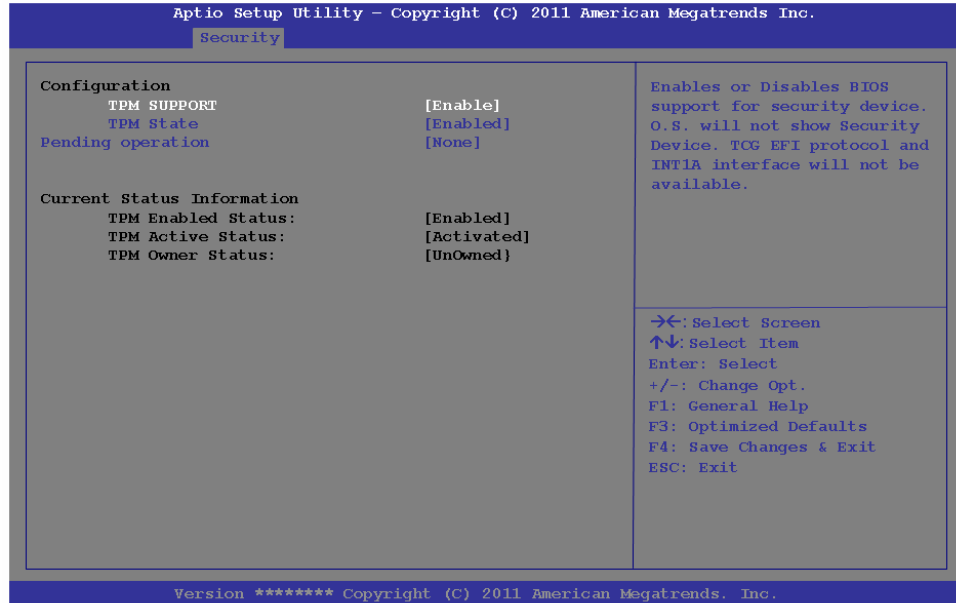

As the computer restarts press **F2** to enter the BIOS again and go to the **TPM Configuration** menu.

*Pending TPM operation (Security Menu > TPM Support & TPM State Enabled)*  
 Select **Pending TPM operation**, press Enter and select the option you require (if you are initializing TPM you should select **Enable Take Ownership**). You will then need to press **F4** to save the changes and restart the computer. You can now install the TPM driver (see *“Trusted Platform Module (TPM) Driver Installation”* on *page 7 - 78*) and then initialize the TPM.

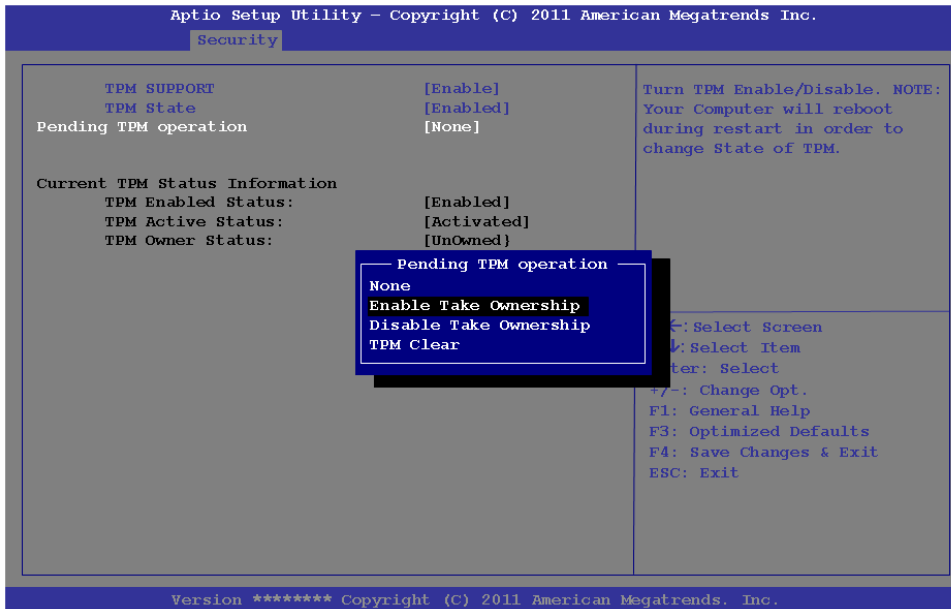

*Figure 5 - 7*  
**Pending TPM operation (Enable Take Ownership)**

## Boot Menu

Figure 5 - 8  
Boot Menu

5



### BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.



When you turn the computer on it will look for an operating system (e.g. **Windows 7**) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot Option Priorities**. Item specific help on the right is available to help you move devices up and down the order.



### *Boot Option Priorities (Boot Menu)*

Press Enter to select the Boot Option # and use the + and - **keys** to move any device's boot priority up and down the list (the selected device will be highlighted in white).

### *OS Select (Boot Menu)*

This item tells allows you to set the operating system you intend to use. This item should be set before you install an operating system.

### *UEFI Boot (Boot Menu > OS Select)*

Enable/disable UEFI Boot from this menu. The Unified Extensible Firmware Interface (UEFI) specification provides a clean interface between operating systems and platform firmware at boot time. In contrast to BIOS, UEFI defines a set of standard boot and runtime services. Enabling UEFI Boot will bring up the option to enable/disable the **Network stack** option.

## Save & Exit Menu

Figure 5 - 9  
Save & Exit Menu



Select ***Save Changes and Reset*** to save any changes made to the BIOS. Choosing to ***Discard Changes***, or ***Exit Discarding Changes***, will wipe out any changes you have made to the ***Setup***. You can also choose to restore the original ***Setup*** defaults that will return the ***Setup*** to its original state, and erase any previous changes you have made in a previous session.

# Chapter 6: Upgrading The Computer

## Overview

This chapter contains information on upgrading the computer. Follow the steps outlined to make the desired upgrades. If you have any trouble or problems you can contact your service representative for further help. Before you begin you will need:

- A small crosshead or Phillips screwdriver
- A small regular slotted (flathead) screwdriver
- An antistatic wrist strap

Before working with the internal components you will need to wear an antistatic wrist strap to ground yourself because static electricity may damage the components.

The chapter includes:

- Removing the Battery
- Upgrading the Optical (CD/DVD) Device
- Upgrading the Hard Disk Drive(s)
- Upgrading the System Memory (RAM)
- Upgrading the Video Card

**Please make sure that you review each procedure before you perform it.**



### Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.



### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord).

You must also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer.**

## When Not to Upgrade

These procedures involve opening the system's case, adding and sometimes replacing parts. You should **not** perform any of these upgrades if:

- Your system is still under warranty or a service contract
- You don't have all the necessary equipment
- You're not in the correct environment
- You doubt your abilities

Under any of these conditions, contact your service representative to purchase or replace the component(s).



### Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:

- Hazardous moving parts.
- Keep away from moving fan blades.

### Upgrading the Processor

If you want to upgrade your computer by replacing the existing processor with a faster/new one you will need to contact your customer service representative. We recommend that you do not do this yourself, since if it is done incorrectly you may damage the processor or mainboard.




### Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

## Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery. **Before removing the battery disconnect the AC/DC adapter from the computer first.**


1. Turn the computer off, remove the AC/DC adapter and turn it over.
2. Loosen screws ① - ③ and carefully lift the battery ④ up.
3. Remove the battery from the battery bay.

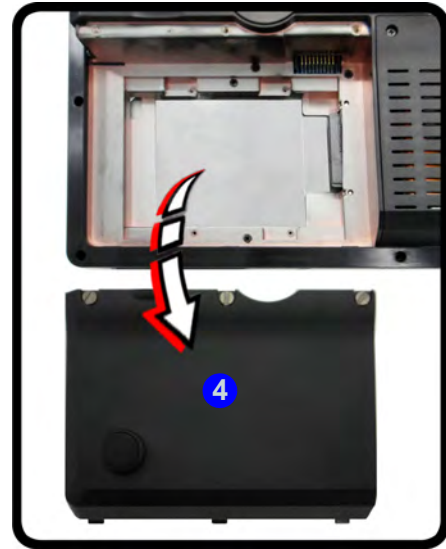

*Figure 6 - 1*  
Battery Removal

## Upgrading the Optical (CD/DVD) Device

1. Locate the hard disk bay cover and remove screws **1** & **2**.
2. Remove the hard disk bay cover **3**.
3. Remove the screw at point **4**, and use a screwdriver to carefully push out the optical device at point **5**.
4. Reverse the process to install any new optical device.

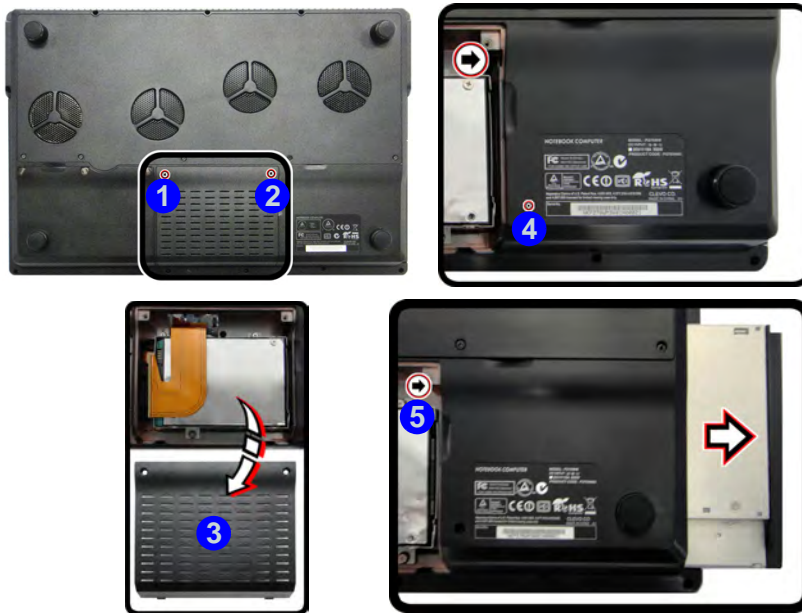

*Figure 6 - 2*  
Removing the CD/  
DVD Device



### HDD System Warning

New HDD's are blank. Before you begin make sure:  
You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

## Upgrading the Hard Disk Drive(s)

The hard disk drive(s) can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h) (see *“Storage” on page E - 3*). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in *“Drivers & Utilities” on page 4 - 1*), when setting up a new hard disk.



### Removing the Hard Disk(s) from the Primary HDD Bay

1. Turn the computer off, remove the AC/DC adapter, turn it over and remove the battery.
2. Locate the hard disk bay cover and remove screws ① & ②.
3. Remove the hard disk bay cover ③.




#### RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

*Figure 6 - 3*  
**Primary HDD Bay  
Cover Screws &  
Cover Removal**


## Upgrading The Computer

4. Remove screws **4** - **7** from the hard disk assembly.
5. Carefully pull up the tab to disconnect the hard disk cable **8**.
6. Carefully (the HDD case edges may be sharp) apply pressure using two fingers at points **9** & **10**.
7. Lift the assembly out of the bay **11** and separate the hard disk board from the case by pulling on the tab **12**.

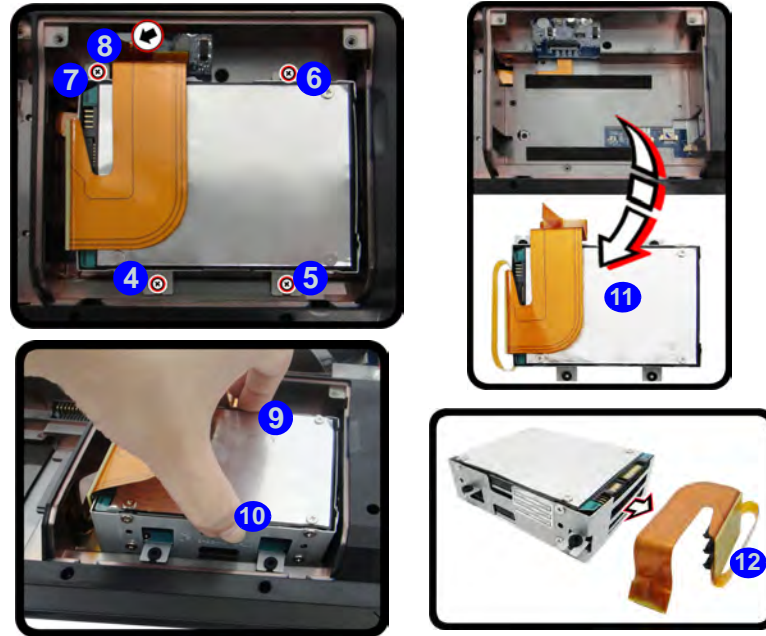

*Figure 6 - 4*  
**Bay Cover Removal  
& Hard Disk  
Assembly Screws**

- Remove screws **13** - **24** (depending on how many hard disks you have installed in the assembly).
- Separate the hard disk(s) **25** & **26** from the case and mylar insulation cover **27**.
- Reverse the process to install any new disk(s) and do not forget to install the insulation plate (onto the upper hard disk), screws, cables and covers (pay careful attention to the orientation of the hard disks in the case).

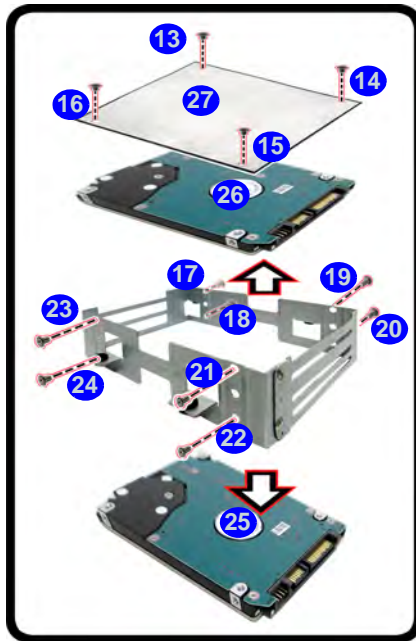

### HDD Case Slots

Note that the hard disk case has 3 available slots for hard disks, however **only the top and bottom slots of the case should be used.**


The third hard disk is located in the **secondary hard disk bay** located under the battery compartment (see over).

*Figure 6 - 5*  
**Primary Hard Disk(s) Removal**


### Removing the Hard Disk from the Secondary HDD Bay

1. Remove the battery (the Secondary hard disk bay is located under the battery).
2. Remove screws ① - ④ from the hard disk assembly.
3. Grip the tab and slide the hard disk assembly in the direction of the arrow ⑤.
4. Lift the hard disk assembly ⑥ out of the compartment.

Figure 6 - 6  
Secondary HDD  
Assembly Removal

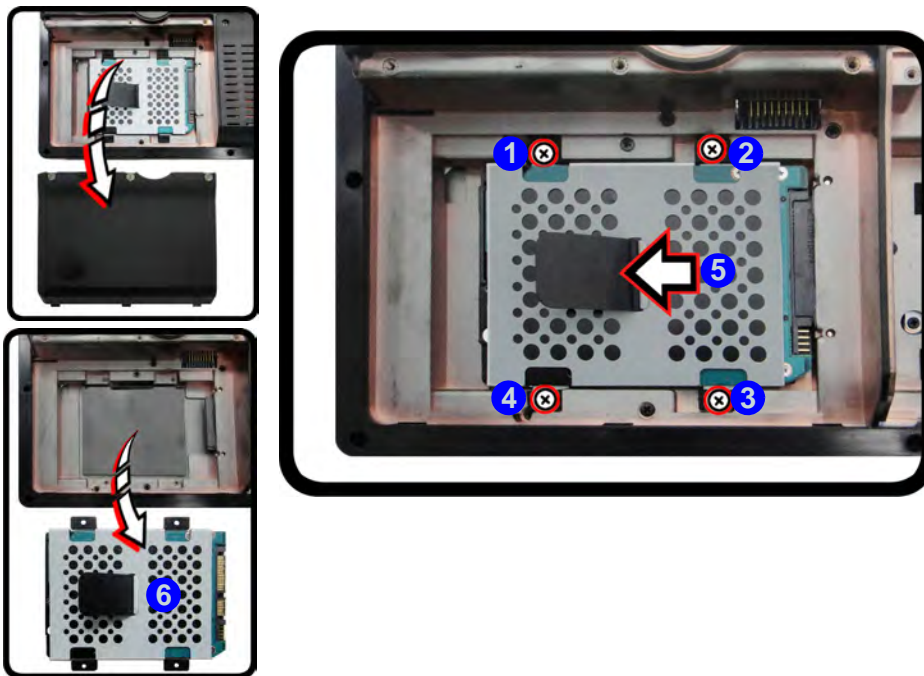

5. Remove the screws 7 - 10 to release the hard disk from the case 11.
6. Reverse the process to install any new hard disk(s).

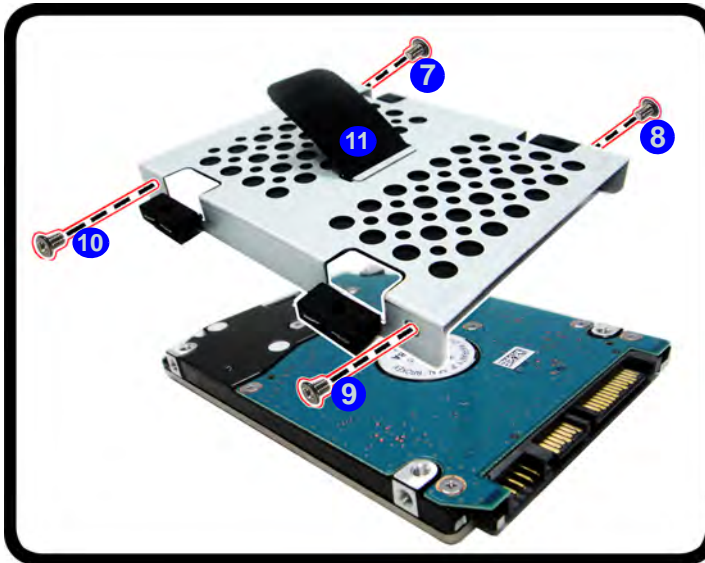


*Figure 6 - 7*  
**Secondary HDD  
Case Removal**

### Upgrading the System Memory (RAM)

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see *“Memory” on page E - 2*). The total memory size is automatically detected by the POST routine once you turn on your computer.

#### Removing the Primary System Memory (3 memory sockets)

1. Turn **off** the computer, and turn it over and remove the battery.
2. Remove screws **1** - **3** from the bottom of the computer.

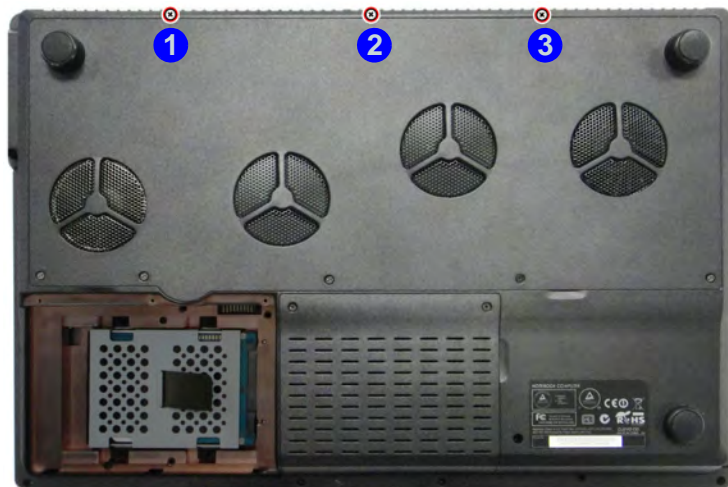

*Figure 6 - 8*  
**Bottom Cover  
Screws**


## Upgrading The Computer

- Turn the computer over, open the Lid/LCD, and carefully (a cable is connected to the underside of the LED cover module) unsnap up the LED cover module from point 4 on the right.



*Figure 6 - 9*  
LED Cover Module  
Removal

- Lift up the LED cover module 5 and disconnect cable 6.

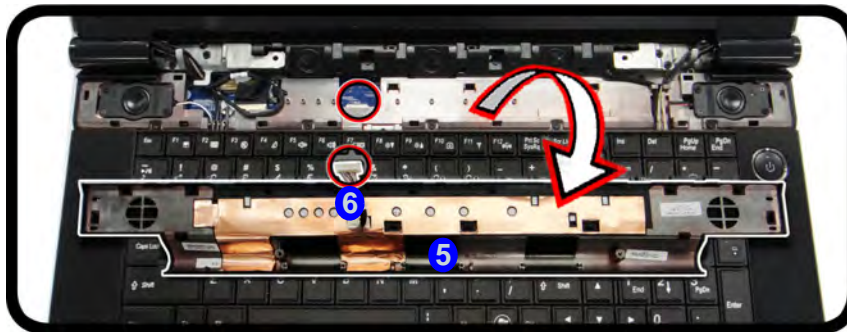

*Figure 6 - 10*  
LED Cover Module  
Cable Disconnect



## Upgrading The Computer


- Remove screws **7** - **11** from the keyboard.

*Figure 6 - 11*  
**Keyboard Screw  
Removal**



- Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable or keyboard LED cable.
- Disconnect the keyboard ribbon cable **12** from the locking collar socket, and the keyboard LED cable **13** from its locking collar socket.

*Figure 6 - 12*  
**Disconnect the  
Keyboard Cables**

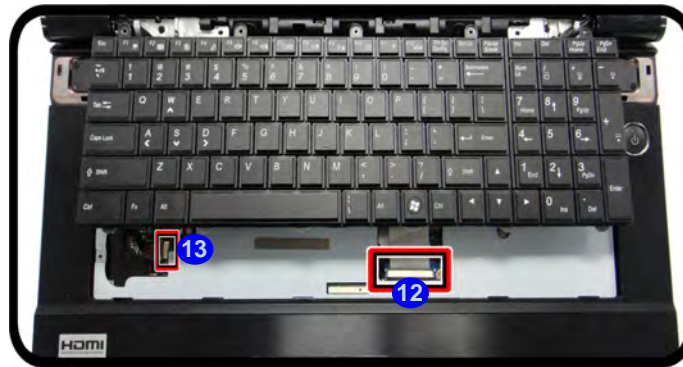

## 6 - 14 Upgrading the System Memory (RAM)




- Remove the keyboard **14**.



*Figure 6 - 13*  
**Keyboard Removal**

- Remove screws **15** - **18** from the keyboard shielding plate.

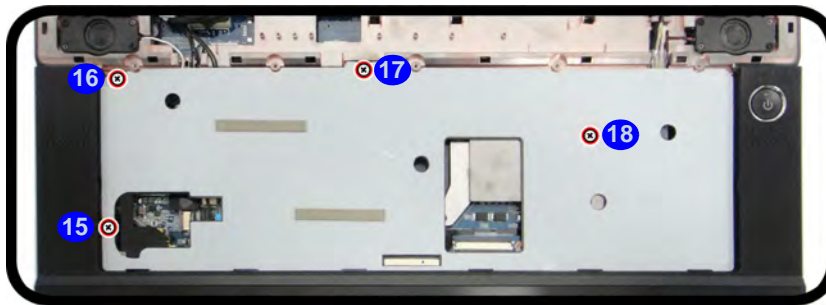


*Figure 6 - 14*  
**Keyboard Shielding  
Plate Screws**

## Upgrading The Computer

10. Remove the keyboard shielding plate **19**.


*Figure 6 - 15*  
**Keyboard Shielding  
Plate Removal**

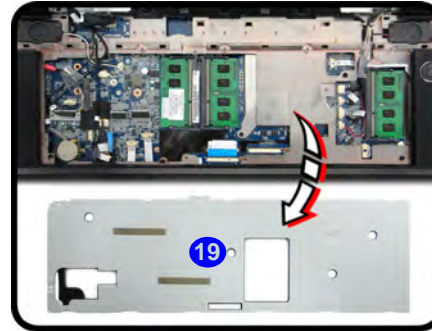

### Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

11. Gently pull the two release latches (**20** & **21**) on the sides of the memory socket in the direction indicated below.

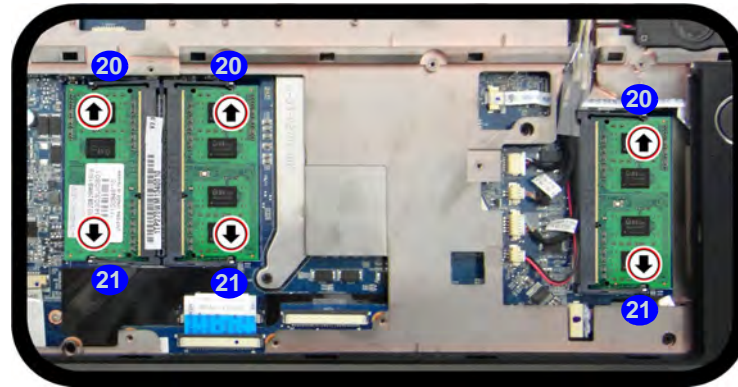

*Figure 6 - 16*  
**RAM Module  
Release**

12. The RAM module **22** will pop-up, and you can remove it.

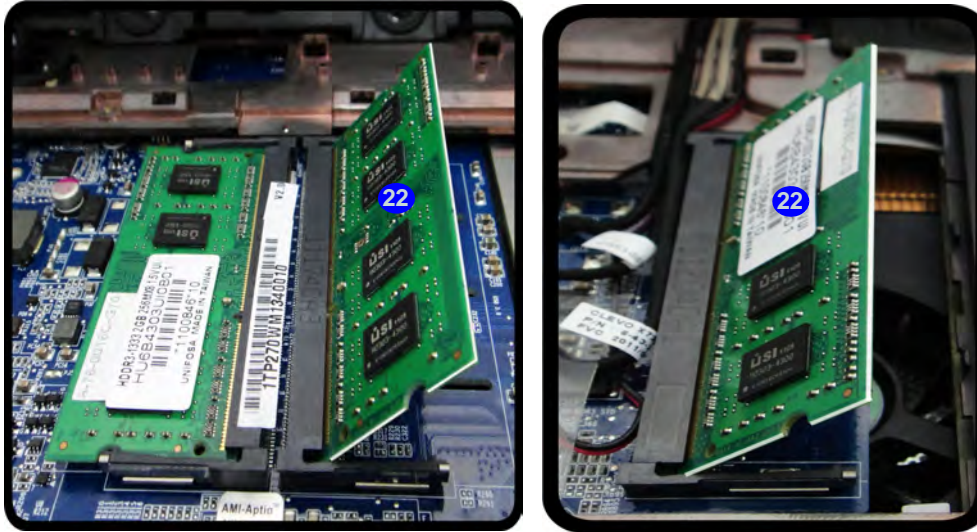

13. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory socket.
14. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the socket as it will go. DO NOT FORCE the module; it should fit without much pressure.
15. Press the module in and down towards the mainboard until the socket levers click into place to secure the module.



### Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

*Figure 6 - 17*  
**RAM Module  
Removal**

## Upgrading The Computer


16. Replace the screws and shielding plate **23**.

*Figure 6 - 18*  
**Keyboard Shielding  
Plate Insertion**

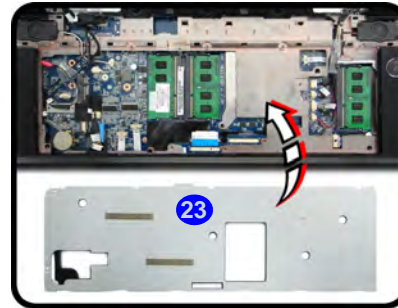

17. Replace the keyboard and make sure you reconnect the keyboard cable.
18. Reconnect the keyboard ribbon cable **24** to the locking collar socket, and the keyboard LED cable **25** to its locking collar socket.


*Figure 6 - 19*  
**Reconnect the  
Keyboard Cables**

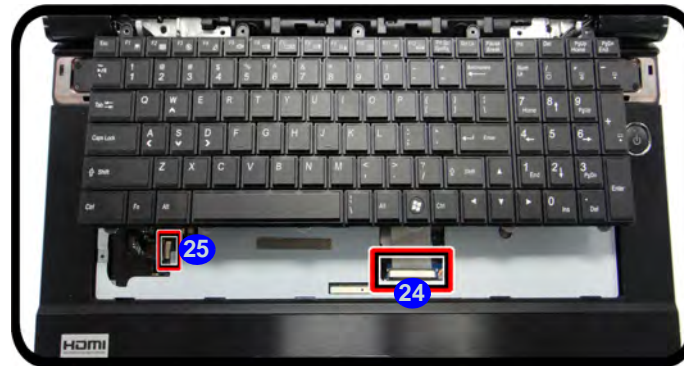

19. Reconnect the LED Module cable (see [Figure 6 - 10](#)).
20. Snap the LED cover module down at the top of the module at points **26** & **27**.
21. Push the LED cover module down on the left side at point **28**, and then slide the module to the right (as illustrated) and snap down to secure it in place.



*Figure 6 - 20*  
**LED Cover Module  
Slide to the Right &  
Snap Down**

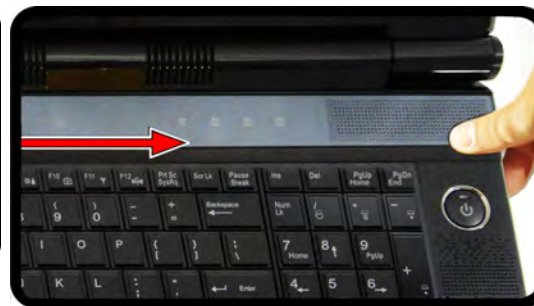

22. Replace the screws on the bottom of the computer (see [Figure 6 - 8](#)).
23. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.



### LED Module Cable

Make sure you reconnect the LED Module cable **6** (see [Figure 6 - 10](#)).

## Upgrading The Computer

### Removing the Secondary System Memory (1 memory socket)


1. Turn **off** the computer, and turn it over and remove the battery.
2. Remove screws **1** - **5** and component bay cover **6**.

*Figure 6 - 21*  
**Component Bay**  
**Cover Removal**




3. Carefully disconnect CPU fan cables **7** & **8**, and remove screws **9** & **10**, and loosen screws **11** - **14**, in the reverse order to that indicated on the label (i.e. remove screw **9** first, and lastly remove screw **14**).

*Figure 6 - 22*  
**CPU Heatsink Fan**  
**Cables & Screws**

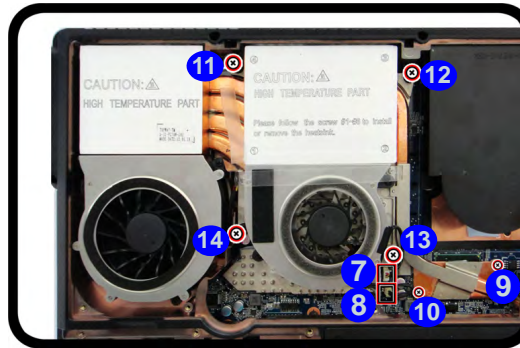



- Carefully (they may be hot) pull the plastic tabs **15** to lift up the heatsink **16** off the computer.

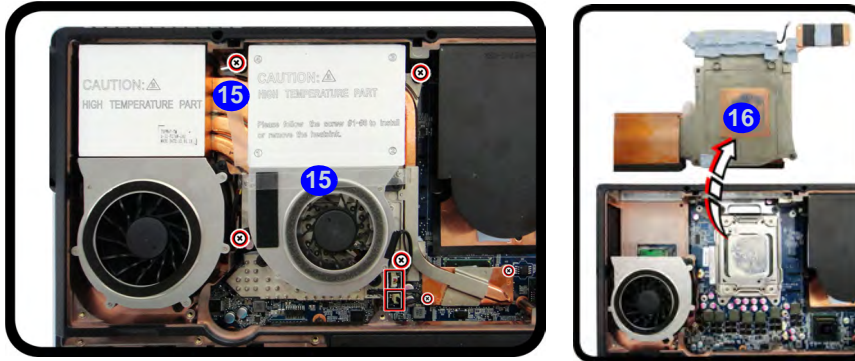

*Figure 6 - 23*  
**CPU Heatsink  
Removal**

- Remove screws **17** - **20** from the fan unit, disconnect the fan cable **21**, and lift the fan unit **22** off the computer.



*Figure 6 - 24*  
**Fan Removal**

## Upgrading The Computer




### Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

6

*Figure 6 - 25*  
**RAM Module  
Removal**


6. Gently pull the two release latches (23 & 24) on the sides of the memory socket in the direction indicated below.
7. The RAM module 25 will pop-up, and you can remove it.

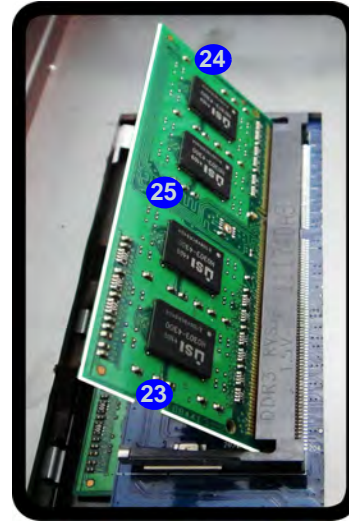

8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory socket.
9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the socket as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the socket levers click into place to secure the module.




11. Replace the fan unit above the RAM module slot and replace screws 26 - 29, then reconnect the cable 30.

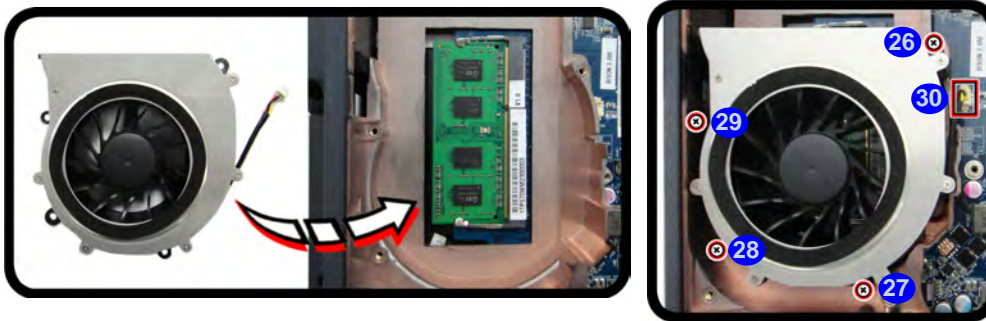

*Figure 6 - 26*  
Fan Unit Screws &  
Cable


12. Carefully Insert the heatsink 31.

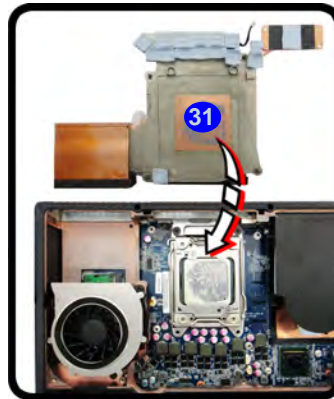

*Figure 6 - 27*  
Heatsink Insertion

## Upgrading The Computer

13. Tighten the CPU heat sink screws **32** - **35**, and replace screws **36** & **37** in the order indicated on the label (i.e. tighten screw **32** first, and lastly replace screw **37**).
14. Replace the component bay cover and screws.

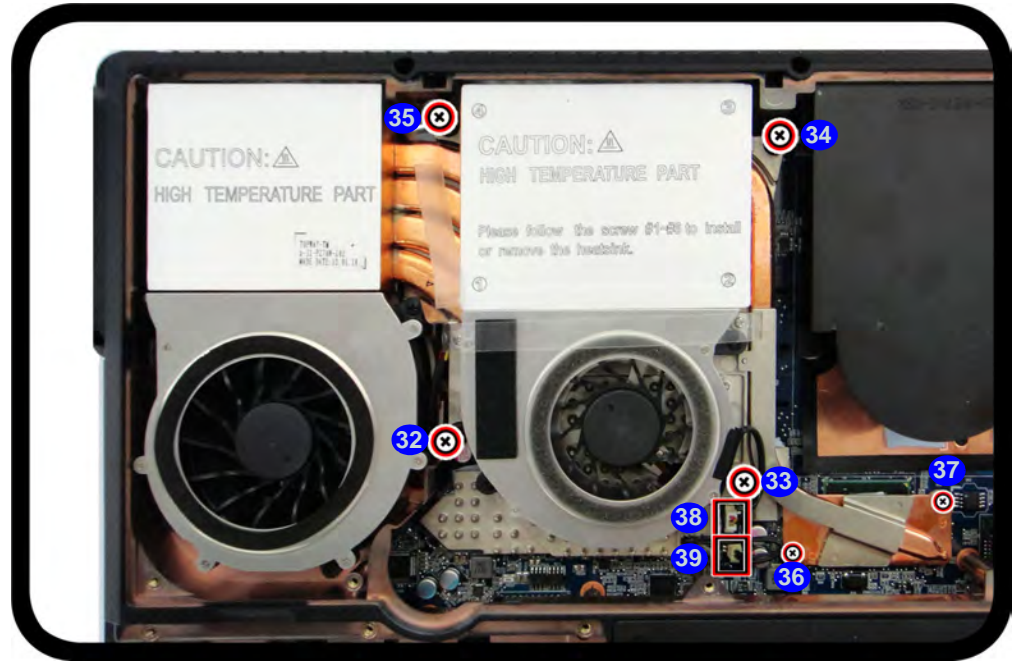

*Figure 6 - 28*  
**Heatsink Screws & Cables**

## Upgrading the Video Card

If you intend to upgrade or add another video card follow the procedures outlined here. However please check with your service representative first to make sure your computer can support more than one video card, and that you are not going to void your warranty. Pay careful attention to the alignment of any video card into the slot on the mainboard.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the component bay cover and remove screws **1** - **5**.
3. Remove the component bay cover **6**.



*Figure 6 - 29*  
**Component Bay  
Cover Removal**



### Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.


## Upgrading The Computer



### Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

4. The video card(s) will be visible at point **7** on the mainboard (one video card is pictured).
5. Carefully disconnect the video card fan cable(s) **8**, and remove screws **9** - **11**.
6. Remove the fan unit **12**.

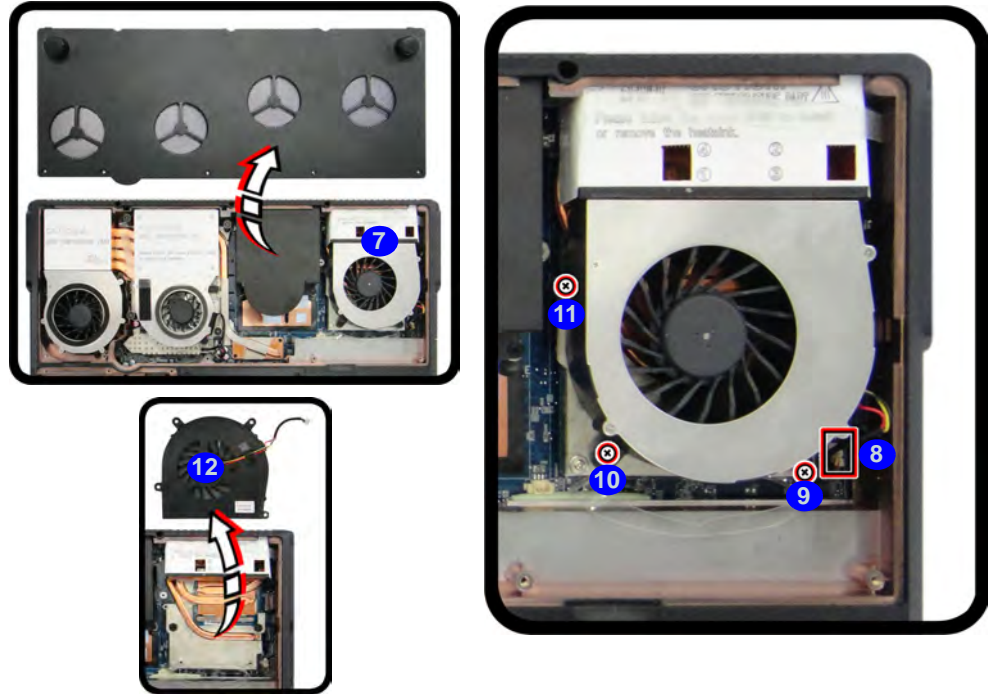

*Figure 6 - 30*  
Fan Unit Removal

- Remove screws **13** - **18** from the heat sink in the order indicated on the heat sink unit label (and heat sink itself).



### Heat Sink Screws

Make sure you **remove** the heat sink screws in the order **13** - **18** (screw **13** first to screw **18** last). This order is indicated on the label (and on the heat sink itself).

### Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

*Figure 6 - 31*  
**Video Card Heat Sink Screw Removal**



## Upgrading The Computer



### Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

- Carefully pull the tab **19** and lift with the other tab **20** to disconnect the heat sink from the VGA assembly.
- Remove the heat sink unit(s) **21** (one heat sink unit is pictured here).

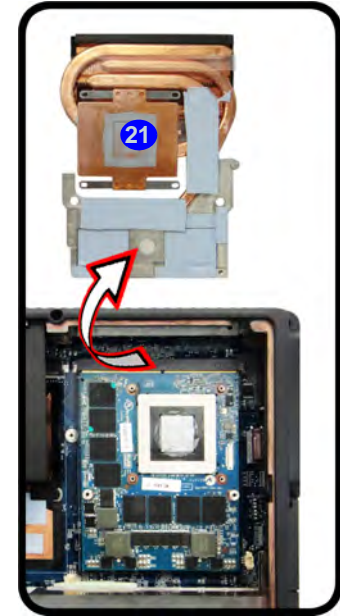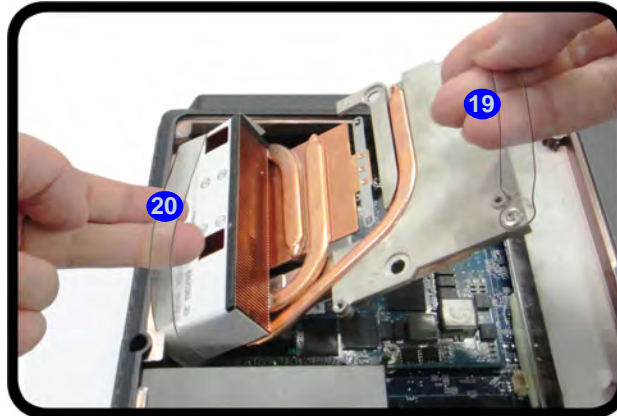

*Figure 6 - 32*  
**Video Card Heat Sink Removal**




## Upgrading The Computer

10. Only **use a flat-headed screwdriver** (do not try to use any other screwdriver type here) to remove screws **22** & **23**.
11. Carefully remove the video card **24**.



### Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

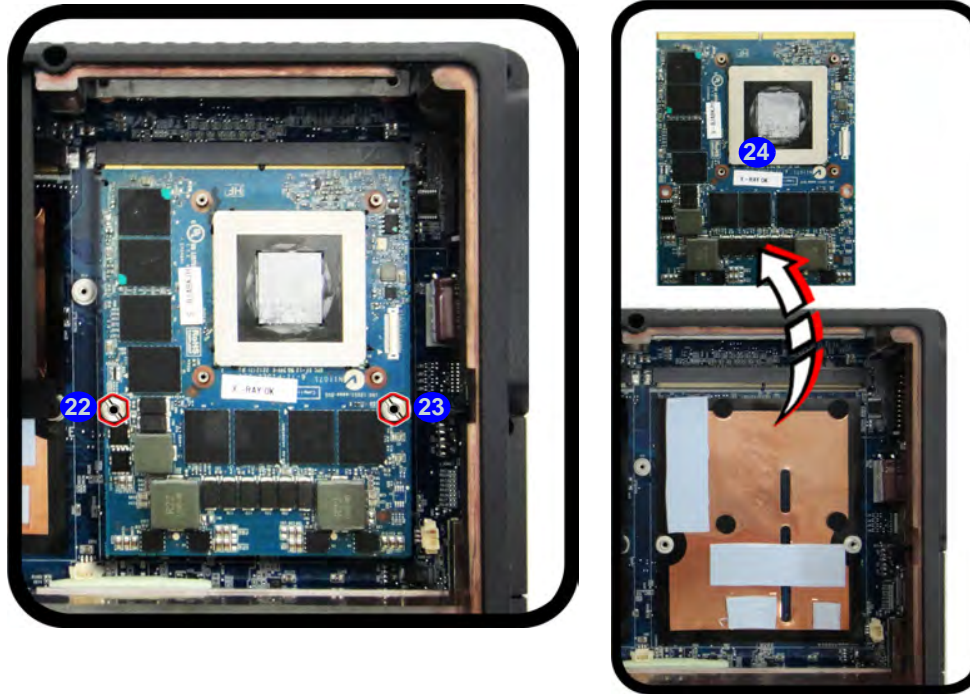

*Figure 6 - 33*  
Video Card Removal

## Upgrading The Computer




### Dual Video Card Connection

The cable between the master and slave video cards connect to the connectors marked at point **26**, and the cable should run behind the video card on the right.

### Dual Video Cards

If your system includes two video cards you will need to disconnect the cable **25** between the master and slave cards (do not forget to reconnect the cable if you are replacing two cards).

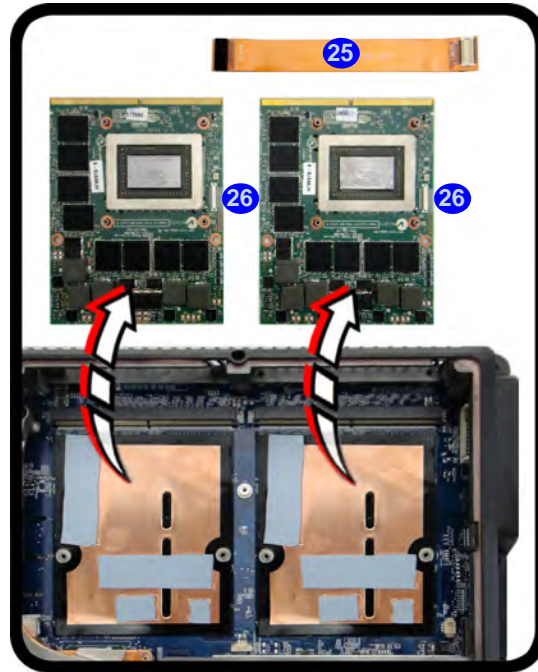


*Figure 6 - 34*  
Dual Video Cards



### Installing a New Video Card

1. Do not forget to replace the master and slave cable if you are replacing two video cards (see [Figure 6 - 34 on page 6 - 30](#)).
2. Prepare to fit the video card into the slot by holding it at about a 30° angle.

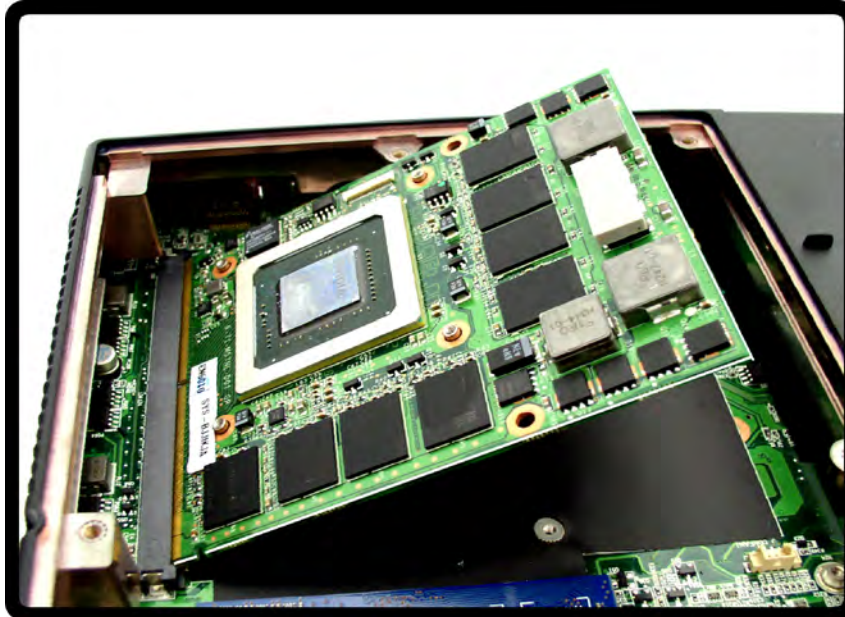

3. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely.



#### Contact Warning


Be careful not to touch the metal pins on the VGA card's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

*Figure 6 - 35*  
**Video Card  
Insertion**

## Upgrading The Computer


4. Fit the connectors firmly into the socket, straight and evenly.
5. DO NOT attempt to push one end of the card in ahead of the other.

*Figure 6 - 36*  
Video Card Insertion  
Procedure

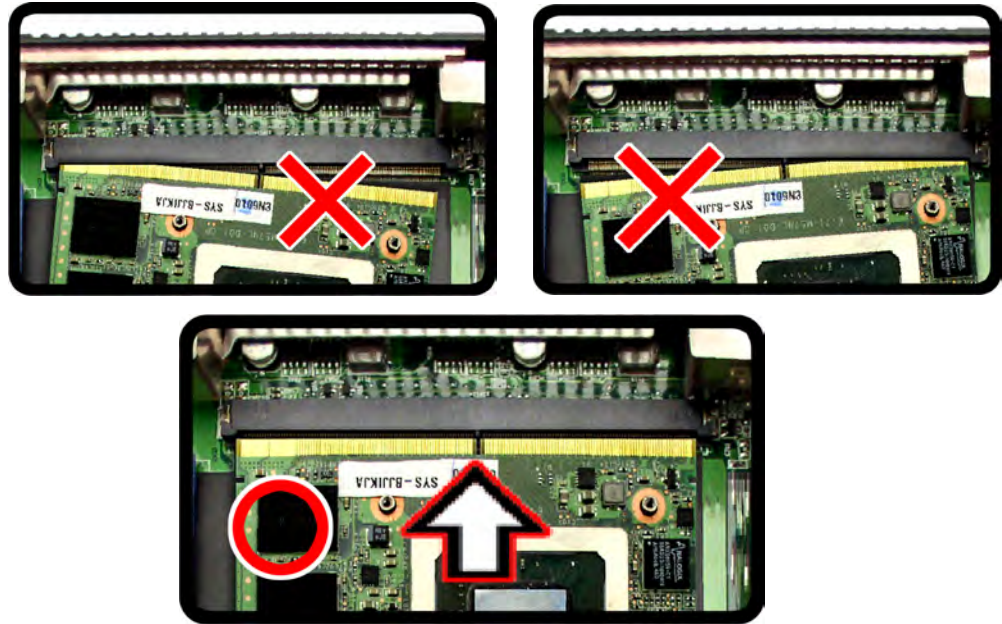

6. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go** (none of the gold colored contact should be showing). DO NOT FORCE the card; it should fit without much pressure.

7. Secure the card with screws **27** & **28**.

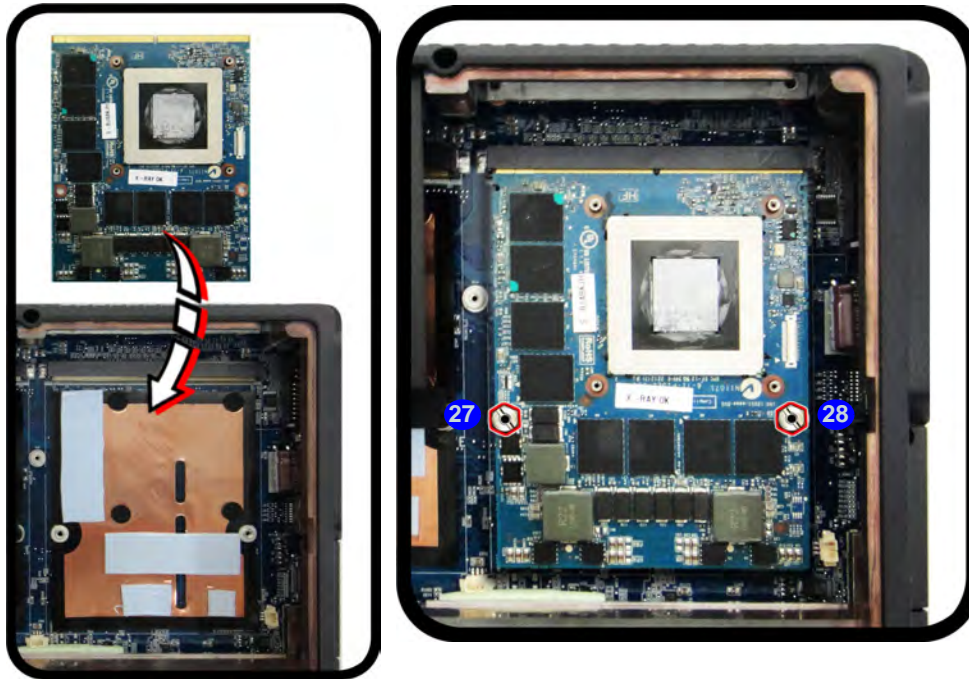

*Figure 6 - 37*  
Video Card Screws

## Upgrading The Computer





### Heat Sink Screws

Make sure you **remove** the heat sink screws in the order **31 - 36** (screw **31** first to screw **36** last). This order is indicated on the label (and on the heat sink itself).


6

*Figure 6 - 38*  
**Video Card Heat Sink Screw Removal**

8. Hold the heatsink by the tab **29** & **30** and insert it back on the card as pictured.
9. Secure the screws **31** - **36** in the order indicated on the heat sink unit label (and heat sink itself).

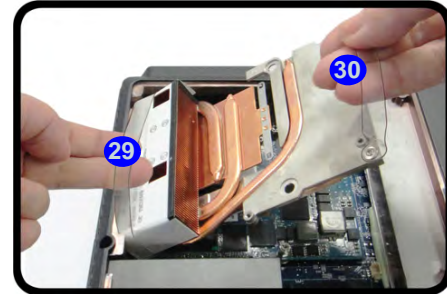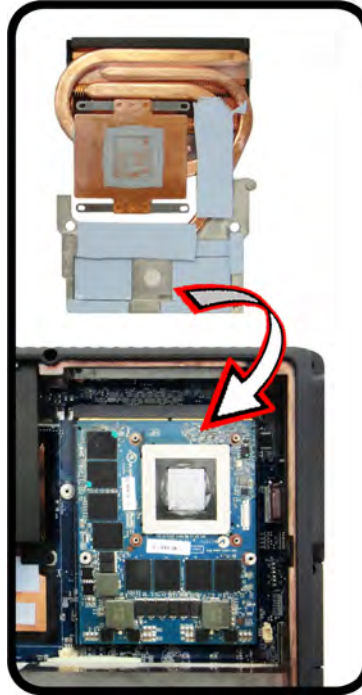

10. Reinsert the fan(s) and secure with screws 37 - 39 and fan cable 40.
11. Replace the component bay cover and screws 41 - 45.

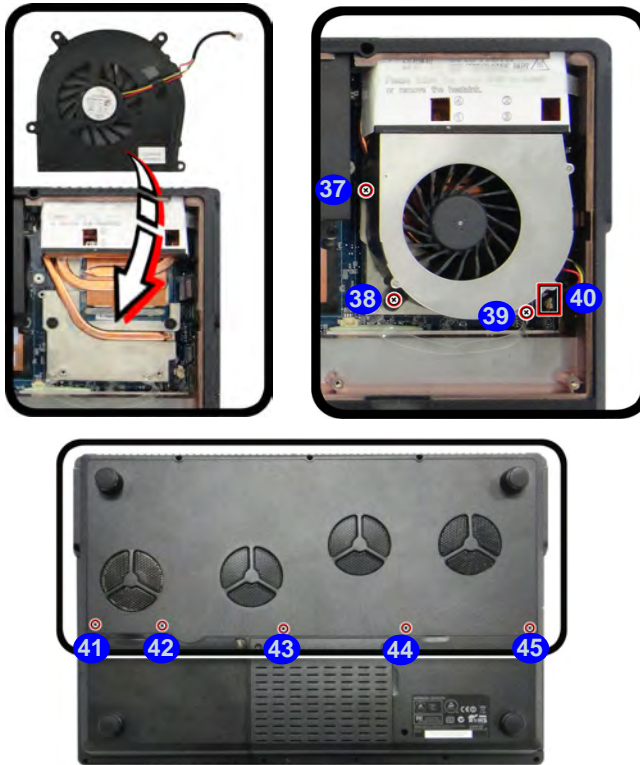

*Figure 6 - 39*  
Fan Unit Screws &  
Component Bay  
Cover Screws



### NVIDIA® SLI or AMD CrossFireX™ Multi GPU Configuration & Power

This computer features an **NVIDIA® Scalable Link Interface (SLI)** or **AMD CrossFireX™** technology configuration that improves graphic quality and performance by combining dual GPUs (two video cards are required) in a single system. Note that due to the **high power and system demands** created by enabling a multi GPU configuration, **you should not power the system using the battery only** and you will require identical **dual power adapters, connected to a power converter box** to power the system (see *“NVIDIA® SLI Multi GPU Configuration & Power” on page C - 15* or *“AMD CrossFireX™ Multi GPU Configuration & Power” on page D - 17*).

# Chapter 7: Modules

## Overview

This chapter contains information on the various modules (some of which are **optional**) which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

The chapter includes information on the following:

- Setting Up SATA RAID or AHCI Mode
- PC Camera Module
- Wireless LAN Module
- Security Modules (Fingerprint & TPM)
- Fingerprint Reader Module
- Bluetooth Module
- Trusted Platform Module
- Sound Blaster Audio
- IRST Driver

For information on the *Windows 8* operating system see [Appendix F](#).





### RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

### SATA Mode Selection

The SATA mode selection should be made **before installing your operating system**.

**DO NOT change your selected SATA mode** unless you intend to re-install your operating system. Make sure you have backed up all your data before doing so.

# Setting Up SATA RAID or AHCI Mode

## AHCI Mode

Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced serial ATA features such as Native Command Queuing (for maximum hard disk efficiency and performance). AHCI mode can be supported by one or two hard disks. Make sure you install the **Intel® Rapid Storage Technology** application if you have set up your hard disk(s) in AHCI mode (see *“Intel Rapid Storage Technology” on page 7 - 11*)

## RAID

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0), Mirroring (RAID 1) or Recovery modes (see *Table 7 - 1, on page 7 - 3*) you will require **at least two identical** (see sidebar) hard disks; to configure your system in Parity Across Disks (RAID 5) mode you will require **three hard disks** installed. See *“RAID Setup (Windows 8)” on page F - 53* for *Windows 8* RAID information.

**Note:** A Recovery level RAID may only be set in *Windows 7* for system BIOS versions revision Ver 1.02.xx or above (see page 5 - 7).

## Intel® Rapid Storage Technology Application

Make sure you install the **Intel® Rapid Storage Technology** application if you have set up your hard disk(s) in RAID mode (see *“Intel Rapid Storage Technology” on page 7 - 11*).



RAID Level	Description
RAID 0	Two Identical drives reading and writing data in parallel to <b>increase performance</b> . RAID 0 implements a striped disk array and the data is broken into blocks and each block is written to a separate disk drive.
RAID 1	Two Identical drives in a mirrored configuration used to <b>protect data</b> . Should a drive that is part of a mirrored array fail, the mirrored drive (which contains identical data) will handle all the data. When a new replacement drive is installed, data to the new drive is rebuilt from the mirrored drive to restore fault tolerance.
Recovery (see note)	<p>Two Identical drives copying data between a master and a recovery disk. This provides more control over how data is copied between the master and recovery drives, fast volume updates and the ability to view the data in <i>Windows Explorer</i>.</p> <p>Note: A Recovery level RAID may only be set in <b>Windows 7</b> for system BIOS versions revision <b>Ver 1.02.xx</b> or above (see page <a href="#">5 - 7</a>).</p>
RAID 5	Identical drives (at least <b>three</b> drives must be used) in a parity across disks configuration are used to <b>protect data</b> and <b>increase performance</b> . A RAID 5 array can withstand a single disk failure without losing access to data.

*Table 7 - 1*  
**RAID Levels**

Prepare the following before setting up your serial ATA hard disks in **RAID** mode (to configure **AHCI** mode you do not need to prepare any extra hard disks but will need to install the **Intel® Rapid Storage Technology** application):

1. The **Microsoft Windows 7 OS DVD**.
2. A hard disk installed in the Primary HDD bay.  
**AND**  
For **RAID levels 0/1/Recovery**: A **second** (identical) hard disk installed in the Primary HDD bay.  
For **RAID level 5**: A **third** (identical) hard disk installed in the Secondary HDD bay.
3. The **Device Drivers & Utilities + User's Manual** disc.
4. A USB Flash drive or external USB hard disk drive with the RAID folder from the **Device Drivers & Utilities + User's Manual** copied on to it.



### Array Types

A **Mirrored Array (RAID 1)** provides full data protection, as data can simply be copied from a healthy disk to a replacement for any failed disk.

A **Striped Array (RAID 0)** is **NOT** fault-tolerant. The failure of one drive will result in the loss of all data in the array. It is designed to increase disk performance by spreading the I/O load across the channels and drives.

A **Parity Across Disks (RAID 5)** provides full data protection and increased performance.

## SATA RAID Setup Procedure (BIOS)

1. Start-up your notebook computer and press <F2> to enter the **BIOS**.
2. Go to the **Advanced** menu, select "**SATA Mode**" and press Enter (see page [5 - 9](#)).
  - Select "**RAID Mode**".
3. Go to the **Boot** menu.
4. Set the **DVD-ROM Drive** (make sure the *Microsoft Windows 7 OS DVD* is inserted) as the first device in the boot order from the **Boot** menu (see "[Boot Menu](#)" on page [5 - 15](#)).
5. Select **Save Changes and Reset** from the **Exit** menu (or press **F4** and Enter) and press **Enter** to exit the BIOS and reboot the computer.
6. See the instructions in "[RAID Setup \(Intel Matrix\)](#)" on page [7 - 6](#).

*Figure 7 - 1*  
**Intel(R) Rapid  
 Storage Technology  
 Option ROM**


### Recovery Level

When selecting disks for the Recovery RAID level you will need to use the **Tab** key to select a **Master** disk, and the **Space** key to select a **Recovery** disk.

You can select the synchronization between the disks to be **Continuous** (automatic) or **On Request** (manually).


## RAID Setup (Intel Matrix)

1. As the computer starts up press **Ctrl + i** to enter RAID configuration menu.

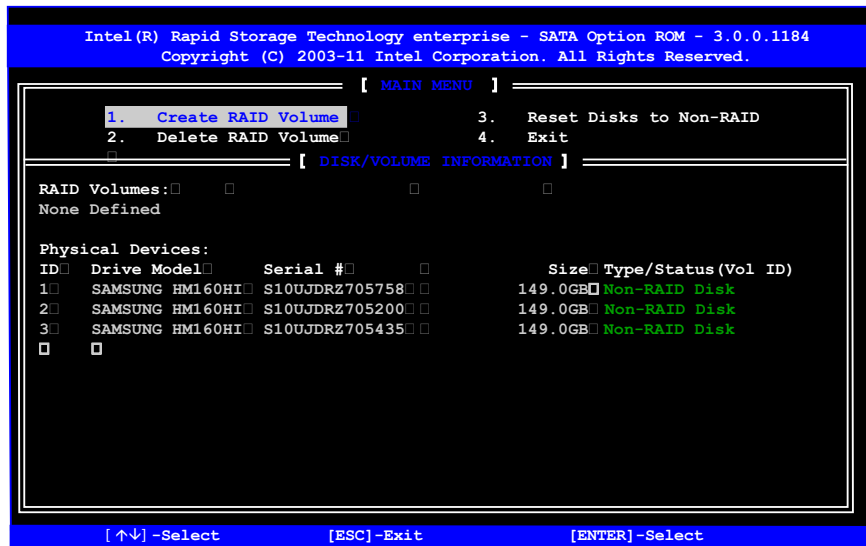

2. Select **1.Create RAID Volume** and press Enter.
3. Type the **RAID volume name** and then press Tab or Enter to advance to the next field.
4. Specify (use the up and down arrow keys) the **RAID level (RAID 0 (Stripe), RAID 1 (Mirror), RAID 5 (Parity) or Recovery** (BIOS revision dependant) - see [Table 7 - 1, on page 7 - 3](#)) and then press Tab or Enter to advance to the next field.

5. Press Enter and the system will select the physical disks to use (see sidebar for **Recovery Level**).
6. Press Enter and select (if applicable) the Strip Size (best set to default).
7. Press Enter and select the Capacity size (best set to default).
8. Press Enter to select **Create Volume**.
9. Press Enter to create the volume, and confirm the selection by pressing **Y**.
10. This will now return to the main menu.

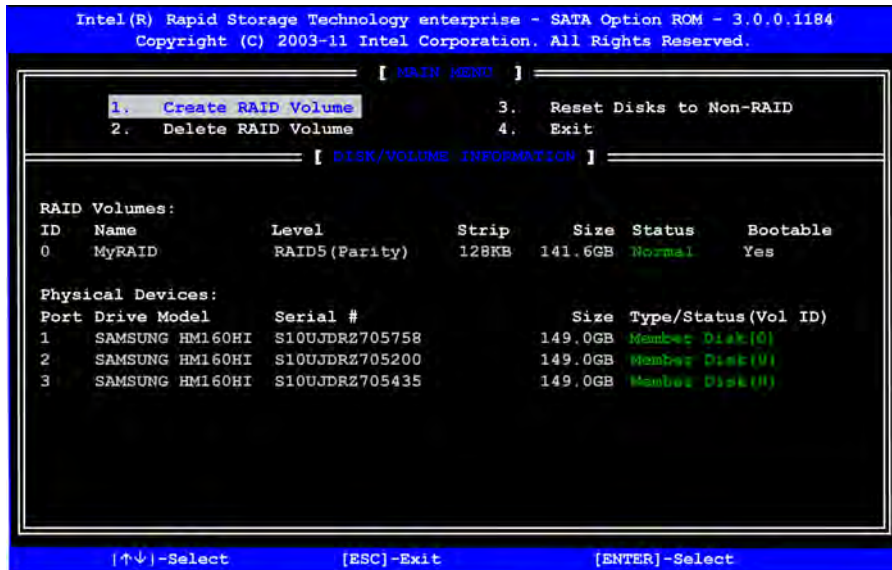

### Recovery Level

When selecting disks for the Recovery RAID level you will need to use the **Tab** key to select a **Master** disk, and the **Space** key to select a **Recovery** disk.

You can select the synchronization between the disks to be **Continuous** (automatic) or **On Request** (manually).

Figure 7 - 2  
RAID Created

11. Select **4.Exit** and press Enter, then press **Y** to exit the RAID configuration menu.

12. Make sure the **Windows 7** OS DVD is in the DVD drive, and as the computer starts up it will automatically boot from the **Windows 7** OS DVD (you will be prompted to press a key to boot from the DVD).
13. Press **Enter** to continue installing the operating system as normal (see your **Windows** documentation if you need help on installing the **Windows** OS).

A driver is included on the *Device Drivers & Utilities + User's Manual disc* that will need to be installed as part of the **Windows** installation procedure. However you will need to go to an operable computer and copy the driver to a USB Flash drive or external USB hard disk.

1. Go to the operable computer and insert a USB Flash drive or external USB hard disk.
2. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive of the operable computer.
3. Copy the **appropriate folder** (copy the whole folder) from the location below (D: denotes your DVD drive) on the *Device Drivers & Utilities + User's Manual* disc to the USB Flash drive or external USB hard disk. **The actual folder to be copied will be dependant on your BIOS Revision** (to find your BIOS revision/version see *"BIOS Revision/ KBC/EC firmware Revision / VGA Card etc. (Main Menu)" on page 5 - 7*).

For BIOS Revisions **earlier** than **Ver 1.02.xx** copy the following folder:

- **D:\Option\00IRST**

For BIOS Revisions **Ver 1.02.xx** or later copy the following folder:

- **D:\Option\AHCI**

4. Press a key at system startup to begin installing **Windows** from your **Microsoft Windows 7** disc (make sure the DVD device is set at the top of the **Boot Sequence** in the BIOS - see **“Boot Option Priorities (Boot Menu)”** on page 5 - 17).
5. Click **Install Now**.
6. Make sure your USB Flash drive or external USB hard disk is attached to one of the USB ports on the computer.
7. Click **“I accept the license terms”** tickbox and click **Next**.
8. Click **Custom (advanced)**.
9. Click to select **Load Driver** when the **“Where do you want to install Windows?”** screen appears.
10. Click **Browse** and browse to the location you copied the files to on your USB Flash drive or external USB hard disk (X: denotes your USB Flash drive or external USB hard disk). **The actual files to be copied will be dependant on your BIOS Revision** (to find your BIOS revision/version see **“BIOS Revision/ KBC/EC firmware Revision / VGA Card etc. (Main Menu)”** on page 5 - 7).

For BIOS Revisions **earlier** than **Ver 1.02.xx** browse to the following:

- **Windows 7 32bit - X:\00IRST\f6flpy\RSTe\_f6\_iaStorA\_32\**
- **Windows 7 64bit - X:\00IRST\f6flpy\RSTe\_f6\_iaStorA\_64\**

For BIOS Revisions **Ver 1.02.xx** or later browse to the following:

- **Windows 7 32bit - X:\AHCI\f6flpy\f6flpy-x32\**
- **Windows 7 64bit - X:\AHCI\f6flpy\f6flpy-x64\**

11. Click **OK > Next** (or format the drive to your preferences).

## Modules

12. Follow the on-screen instructions to install the **Windows 7** operating system.
13. Install the **Windows** drivers from the **Device Drivers & Utilities + User's Manual** disc as per **Table 4 - 1, on page 4 - 3** (make sure you install the Intel Rapid Storage Technology driver - see "**IRST Driver Installation**" on page 7 - 11).



# Intel Rapid Storage Technology

The **Intel Rapid Storage Technology application** provides high-performance SATA and SATA RAID capabilities. Install the **Intel Rapid Storage Technology application** to support your **RAID** system or SATA drive if set up in **AHCI mode** in the BIOS (see “*SATA Mode (Advanced Menu)*” on page 5 - 9). Make sure you have installed all the drivers from the *Device Drivers & Utilities + User’s Manual* disc as per *Table 4 - 1, on page 4 - 3* before installing the IRST driver.

## IRST Driver Installation

1. Insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **7./6.Install IRST Driver > Yes**.
4. Click **Next > Next > Yes > Next > Next**.
5. Click **Finish** to restart the computer (you will need to restart the system again after the computer has rebooted).

See the following pages for more information if you have set your hard disks up in a RAID configuration.

**Note that after installing the IRST driver the Windows system may take up to 5 minutes at startup to load all the drivers.** By default, Intel® Rapid Storage Technology is set to **Automatic** (Delayed Start). See page 8 - 16 for details on how to change this setting.



### Intel® Control Center

The **Intel® Control Center** provides a central starting point to make it easier to find any Intel® programs you need to use.

Click the tickbox in the first installation screen of the setup program to install the control center.


### Intel® Rapid Storage Technology for RAID Systems

Intel® Rapid Storage Technology application displays status information on your RAID configuration. Run the **Intel® Rapid Storage Technology enterprise** application from the **Intel** item in the **All Programs** menu.

When the **Intel® Rapid Storage Technology enterprise** application is launched the system will open the **Status** window. Here you can view the general health of the storage system. Various volume creation and management options are available depending on the system's status.


7

*Figure 7 - 3*  
**Intel® Rapid  
Storage Technology  
enterprise  
Status**

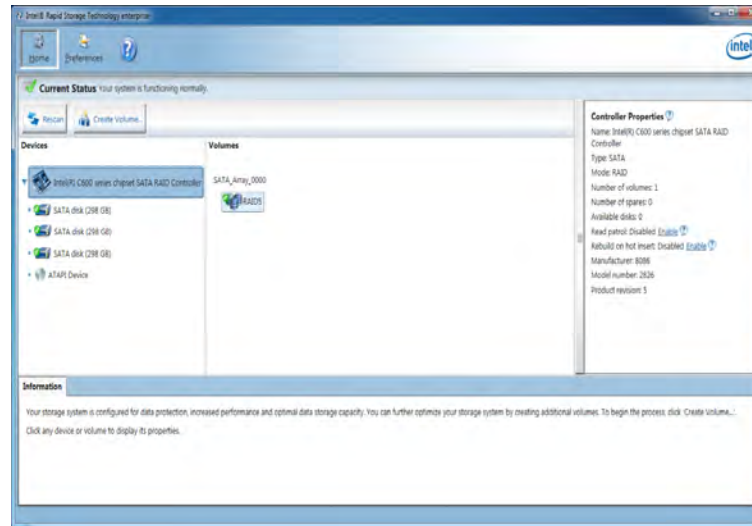

## Intel® Rapid Storage Technology Help

If a hard drive member of a RAID volume is reported as “**Degraded**” or “**Failed**” it may be possible to recover the volume. If the volume cannot be restored then you will need to recreate the RAID volume and restore the data from a back up. Click the **Help** menu (or press **F1**) for instructions on how to recover or recreate RAID Volumes.

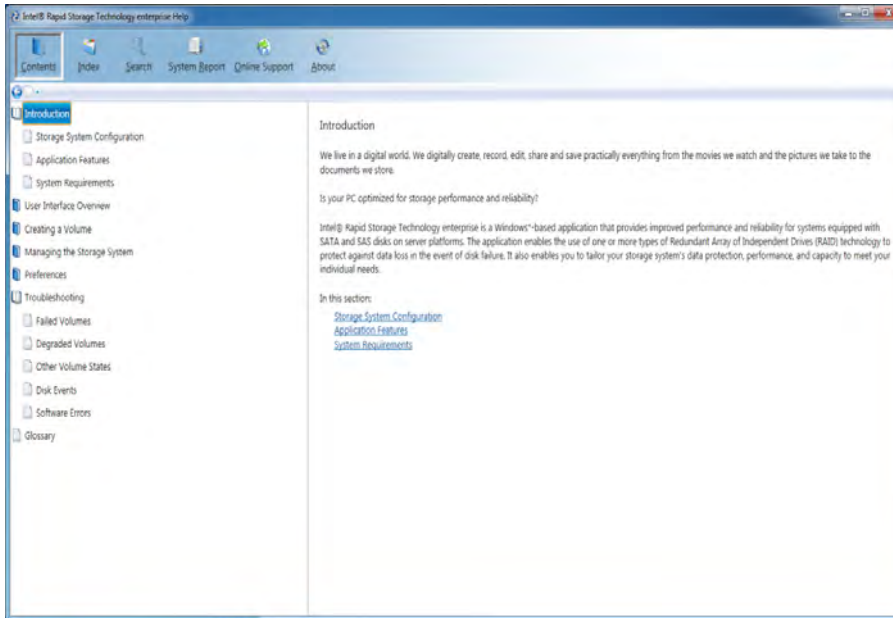

### Help

Click the **Help** (or press **F1**) menu button at the top of the **Intel® Rapid Storage Technology** application.

Click **Contents** to view the general list of subjects covered, click **Index** or **Search** for a more specific help topics on a particular item.

Click **More help on this page** at the bottom of any page for page specific help.

*Figure 7 - 4*  
**Intel® Rapid Storage Technology enterprise Help**

## RAID Volume Data Verification and Repair

The RAID volume data verification process identifies any inconsistencies or bad data on a RAID 0, RAID 1 or RAID 5 volume. The table outlines what occurs for each RAID level:

*Table 7 - 2*  
**RAID Level  
 Verification &  
 Repair Status**

RAID Level	Verify	Verify & Repair
RAID 0	Bad blocks are identified.	N/A
RAID 5	Bad blocks are identified. Parity is recalculated and compared to the stored parity for that stripe.	Bad blocks are reassigned. If the newly calculated parity does not match the stored parity, the stored parity is overwritten with the newly calculated parity.
RAID 1	Bad blocks are identified. Data on the mirrored drive is compared to data on the source drive.	Bad blocks are reassigned. If the data on the mirrored drive does not match the data on the source drive, the data on the mirrored drive is overwritten by the data on the source.

## Initializing, Verifying and Repairing RAID Volume Data

1. Before **verifying** the volume data you will need to **initialize** the volume.
2. Run the **Intel® Rapid Storage Technology enterprise** application from the **Intel** item in the **All Programs** menu.
3. Click the **volume** icon and click **Initialize** in **Volume Properties**.
4. Click **Yes** (button) to begin the process.
5. The completion percentage will be listed under **Information** (Note this process may take some time depending on the number and size of disks).


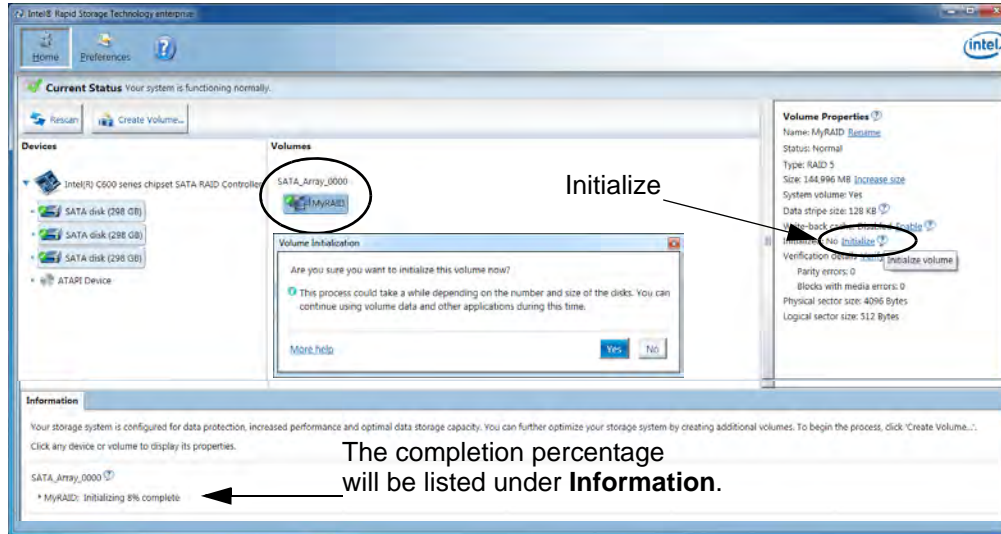




Figure 7 - 5  
Intel® Rapid  
Storage  
Technology  
enterprise  
Initialize

6. After the initialization process you will need to **verify** the volume.
7. Click the **volume** icon and click **Verify**, in **Volume Properties**.
8. Click **Verify** (button) to begin the process.
9. The completion percentage will be listed under **Information**.

Figure 7 - 6  
Intel® Rapid Storage Technology enterprise  
Verify

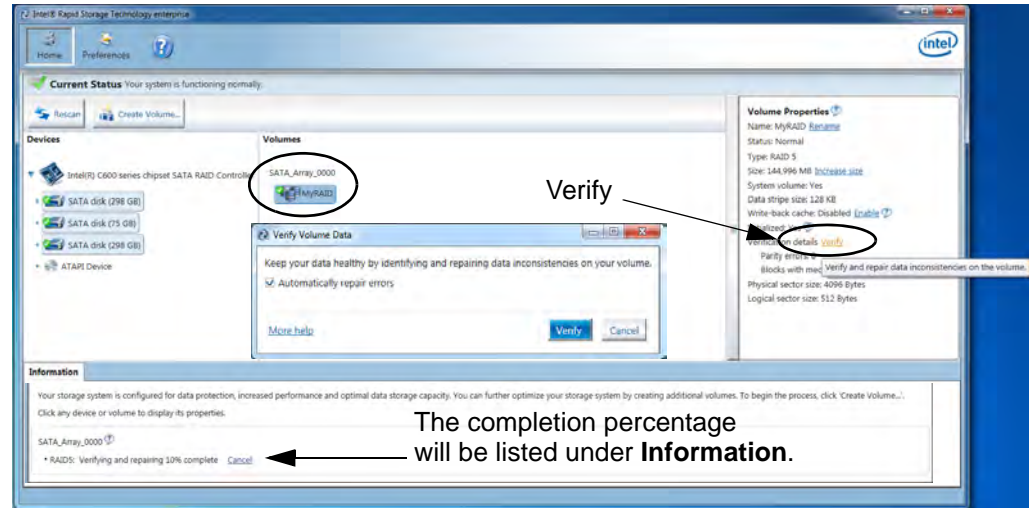

## PC Camera Module

Before installing the driver, make sure the PC Camera is on. Use the **Fn + F10 key combination** or **Touch Sensor Instant Key**  to toggle power to the PC Camera module. When the PC Camera module is powered on the  LED will be highlighted and the LED indicator to the left of the camera will be illuminated in red (see [3](#) *Figure 1 - 2 on page 1 - 6*).

Do not install a camera driver for **Windows 8** as it is not required (see *“PC Camera (Windows 8)” on page F - 25* for information on the **Windows 8** camera application).

Install the camera driver as indicated overleaf and install all the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*. **Make sure you access the application via the desktop shortcut.**



### PC Camera Application and Power-Saving States

If the computer enters **Sleep** or **Hibernate** mode while running the camera application, the program will stop running, and will need to be restarted when the system resumes from the power-saving state.



### Latest PC Camera Driver Information


Check the *Device Drivers & Utilities + User's Manual disc* and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here.

### PC Camera Display

The PC Camera application software needs to be run while the **default notebook LCD** is the selected display device.

After a camera picture is obtained on the default notebook LCD, you may then use the **Fn + F7** to toggle through the display modes (give the screen time to refresh).

### PC Camera Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install Webcam Driver > Yes**.
4. Click **Finish** to restart the computer.  
**OR**  
Click **Next > Finish**.
4. Run the camera application program from the desktop shortcut (if the hardware is turned off **use the Fn + F10 key combination** or **Touch Sensor Instant Key**  to turn it on again). See *“PC Camera (Windows 8)”* on *page F - 25* for *Windows 8* configuration information.



## PC Camera Audio Setup

If you wish to capture video & **audio** with your camera, it is necessary to setup the audio recording options in *Windows*.


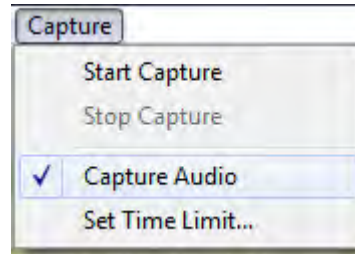
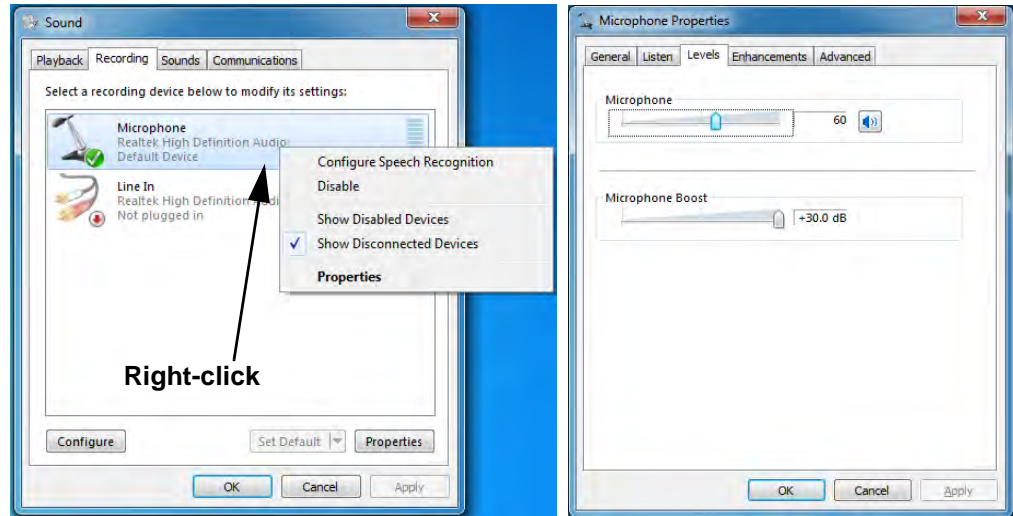
1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound**  (**Hardware and Sound**).
3. Click **Recording** (tab).
4. Right-click **Microphone** (Realtek High Definition Audio) and make sure the item is not disabled.
5. Double-click **Microphone** (or select **Properties** from the right-click menu).
6. Click **Levels** (tab), and adjust the **Microphone** and **Microphone Boost** sliders to the level required.
7. Click **OK** and close the control panels.
8. Run the camera application program from the desktop shortcut.
9. Go to the **Devices** menu heading and select **Microphone (Realtek....)** (it should have a tick alongside it).
10. Go to the **Capture** menu heading and select **Capture Audio** (it should have a tick alongside it).
11. To obtain the best sound recording quality enable **Noise Suppression** in the **Realtek HD Audio Manager** control panel (see [“Setup for Audio Recording” on page 2 - 11](#)).

Figure 7 - 7  
Audio Setup for PC  
Camera



## Camera Application

The camera application is a video viewer for general purpose video viewing and testing, and for capturing video files to .avi format.

1. Run the camera application from the desktop shortcut (it is recommended that you **set the capture file** before the capture process - **see below**).
2. Go to the **Capture** menu heading (if you wish to capture audio check *“PC Camera Audio Setup” on page 7 - 19*) and select **Start Capture**.
3. Click **OK/Yes** (the file location will be displayed in the pop-up box) to start capturing the video, and press **Esc** to stop the capture (you can view the file using the **Windows Media Player**).

## Set Capture File

Prior to capturing video files you may select the **Set Capture File...** option in the **File** menu, and set the file name and location before capture (this will help avoid accidentally overwriting files). Set the name and location then click **Open**, then set the **"Capture file size:"** and click **OK**. You can then start the capture process as on the previous page.

**Note the important information in *“Reducing Video File Size” on page 7 - 22* in order to save file space, and help prevent system problems.**

See *“PC Camera (Windows 8)” on page F - 25* for information on the *Windows 8* camera application.

### Reducing Video File Size

Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select **Properties**) and the remaining free space on your hard disk (go to **My Computer**, right-click the hard disk, and select **Properties**). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

Note that the *Windows* system requires a minimum of **15GB** of free space on the **C: drive** system partition. In order to prevent system problems it is recommended that you save the captured video file to a location other than the **C: drive** (see “*Set Capture File*” on page 7 - 21), limit the file size of the captured video or reduce video resolution (see below).


### To Reduce Video Resolution Output Size:


1. Run the camera application program from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Pin....**
3. Click the **Output Size** drop box and select a lower resolution size in order to reduce the captured file size.
4. Click **OK**.

### Eliminating Screen Flicker

If you find that the video screen in the camera program is flickering, you can try to adjust the setting in the **Video Capture Filter** options.

1. Run the camera application from the desktop shortcut.
2. Go to **Options** and scroll down to select **Video Capture Filter....**
3. Click either **50Hz** or **60Hz** under **Powerline Frequency (Anti Flicker)**.

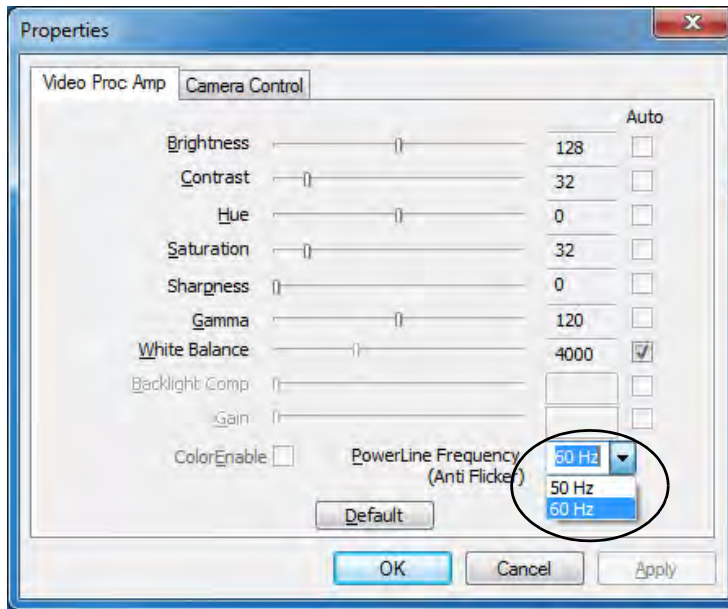



**Latest PC Camera Driver Information**

Check the *Device Drivers & Utilities + User's Manual disc*, and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here, including the figures pictured here.

Figure 7 - 8  
Video Capture Filter



### Snapshot Folder

The Snapshot folder's default location is on the desktop. Do not move this folder or an error may appear when you try to take a still picture.

If you accidentally delete or move the folder, you can create a new Snapshot folder on the desktop in order to capture the files.

### Taking Still Pictures



The camera application allows you to take still pictures.

1. Run the camera application from the desktop shortcut.
2. Go to **Options** and select **Take Picture**.
3. The picture (in JPEG format) will be placed in the **Snapshot** folder on the desktop.



## Wireless LAN Module

If you have included an **Intel®**, **3rd Party 802.11b/g/n** or **Qualcomm Atheros WLAN (Combo) module** in your purchase option, make sure that the Wireless LAN module is on before installing the driver. See *“Wireless LAN Settings (Windows 8)”* on [page F - 30](#) for *Windows 8* configuration information.

Use the **Fn + F11 key combination** or **Touch Sensor Instant Key**  to toggle power to the Wireless LAN module. When the WLAN module is powered on, the  LED will be highlighted. Make sure you install the drivers in the order indicated in [Table 4 - 1, on page 4 - 3](#). The operating system is the default setting for Wireless LAN control in *Windows 7*.

*Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules, however the Qualcomm Atheros WLAN (Combo) module only requires the WLAN driver installation.*

See the appropriate driver installation instructions on the page indicated below:

- See *“3rd Party 802.11b/g/n WLAN Combo Driver Installation”* on [page 7 - 26](#).
- See *“Intel® WLAN Driver Installation”* on [page 7 - 27](#).
- See *“Qualcomm Atheros WLAN Combo Driver Installation”* on [page 7 - 30](#).



### Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F11 key combination/Touch Sensor Key** to toggle power to the WLAN module, and check the LED to see if the module is powered on or not (see [Table 1 - 5, on page 1 - 14/ Table 1 - 1, on page 1 - 8](#)).

### 3rd Party 802.11b/g/n WLAN Combo Driver Installation

1. If you see the message “**Found New Hardware**” click Cancel to close the window.
2. **Make sure the module is powered on**, and then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
3. Click **Option Drivers** (button).
4. Click **2./1.Install WLAN Driver > Yes**.

#### **Either**

5. Choose the language you prefer and click **Next > Next**.
6. Click **Finish** to restart the computer.

#### **OR**

4. Click **Next** (if a prompt appears to ask you to turn the Bluetooth power on, press the **Fn + F12** key combination to do so, otherwise the driver will not be installed).
5. Click **Finish** to restart the computer.

**Note:** The operating system is the default setting for Wireless LAN control in *Windows* (see page 7 - 37). See “*Wireless LAN Settings (Windows 8)*” on page F - 30 for *Windows 8* configuration information.



## Intel® WLAN Driver Installation

For a standard Intel® WLAN driver installation and configuration choose the **Typical Installation** below and use the *Windows OS* for Wireless LAN control (see overleaf). If you want to use **Intel® PROSet/Wireless WiFi Connection Utility** as your WLAN interface see overleaf.

### Typical Installation:

1. If you see the message “**Found New Hardware**” click Cancel to close the window.
2. **Make sure the module is powered on**, and then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
3. Click **Option Drivers** (button).
4. Click **2./1.Install WLAN Driver > Yes**.
5. Click **Next > Next**.
6. Click the button to accept the license and click **Next**.
7. Click **Typical > Install**.
8. Click **Finish**.


**Note:** The operating system is the default setting for Wireless LAN control in *Windows* (see “*Connecting to a Wireless Network in Windows 7*” on page 7 - 37). See “*Wireless LAN Settings (Windows 8)*” on page F - 30 for *Windows 8* configuration information.



### Intel® My WiFi

If you want to install **Intel® My WiFi Technology** (Intel® MWT) to transform your system into a Wi-Fi Personal Area Network see *“Intel® My WiFi Configuration”* on page 8 - 23.

### Custom Installation (for Intel® PROSet/Wireless WiFi Connection Utility):

1. If you see the message **“Found New Hardware”** click Cancel to close the window.
2. **Make sure the module is powered on**, and then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
3. Click **Option Drivers** (button).
4. Click **2./1.Install WLAN Driver > Yes**.
5. Click **Next > Next**.
6. Click the button to accept the license and click **Next > Custom**.
7. Click the icon  alongside the **Intel® PROSet/Wireless WiFi Software** and select **“Entire feature will be installed on local hard drive”** (see *Figure 7 - 9 on page 7 - 29*).
8. Click **Next > Install > Finish**.
9. See *“Connecting to a Wireless Network Using Intel® PROSet Wireless”* on page 7 - 40 for further information.

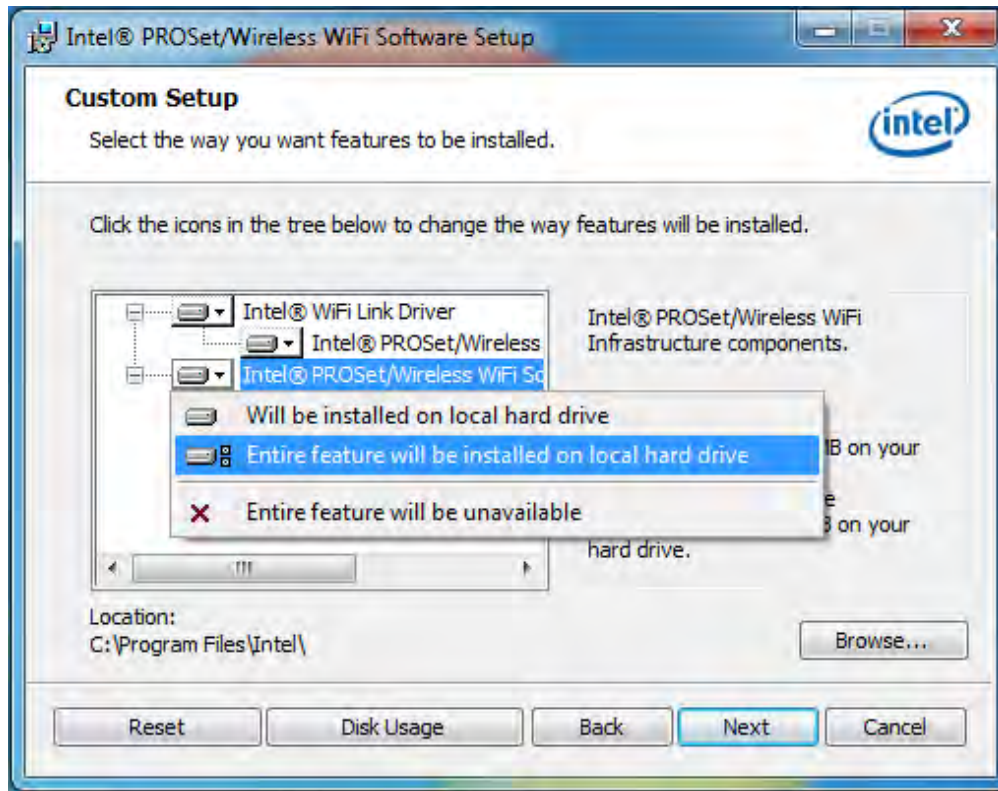



Figure 7 - 9  
Install Intel®  
PROSet/Wireless  
WiFi Software

### Qualcomm Atheros WLAN Combo Driver Installation

1. If you see the message “**Found New Hardware**” click Cancel to close the window.
2. **Make sure the module is powered on**, and then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
3. Click **Option Drivers** (button).
4. Click **2./1.Install WLAN Driver > Yes**.
5. Click **Next > Yes > Next**.
6. Click **Install**.
7. Click **Yes** to restart the computer.
8. The operating system is the default setting for Wireless LAN control in *Windows* (see page [7 - 37](#)), and see “*Standard Bluetooth Configuration in Windows 7*” on page [7 - 71](#) / “*Bluetooth Settings (Windows 8)*” on page [F - 48](#) (note that no Bluetooth driver is required for this module).
9. See “*Qualcomm Atheros Killer Network Manager*” on page [7 - 31](#) for details of the application.

## Qualcomm Atheros Killer Network Manager

You can use the **Qualcomm Atheros Killer Network Manager** to monitor your network connection (use the method outlined on page 7 - 37 to connect to a WLAN access point).

1. Go to the **Qualcomm Atheros Killer Network Manager** by double-clicking the icon  in the **Start** screen or on the **desktop** app.
2. Click any of the menu headings on the left to access the menu:

### Overview

The **Overview** window allows you view the system information, network connection status and a summary of applications using bandwidth.



### Killer Network Manager

The Killer Network Manager allows you to:

View system information, performance and network activity.

Monitor network traffic bandwidth and priorities.


View and control applications using the network.

Optimize the network bandwidth and configure settings.

*Figure 7 - 10*  
**Killer Network Manager - Overview**

### PC Monitor


The **PC Monitor** logs performance information on the computer. Use the drop-down menu to select Processor, Memory, FPS (frames per second), Wireless Signal Strength and Internet Bandwidth. You can click on the graph to display the time and measurement at that point.

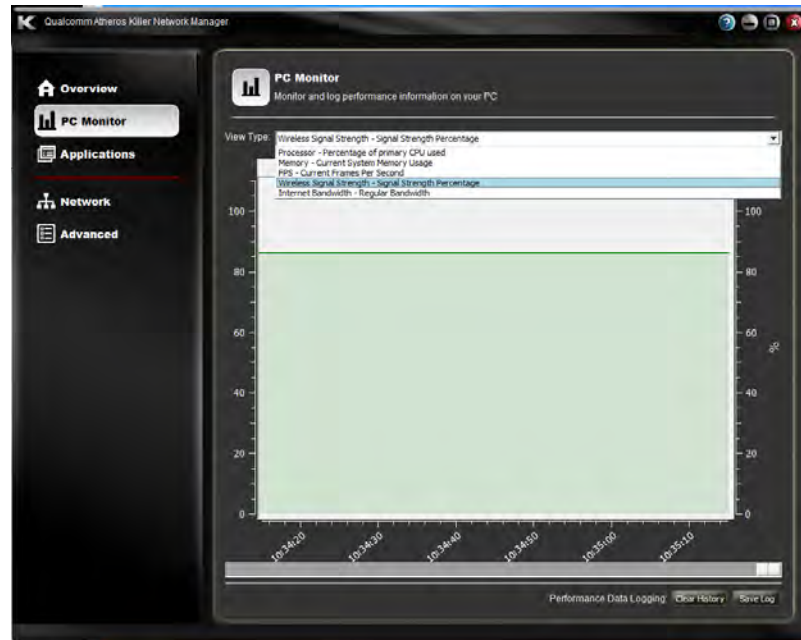

*Figure 7 - 11*  
**Killer Network  
Manager - PC  
Monitor  
(Wireless Signal  
Strength)**

## Applications

The **Applications** window allows you to view network applications and prioritize how each one uses any available bandwidth. The numbers to the left indicate the current priority level for the application, from **1 - highest to 4 - lowest**. Click in an application to expand the item, and click the number to change the priority level, or click **Allow/Block** to change the status.

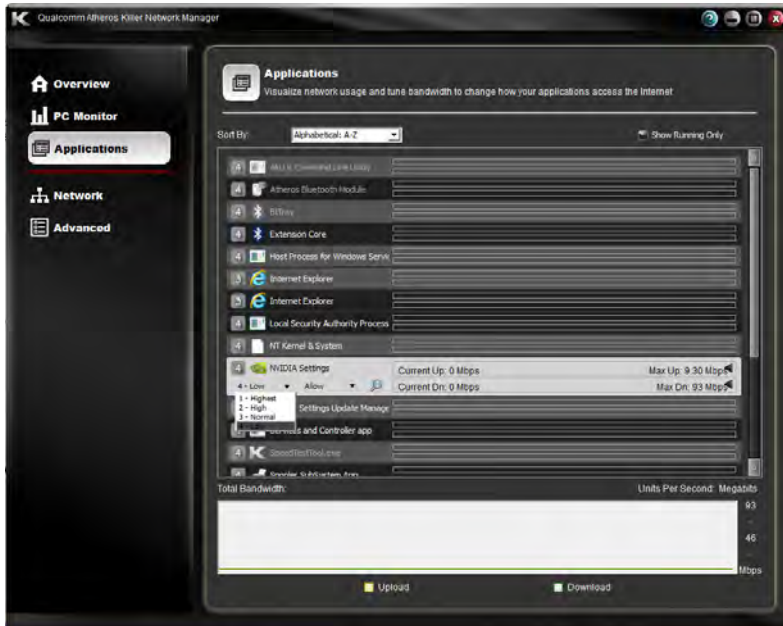

### Changing Application Bandwidth


To change the Upload or Download bandwidth position your cursor over the arrow on the right side of the bar. Click and drag the icon to adjust the setting. This will now limit internet traffic for the application to this speed.

7

Figure 7 - 12  
Killer Network Manager - Applications

### Network

Configure the network connection settings and internet provider bandwidth speed from the **Network** window. Click **Test** to run a test of your bandwidth, and when complete use the results to configure the optimal upload and download bandwidth for the Killer Network Manager (these are the maximum values displayed in Applications).

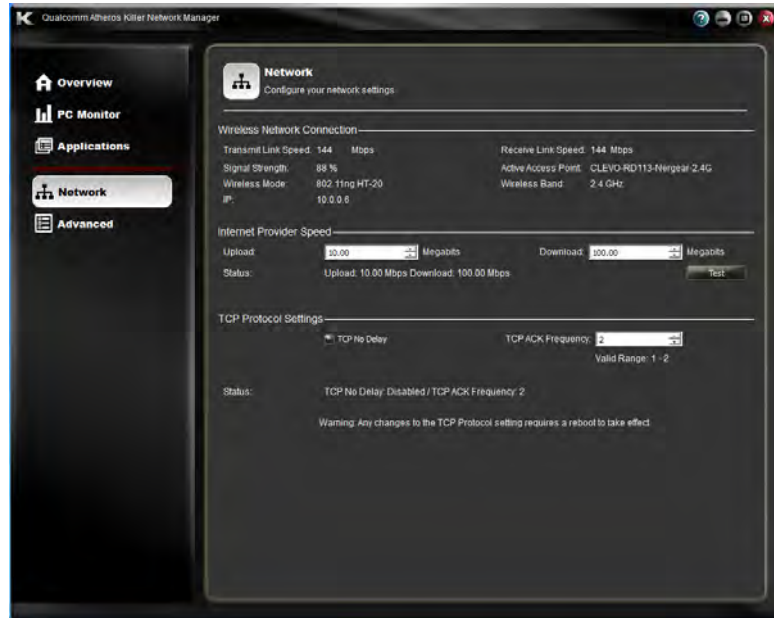


*Figure 7 - 13*  
**Killer Network  
Manager - Network**




## Advanced

Customize Killer Network Manager features from the **Advanced** window. Here you can change items displayed in Overview, configure default settings for Applications and features such as updates, closing dialog, bandwidth units displayed and performance statistics.

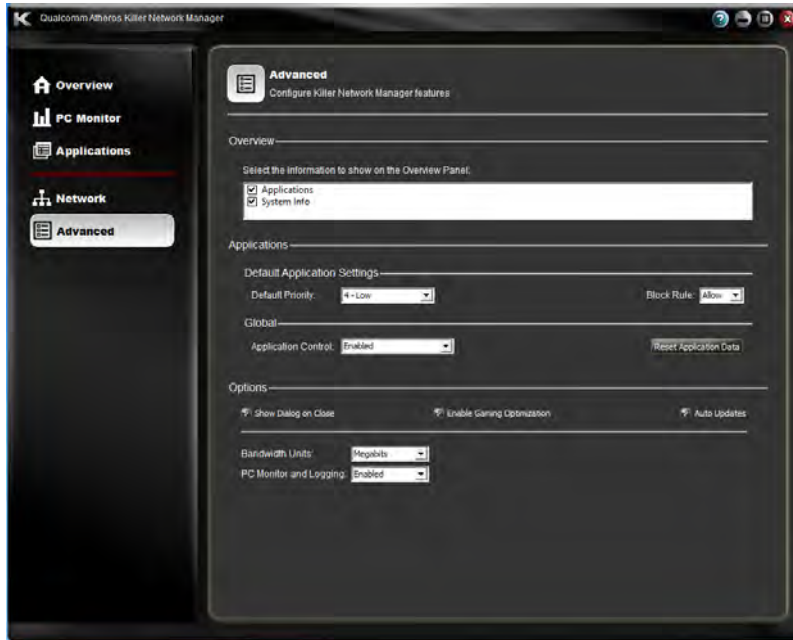


### Help




To access the **Help** menus click the icon  at the top right of the application. Click **Table of Contents** to display the menu.

*Figure 7 - 14*  
**Killer Network  
Manager - Advanced**

### Quitting Killer Network Manager


Clicking the close  icon simply minimizes the application to the system tray, and it will continue to run in the background. To quit the application **right-click** the icon in the system tray and select **Quit** from the menu.

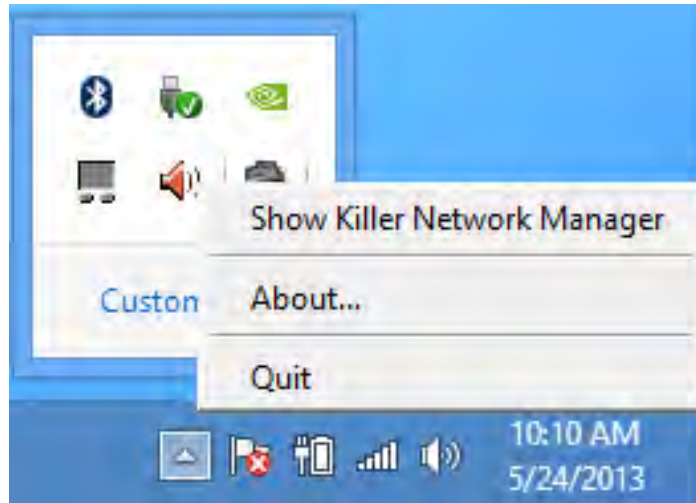


**7**  
*Figure 7 - 15*  
**Killer Network  
Manager - Quit**

## Connecting to a Wireless Network in Windows 7

Make sure the Wireless LAN module is turned on.

1. **Click** the taskbar wireless icon , and then double-click an access point to connect to or click to **Open Network and Sharing Center** if you do not see a network you want to connect to in the taskbar menu (a list of options will appear allowing setting changes, and creating a new network).

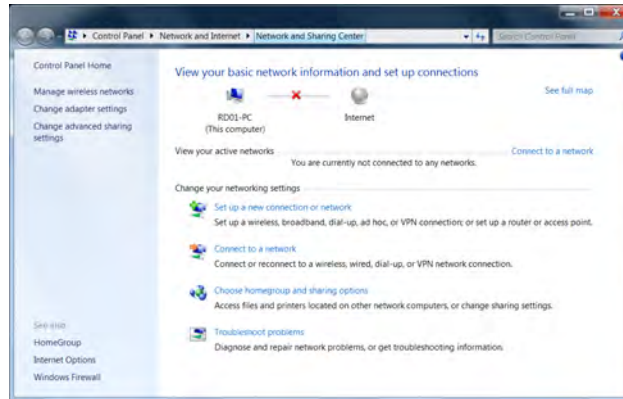


### Network and Sharing Center



You can also use the **Network and Sharing Center** control panel in Windows (**Network and Internet**) to connect to any available wireless networks.


*Figure 7 - 16*  
**Click Taskbar Icon Menu & Network and Sharing Center**


2. You may need to enter a security key for any access point to which you are trying to connect.
3. Click to select a network location (e.g. **Home, Work or Public**).
4. Click “**View or change settings in Network and Sharing Center**” to access further options for the connection.

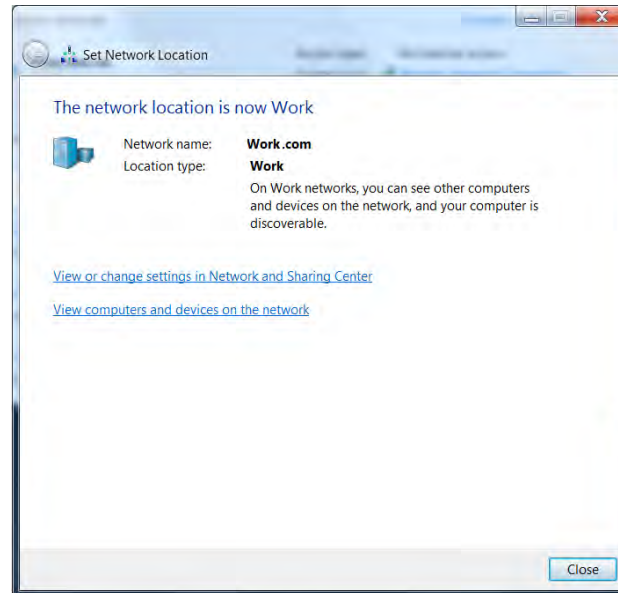*Figure 7 - 17*  
**Network Location Set**



5. Click the taskbar icon  to see any currently connected networks.
6. To disconnect from the wireless network you can click the taskbar wireless icon , click the active connection and then click **Disconnect** (button).

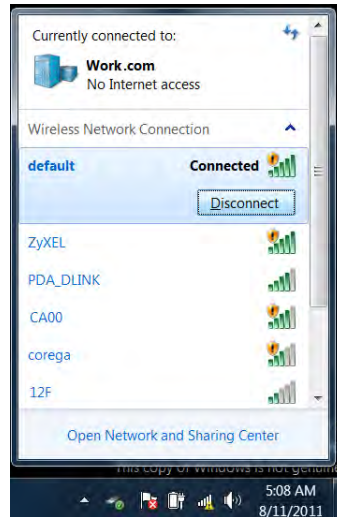



### Security Enabled Networks

You should try to make sure that any network you are connecting to is a secure network.

Connecting to unsecure networks may allow unauthorized access to your computer, documents, web-sites and files etc.


7

*Figure 7 - 18*  
**Click Taskbar Icon Menu - Disconnect**

### Connecting to a Wireless Network Using Intel® PROSet Wireless

*(For Intel® WLAN Modules Only)*

1. Make sure the Wireless LAN module is on.
2. Access the **Intel® WiFi Connection Utility** from the **Start** menu (**Start > All Programs > Intel PROSet Wireless > WiFi Connection Utility**).
3. Click to select a network from the found list WiFi network access points, or click **Refresh** to update the list.

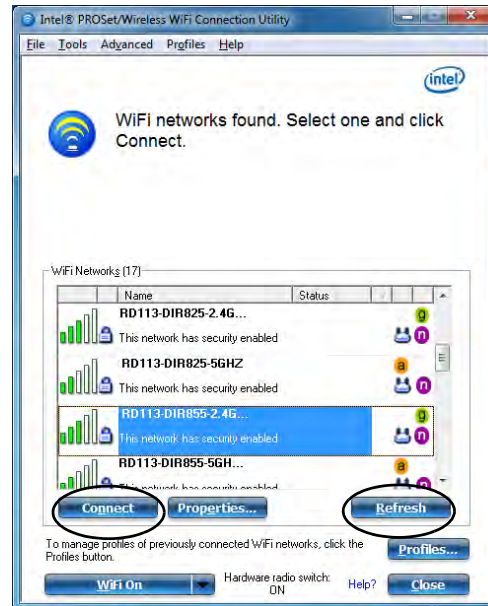

*Figure 7 - 19*  
**Intel® PROSet/  
Wireless WiFi  
Connection Utility  
(Connect)**

4. Click **Connect** to connect to the select WiFi network access point.
5. If the access point is encrypted then you will need to enter the password and click **OK**.

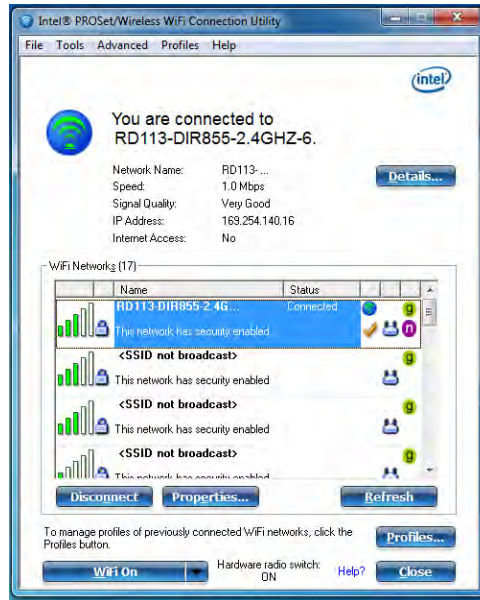



Figure 7 - 20  
Intel® PROSet/  
Wireless WiFi  
Connection Utility  
(Connecting &  
Connected)


6. You can turn **WiFi On/WiFi Off** from the button at the bottom of the Utility.
7. To disconnect, select the connected access point and click **Disconnect**.
8. Select **Help** from the menu at the top of the utility (or at the bottom right) to bring up the **Help** menu.

## Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

To access the Windows Mobility Center:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Windows Mobility Center (Mobile PC)**.
3. Click the button to **Turn wireless off/on**, or click the icon  to access the network menu.

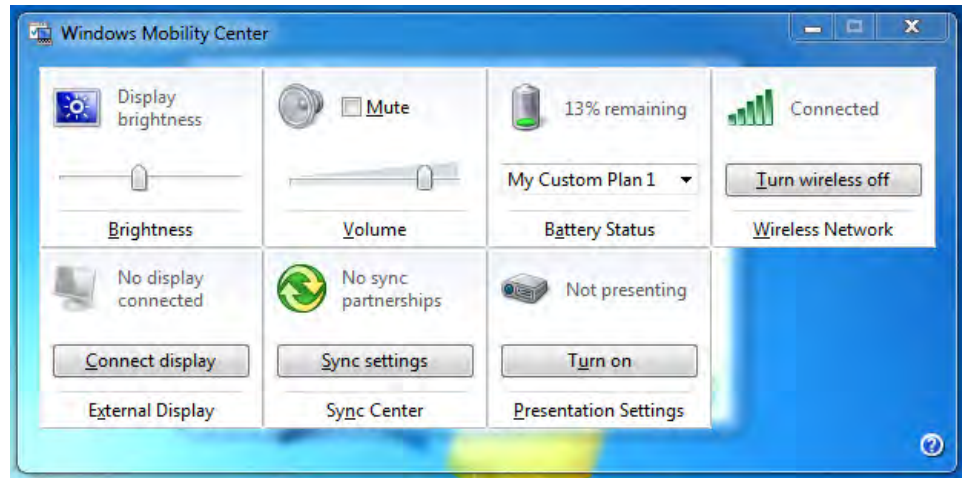

*Figure 7 - 21*  
Windows Mobility  
Center



## Security Modules (Fingerprint & TPM)

The encrypted channel between the **Trusted Platform Module security chip** (see *“Trusted Platform Module” on page 7 - 75*) and the **fingerprint reader** with application software (see *“Fingerprint Reader Module” on page 7 - 44*) provides a high level of security for your computer. A further level of security and control is provided in the BIOS (see *“Security Menu” on page 5 - 11*).

The **fingerprint reader** and application software allow you to:

- Access or Lock your computer
- Protect sensitive files
- Access frequently used websites using your fingerprint



### Password Warning

If you set passwords for any of the security modules, **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

# Fingerprint Reader Module

The fingerprint reader module provides a high level of security for your computer. Make sure you have administrator's rights to your computer, and have a **Windows** password enabled for full security protection.

There are three fingerprint applications supplied with this model. Install the driver from the **Device Drivers & Utilities + User's Manual** disc and follow the appropriate instructions on the following pages.

- See overleaf for driver installation on the two of the applications applicable to **Windows 7**.
- See pages **7 - 46** to **7 - 55** for information on the **AuthenTec TrueSuite** application (for **Windows 7** only).
- See pages **7 - 56** to **7 - 66** for information on the **BioExcess** application (for **Windows 7 & Windows 8**).
- See pages **7 - 56** to **7 - 66** for information on the **Protector Suite** application (for **Windows 8 only**).

## AuthenTec TrueSuite Fingerprint Reader Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **3.Install Fingerprint Driver > Yes**.
4. Click **Next**.
5. Click the button to accept the license and click **Next**.
6. Click **Next > Install**.
7. Click **Finish > Yes** to restart the computer.
8. Click **Start > All Programs > AuthenTec TrueSuite**.

## BioExcess Fingerprint Reader Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **3.Install Fingerprint Driver > Yes**.
4. Click **Next** (the system will take some time to install the application).
5. Click **Finish** to restart the computer.
6. Click **Start > All Programs > EgisTec > BioExcess**.

For information on setting up the Fingerprint Reader for *Windows 8* see “*Fingerprint Reader Module (Windows 8)*” on page F - 37.



### Fingerprint Enrollment

Note that it is strongly recommended that you enroll more than one finger in case of injury etc.

## AuthenTec TrueSuite Application

The **AuthenTec TrueSuite** application is used in conjunction with your fingerprint reader to enroll fingerprints and manage settings etc.

### User Enrollment

1. Click **Start > All Programs > AuthenTec TrueSuite**.
2. Click **Yes** when you have identified your **fingerprint sensor** (11 Fingerprint Reader Module in *Figure 1 - 2 on page 1 - 6*).
3. Click **Yes** when you are ready to enroll your fingerprints.
4. Click on the fingerprint diagram to select any finger to enroll.
5. You will be required to enter your **Windows** password (you will be prompted to create a password if you have not already done so) at this point (click **OK** to confirm the password entry).
6. Swipe the finger until the progress bar reaches **100%** to enroll that finger.


*Figure 7 - 22*  
**Fingerprint Enrollment**



7. You will be prompted to select another finger for enrollment (it is recommended that you enroll a number of fingers - see sidebar).
8. Click the button to continue once you have enrolled a number of fingerprints.
9. Enter the required information and click the button to register your software, or click to register later.
10. Your fingerprints will now be enrolled (you may enroll any additional fingerprints at any time).



### Help

Click the **Help**  icon and select a help topic from the drop-down menu. **Get more help** will provide a more comprehensive list of help topics.

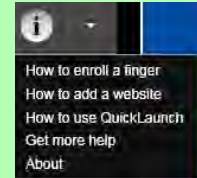



Figure 7 - 23  
AuthenTec  
TrueSuite

### Settings

Click the **Settings**  button on the menu bar to access the personalization settings for **AuthenTec TrueSuite**. Here you can choose to enable/disable Website Log On, QuickLaunch, Fast User Switching and the desktop icon. You can also select the Theme and export/import identities. Click the **Save** button to save any changes made.



**7** *Figure 7 - 24*  
**AuthenTec  
TrueSuite - Settings**

## Windows Log On

Windows log on allows you to gain access to your computer by swiping your finger across the fingerprint reader sensor. Use the **Biometric Devices** control panel (in the **Hardware & Sound** category) in *Windows* to turn **Biometrics on/off** when required. Access the **Biometric Devices** control panel and select **Change biometric settings** to turn the biometrics on or off, or to allow users to log on to *Windows* using fingerprints.

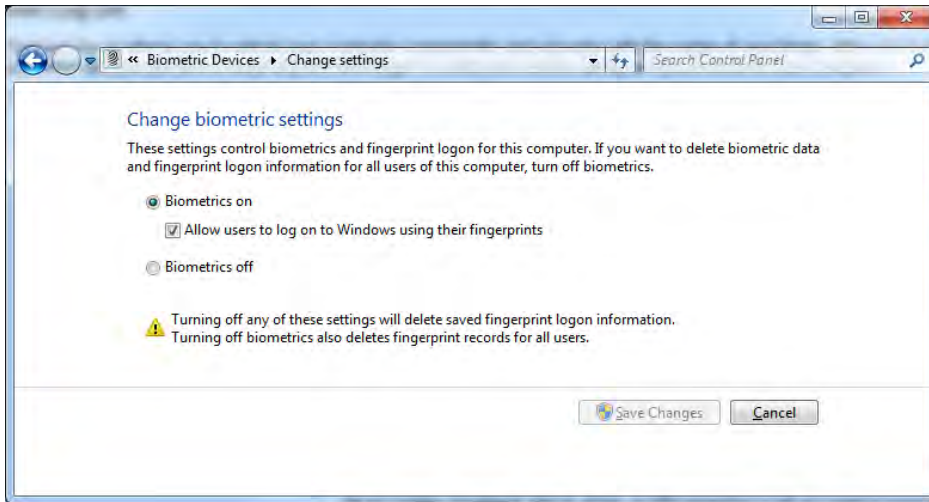


Figure 7 - 25  
Biometric Devices  
Control Panel  
(Windows Hardware  
& Sound)

When Biometrics is on, and “*Allow users to log on to Windows using their fingerprints*” is enabled, simple swipe you finger across the reader to log on to *Windows*.


### Website Log On

Use a fingerprint swipe to log on to websites to help you avoid having to remember user names and passwords across multiple websites (browsers supported are Internet Explorer, Firefox and Chrome).

### Registering a Website


1. Use your web browser to navigate to the website required.
2. Enter your user name and password and sign in to the website.
3. An **AuthenTec TrueStudio** dialog box will pop-up.
4. Click **Save Password** to register the website.

*Figure 7 - 26*  
**Save Password**

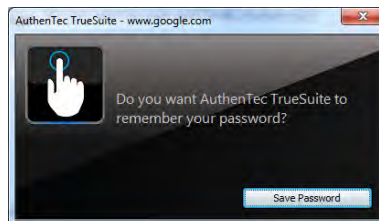

5. The website will now be registered (and your log on and password information will be bolometrically stored) and you will be prompted to swipe a finger to log on to the website in future.

*Figure 7 - 27*  
**Log On to Website**

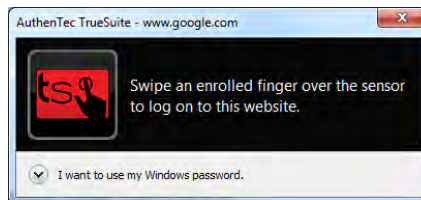



## QuickLaunch

**QuickLaunch** allows you to drag and drop icons (which represent websites, folders, applications and/or computer actions) to any enrolled finger and then swipe your finger to launch the icons assigned to that finger.

1. Click **Start > All Programs > AuthenTec TrueSuite**.
2. Click **Select Category**  (button) to group icons if required.
3. Drag and drop an icon to an enrolled finger.
4. To launch the website, folder, application and/or action just swipe your finger across the sensor.
5. If you have entered the log on information for the website then a single swipe will launch the website(s), load the log on page and log on to your account.



*Figure 7 - 28*  
**QuickLaunch**

### Adding a Website to QuickLaunch

1. Click **Start > All Programs > AuthenTec TrueSuite**.
2. Click the **Add Website** button on the menu bar and the dialog box will be displayed.
3. Enter the website URL, name, icon and category as required.
4. Click **Save** and an icon will be associated with the selected website.
5. To **delete** an icon right-click it and select **Delete Icon** and it will no longer be associated with the finger.



7  
*Figure 7 - 29*  
**QuickLaunch**  
**Add Website**

## Dock View

Dock View displays the website icons across the bottom of the screen. Each icon will have an associated web card which displays the website information, user name and password etc. This information may be edited or deleted as required.



Figure 7 - 30  
Dock View

## Editing a Web Card


1. Click **Start > All Programs > AuthenTec TrueSuite.**
2. Left-click a web card to bring up the associated information.
3. You can click the reveal/hide password button  to see or hide the password.
4. Make any changes required and click Save to confirm the changes.
5. To delete a web card left-click it and click the **Delete** icon.
6. Click **Print** to print and web card and the password will be shown in plain text.
7. You can **Print all web cards** from the menu bar button if required.



Figure 7 - 31  
QuickLaunch  
Add Website

### Exporting and Importing Your Identity

You can export your identity to backup your information, or to move it to another computer.

#### Exporting Your Identity

1. Click **Start > All Programs > AuthenTec TrueSuite**.
2. Click the **Settings** button on the menu bar.
3. Click **Export My Identity**.
4. You will be required to enter and confirm a passphrase and click **Next**.
5. Browse to a location to **Save** the file.
6. Swipe a finger to confirm the export.

#### Importing Your Identity

1. Click **Start > All Programs > AuthenTec TrueSuite**.
2. Click the **Settings** button on the menu bar.
3. Click **Import My Identity**.
4. Browse to the location where the file is saved.
5. Select the file and click **Open**.
6. Type your passphrase and click **Next**.
7. The information will then be imported.

## AuthenTec KeepSafe

The **KeepSafe folder** is an encrypted area assigned on your hard drive that allows you to store files and folders to be protected by fingerprint protection. The folder will appear on your desktop (if selected in the **Personalization Settings**) and in My Computer, but will not be visible to other users of your computer.

To **lock/unlock** the **KeepSafe** folder right-click it to display the context menu and select **Unlock/Lock**. You will be required to authenticate when unlocking the folder using either a fingerprint swipe or *Windows* password.

To add files to **KeepSafe** folder just open the folder and drag and drop files into the folder. You may also right-click any file to bring up the context menu and select **Add to KeepSafe** (you can select whether or not to keep or delete the original file).

# BioExcess Application


The **BioExcess** application is used in conjunction with your fingerprint reader to enroll fingerprints and manage settings etc.

## User Enrollment

1. Click **Start > All Programs EgisTec > BioExcess**.
2. Identify your **fingerprint sensor** (11 Fingerprint Reader Module in [Figure 1 - 2 on page 1 - 6](#)).
3. Click **Next** when the **Initial Wizard** appears.
4. Swipe a finger to practice enrollment (click **Next** to skip this step).


7

*Figure 7 - 32*  
**Enrollment Tutorial**

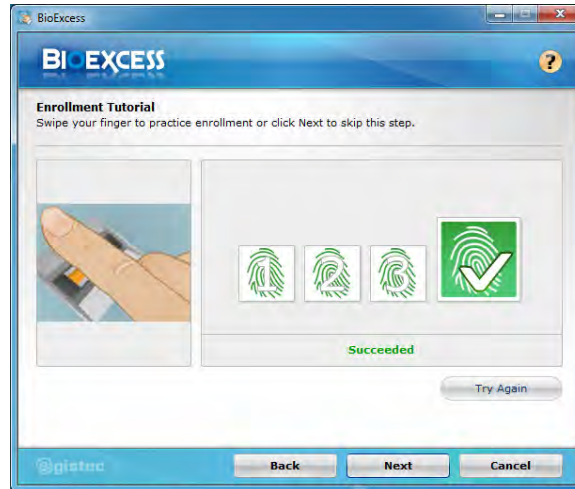

5. Enter your **Windows** log on **password**, and then click **Next**.
6. Click on the fingerprint diagram to select any finger to enroll.
7. Swipe the finger until the finger is enrolled and then repeat for other fingers.
8. Click **Next** to continue once you have enrolled a number of fingerprints.





**Fingerprint Enrollment**


Note that it is strongly recommended that you enroll more than one finger in case of injury etc. See page 8 - 14 for further information on scanning fingers

*Figure 7 - 33*  
**Fingerprint Enrollment**

9. Click **Finish** when the **Initialization Successful** message appears (if you have selected **Launch Control Center** then it will be run on exiting the wizard).

### BioExcess Control Center

Click **Start > All Programs EgisTec > BioExcess** and swipe a registered finger to run the **Control Center** (or swipe a finger across the fingerprint sensor and select Control Center from the **BioExcess Menu**).

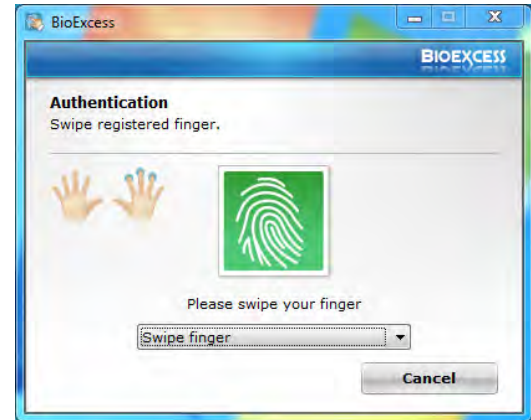


*Figure 7 - 34*  
**BioExcess Menu & Authentication**



Use the **Control Center** to adjust all the BioExcess application settings. Click on any of the menu headings to access the sub-menu to adjust functions or settings including **Fingerprint Management**, **Data Protection**, **Online Accounts Management**, **General settings** and **Information**.



**Help**

Click the **Help**  icon and select a help topic from the drop-down menu. Select a topic from the **Contents** menu or **Search** for help on a specific area.

*Figure 7 - 35*  
**Control Center**

### Fingerprint Management

**Fingerprint Enrollment:** You can add or delete enrolled fingers by clicking in the box above any of the fingers.

**Application Launcher:** Use any of your fingers to launch any chosen **application, website, online account** or use **Launch Express** to launch functions such as Shut Down, Windows Lock etc. Click **OK** to save any changes made to these settings.

- Click on any of the boxes above an enrolled finger and select the item from the drop-down menu.




Figure 7 - 36  
Application  
Launcher

- Simply drag and drop an **executable file** onto any enrolled fingers to launch an application, or click and select **Launch Application** and then browse to the executable file.
- Select **Launch Web Site** and then input the URL to use a finger to go to any website.
- **Auto Login** will prompt you to choose an account to select to login to when a finger is swiped.
- **Launch Express** will allow you select one of a number of functions (e.g. shutting down the computer) when the appropriate finger is swiped.




Figure 7 - 37  
Launch Express

### Data Protection


**File Encryption/Decryption:** Click **Add** or drag and drop any file for encryption/decryption. Click **Encrypt** and you will be asked for a backup password for the file. You can right-click any file and select **Decrypt/Encrypt File** from the BioExcess item in the menu. See the **Help**  file for further information.

**Secure Drive Access:** You can access your secure drive here. The secure drive is a personal virtual drive that may only be open and closed by means of the authenticated fingerprint or password. Use the **BioExcess Menu** (swipe a finger across the sensor) or the click the icon in the notification area of the taskbar to open and close (make sure you have saved any file data before closing) the secure drive. See page [7 - 64](#) for information on how to set the drive's **location** and **capacity**.


*Figure 7 - 38*  
**Taskbar Notification Area Menu (Open/Close Secure Drive)**

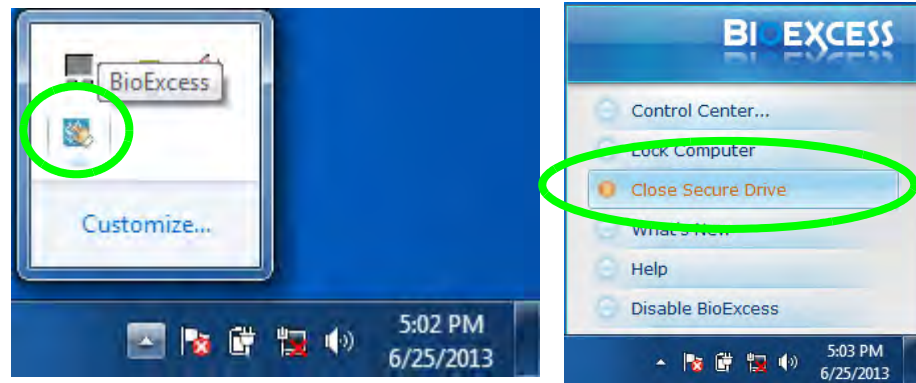

## Online Accounts Management

You can store user IDs and passwords for websites and/or applications and the software will then automatically fill in your log on and password information for you when you swipe your finger. When you visit a registered website or program you will see a BioExcess icon in the top left of the screen prompting you to swipe a finger to log on. See **Help**  for more information on registering and managing online accounts.

**Security Check** will assess the password strength for any of your online accounts by indicating if it is weak, medium or strong. If your password is assessed as weak then it is suggested you change it.

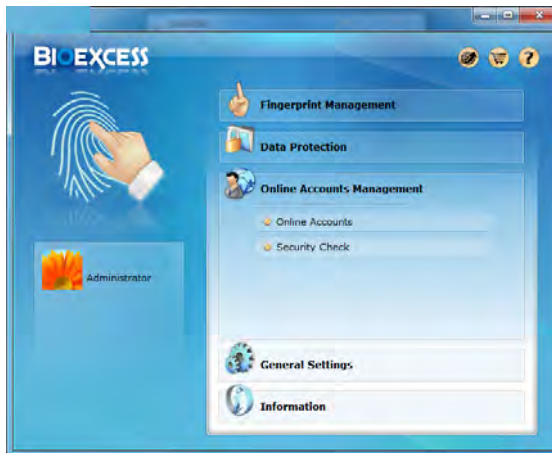


*Figure 7 - 39*  
**Control Center**  
**Online Accounts**  
**Management**

### General Settings

**User Settings: Fast User Switch** enables multiple users to switch to their own *Windows* environment with the swipe of a finger. Use **Pre-Boot Authentication** to prevent the *Windows* OS from loading until the password has been confirmed.


**Password Settings:** You can change your backup password and *Windows* password settings from this menu.

**Secure Drive Settings:** You can **open/close**, **change drive location** and **change the capacity** of the secure drive from this menu.

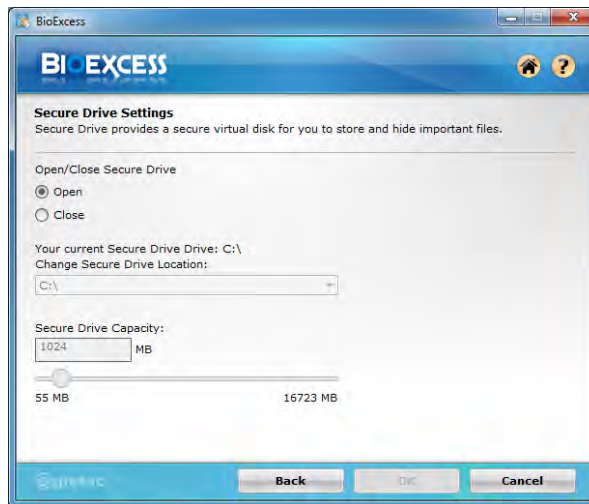

7  
*Figure 7 - 40*  
**Control Center**  
**Secure Drive**  
**Settings**

**Data Backup Settings:** Use this menu to set the **location** of the back up data (click **Browse** and set location), manage the backup password and to select which items are backed up (enrolled fingerprints and online accounts data).

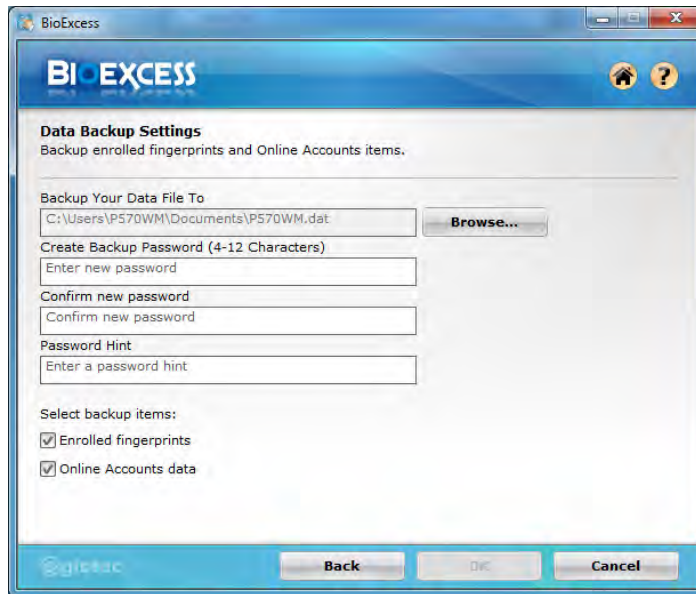

*Figure 7 - 41*  
**Control Center**  
**Data Backup**  
**Settings**

**Data Restore Settings:** If you need to restore previously backed up data then do so from this menu. Click **Browse** and go the location of the original backup, and input the password.

### Information

These menu items provide online information on your software version, support and any new features. You can also access the animated **Tutorial** on **Online Accounts**, **Swipe One** and **Secure Drive**.

*Figure 7 - 42*  
Control Center  
Information





## Bluetooth Module

If your purchase option includes the **Combination Wireless LAN Bluetooth module** (either **Intel®** or **3rd Party**) then install the driver as instructed (note that the **Qualcomm Atheros WLAN (Combo) module** only requires the WLAN driver installation).

If your purchase option includes a **standard V2.1 Bluetooth module**, then the operating system's **Bluetooth Devices** control panel is used to configure the Bluetooth settings in *Windows 7*, and therefore does not require a driver.



### Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported). Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

*Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules, however the Qualcomm Atheros WLAN (Combo) module only requires the WLAN driver installation.*



### Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.




Use the **Fn + F12** key combination to toggle power to the Bluetooth module, and check the LED indicator to see if the module is powered on or not (see [Table 1 - 5](#), on page 1 - 14/ [Table 1 - 1](#), on page 1 - 8).

## Modules



### Bluetooth Headset Stereo Setup

To setup a Bluetooth headset to support stereo audio see page **8 - 18**.

Use the **Fn + F12** key combination or **Touch Sensor Instant Key**  to toggle power to the **Bluetooth module**. When the Bluetooth module is powered on the  LED will be highlighted and the indicator  will briefly be displayed.

- For **3rd party Bluetooth V2.1 +EDR modules** see “*Standard Bluetooth Configuration in Windows 7*” on page **7 - 71** (no driver is required).
- For **3rd party Bluetooth modules** see the information provided overleaf on the **two drivers** provided.
- For **Intel Bluetooth combo modules** see “*Intel Bluetooth Combo Driver Installation*” on page **7 - 70** and “*Standard Bluetooth Configuration in Windows 7*” on page **7 - 71**.
- See “*Fingerprint Reader Module (Windows 8)*” on page **F - 37** for **Windows 8** configuration information.

### 3rd Party Bluetooth (V4.0) Combo Driver Installation

1. **Before installing the driver make sure the Bluetooth module is powered on** (use **Fn + F12** key combination), then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive. If a *Found New Hardware* window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
2. Click **Option Drivers** (button).
3. Click **4./3.Install Combo BT Driver > Yes**.
4. Click **Next**.
5. Click **Finish** to restart the computer.
6. See *“Standard Bluetooth Configuration in Windows 7” on page 7 - 71* for configuration instructions. See *“Bluetooth Settings (Windows 8)” on page F - 48* for *Windows 8* configuration information.



### High Speed Bluetooth Data Transfer

The **Combination Wireless LAN Bluetooth module** supports high speed data transfer. However to achieve such transfer speeds, **both devices must support high speed data transfer.**

To obtain high speed data transfer make sure that both the **WLAN and Bluetooth modules are powered on.**

Check your Bluetooth compatible device's documentation to confirm it supports high speed data transfer.

### Intel Bluetooth Combo Driver Installation




1. **Before installing the driver make sure the Bluetooth module is powered on** (use **Fn + F12** key combination), then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive. If a *Found New Hardware* window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
2. Click **Option Drivers** (button).
3. Click **4./3.Install Combo BT Driver > Yes.**
4. Click **Next > Next.**
5. Click the button to accept the license and click **Next.**
6. Click **Next > Finish.**
7. See over for configuration instructions. See *“Bluetooth Settings (Windows 8)” on page F - 48* for *Windows 8* configuration information.


## Standard Bluetooth Configuration in Windows 7

### Setup your Bluetooth Device so the Computer Can Find it


1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

### To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.
2. A Bluetooth icon  will appear in the notification area.
3. You can then do any of the following to access the **Bluetooth Devices** control panel.
  - **Double-click** the notification area icon  to access the **Bluetooth Devices** control panel.
  - **Click/Right-click** the notification area icon  and choose an option from the menu.

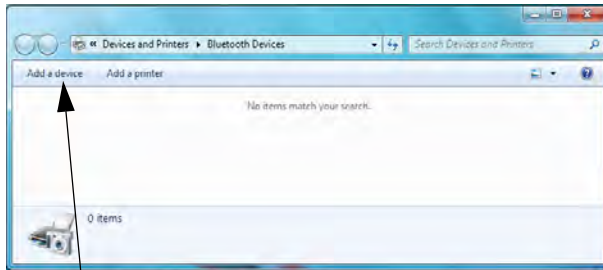

Add a device

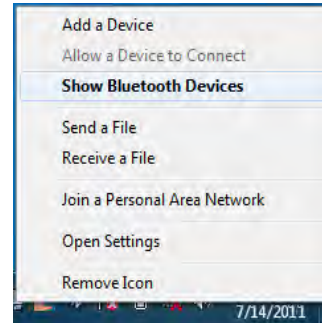

Right-Click Notification Area Icon 



### Add a Device

Click **Start**, and click **Control Panel** and then click **Devices and Printers (Hardware and Sound)**. Click **Add a device** to search for any available Bluetooth devices.

### Bluetooth Module & Resuming From Sleep Mode

The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Figure 7 - 43  
Bluetooth Devices & Click Icon Menu



### Pairing Options


If a device has been previously connected then the pairing option menu will appear when you attempt subsequent connections. You can choose to have the computer create a pairing code for you, use the device's existing pairing code or you can pair certain devices without using a code.

7

*Figure 7 - 44*  
**Add a Device**


### To Add a Bluetooth Device


1. Access the **Bluetooth Devices** control panel and click **Add a device**.
2. Double-click the device you want to pair with the computer.

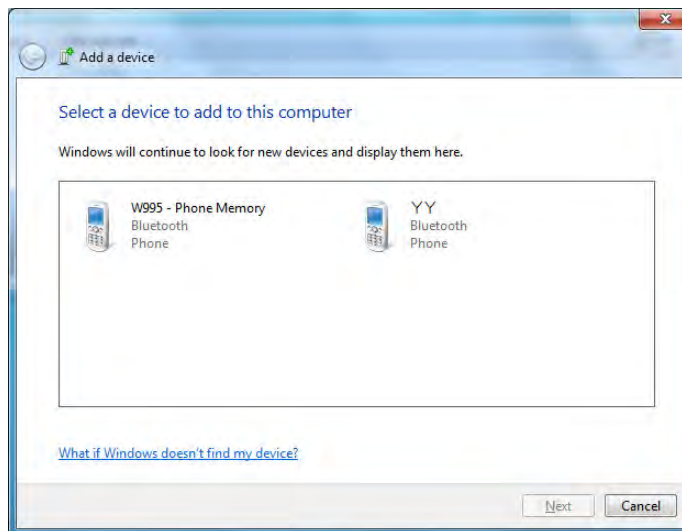

3. On first connection the computer will provide you with a pairing code to be entered onto the device.

4. Enter the code into your Bluetooth enabled device and follow any on-screen instructions to complete the pairing.

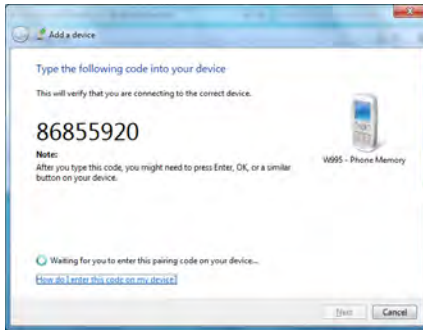





### Pairing Codes

The example outlined here shows a connection to a mobile device. Other devices e.g. computers, may have a slightly different connection procedure, and may require you to confirm a pairing code is correct on both devices. Follow the on-screen instructions to complete the pairing.

*Figure 7 - 45*  
**Pairing Code Example**

5. **Windows** will check to see if any drivers are required to complete the pairing.
6. Follow any on-screen instructions on the computer if device drivers are required to be installed.
7. Click **Close**.

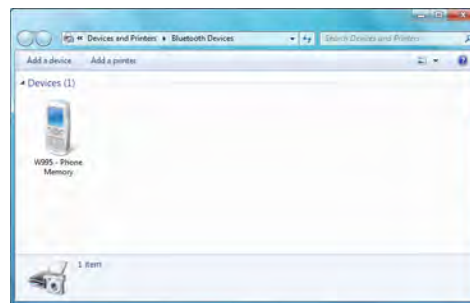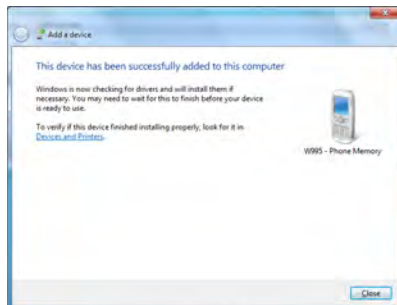

*Figure 7 - 46*  
**Pairing Complete & Bluetooth Device Enabled**



### Bluetooth Help

To get help on Bluetooth configuration and settings, select **Help and Support** from the **Start** menu. Type Bluetooth in the **Search Help** box, and select an item from the returned search results to get more information.

### To Change Settings for the Bluetooth Device

1. Click the notification area icon and select **Show Bluetooth Devices**.
2. Right-click on the device you want to change and click **Properties** to:
  - Change the **name** of the device (click **Bluetooth**, type a new name and click **OK**).
  - Enable/Disable a **service** (click **Services**, clear/tick the check box next to the service and click **OK**).

### To Make your Computer Discoverable to Bluetooth Devices

1. Click the notification area icon and select **Open Settings**.
2. Click **Options**, and make sure that **Allow Bluetooth devices to find this computer** check box (**Discovery**) has a tick inside it.
3. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

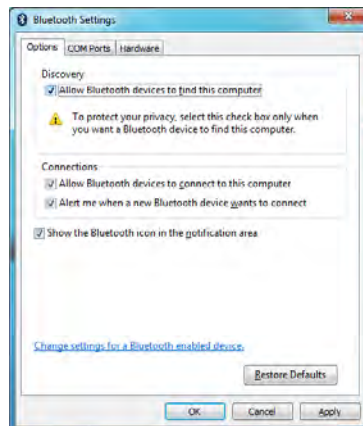


Figure 7 - 47  
Bluetooth Settings -  
Options



## Trusted Platform Module

The **TPM security chip** allows you to create and manage digital certificates for user and platform authentication. This type of security is usually administered within large enterprises and organizations, and therefore requires implementation by a system administrator before users can access security features.


Individual users can use the TPM as an authentication with the fingerprint reader.

Make sure you have administrator's rights to your computer, and have a *Windows* password enabled for full security protection. In addition **Make sure you prepare a removable media (e.g. a USB flash drive) to store passwords etc. before beginning the TPM initialization process.**

Before setting up the TPM functions you must initialize the security platform.

## Enabling & Activating TPM

1. Restart the computer.
2. Enter the **Aptio Setup Utility** pressing **F2** during the POST/startup.
3. Use the arrow keys to select the **Security** menu.
4. Select **Trusted Computing** and press Enter to access the sub-menu.
5. Press Enter to access the **TPM Support** menu and select **Enable** to display the full **TPM configuration** menu.
6. Select **TPM State**, press Enter and select **Enable** to change the TPM state to enabled. You will then need to press **F4** to save the changes and restart the computer.

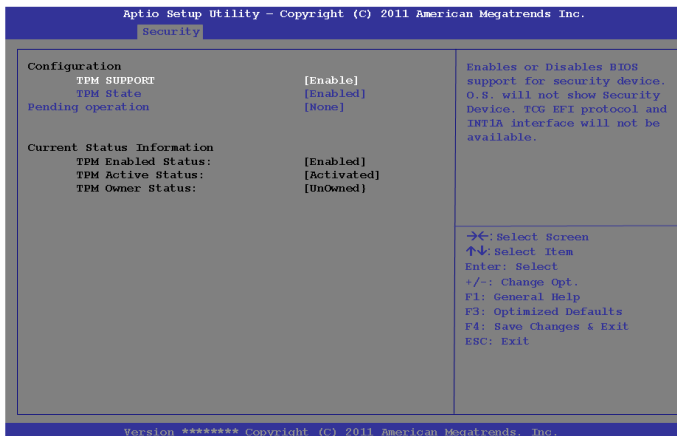

*Figure 7 - 48*  
**TPM State**  
**(Enabled)**

7. As the computer restarts press **F2** to enter the BIOS again and go to the **TPM Configuration** menu.

- Select **Pending TPM operation**, press Enter and select the option you require (if you are initializing TPM you should select **Enable Take Ownership**). You will then need to press **F4** to save the changes and restart the computer.

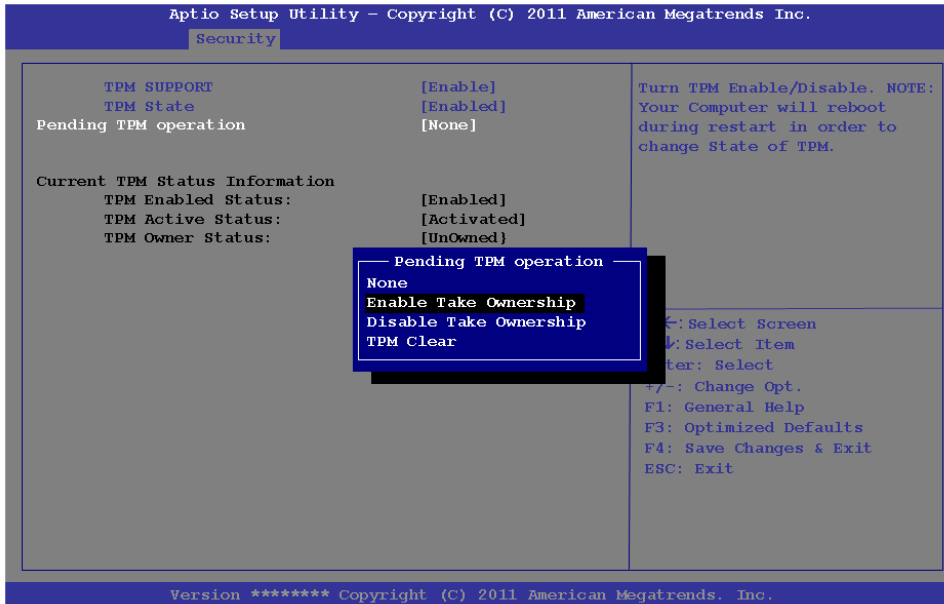



Figure 7 - 49  
Pending TPM operation  
(Enable Take Ownership)

- You can now **install the TPM driver** (see ***“Trusted Platform Module (TPM) Driver Installation” on page 7 - 78***) and then initialize the TPM.

### Trusted Platform Module (TPM) Driver Installation

1. Make sure you have enabled and activated the TPM in the BIOS before installing the driver (if you do not do see the note below).
2. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
3. Click **Option Drivers** (button).
4. Click **5./4.Install TPM Driver > Yes**.
5. Click **Install > Next**.
6. Click the button to accept the license and click **Next**.
7. Click **Next > Next > Install**.
8. Click **Finish > Yes** to restart the computer.

## Initializing TPM

1. Run the application from the **Infineon Security Platform Solution > Manage Security Platform** item in the **Start > Programs** menu.
2. Click **User Settings** (tab) and click **Yes**, or right-click the icon  in the notification area of the taskbar, and select **Security Platform Initialization** (or click the **Security Platform State** taskbar bubble).
3. The **Quick Initialization** method will automatically be selected for you (if you need to use advanced settings provided by your network administrator then select **Advanced Initialization**).
4. You will need to use a removable media (e.g. a USB Flash Drive) to store passwords and data (keep the media in a safe place until required).
5. Select the drive you want to use from the drop-down menu and click **Next**.




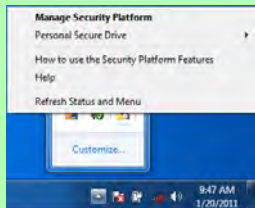
*Figure 7 - 50*  
**Security Platform  
Quick Initialization  
Wizard**

## Modules



### Help


Right-click the icon  in the notification area of the taskbar to bring up the menu to select **Help** or **How to use the Security Platform Features**.





You can also click the **Help** button in any of the Infineon Security Platform Settings Tool tabs to bring up specific help topics on each tab.

Figure 7 - 51  
Settings

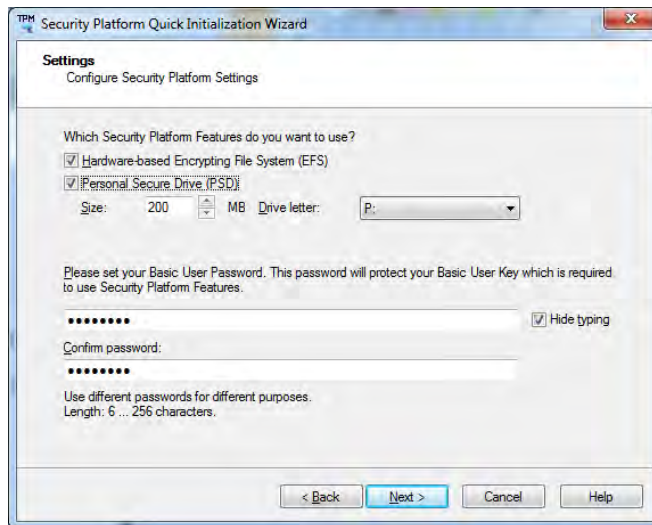6. Choose the **Security Platform Features** you want to use by clicking the appropriate tickbox.
7. Enter a **Basic User Password** (and re-type to confirm it) and click **Next**.



8. Click **Next** to confirm the settings.
9. The computer will then initialize the settings.
10. Click **Finish**.
11. Click the tabs and control panels to adjust the settings.
12. Double-click the icon  in the taskbar notification area to access the **Infineon Security Platform Settings Tool**, or right-click the icon  and select a menu item.

## Infineon Security Platform Settings Tool

The Infineon Security Platform Settings Tool allows you to manage and check the TPM state, manage your password information, and to backup and restore the TPM data. As TPM is usually administered within large enterprises and organizations, your system administrator will need to assist you in managing the information here.



### Menus


Note that not all the menus pictured here will be available for access. The menu items that appear will be dependent on your configuration settings etc. (see the **Help** file for full details).

Figure 7 - 52  
**Infineon Security Platform Settings Tool**

### User Settings

This page allows the settings to be configured for the currently logged in Infineon Security Platform user including the ability to change the password, configure secure e-mail, file and folder encryption and Enhanced Authentication. You can also import or delete certificates protected by the security platform.


*Figure 7 - 53*  
**Infineon Security  
Platform Settings  
Tool (User Settings)**

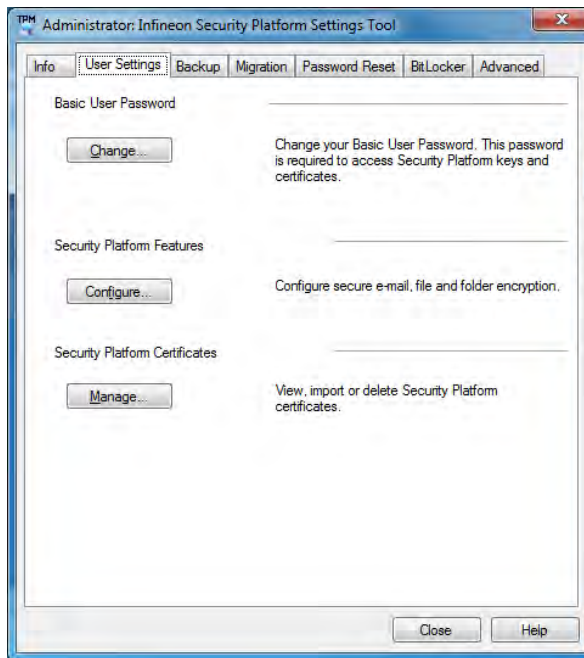



## Backup

Here you can configure backup and restore operations. Backup files contain the computer identification and user identification information which is used to match the machine name and user name with the current machine and user during restoration.

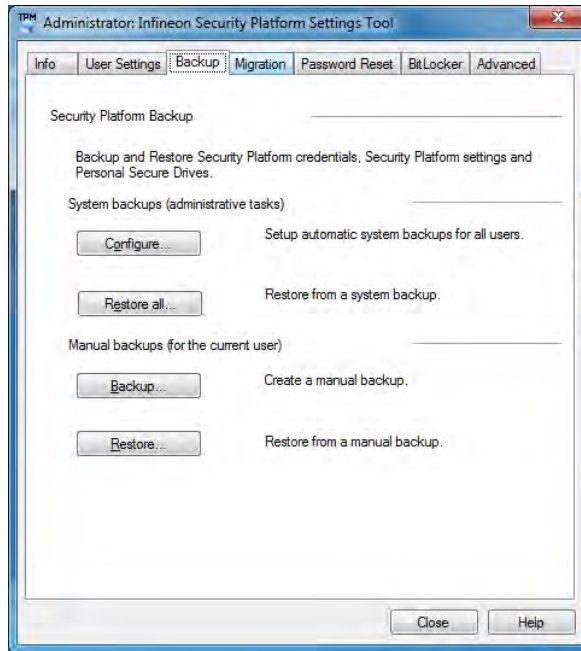


*Figure 7 - 54*  
**Infineon Security Platform Settings Tool (Backup)**

### Migration


The Migration tab is used to help securely transfer keys and certificates from one platform to another.

*Figure 7 - 55*  
**Infinion Security Platform Settings Tool (Migration)**

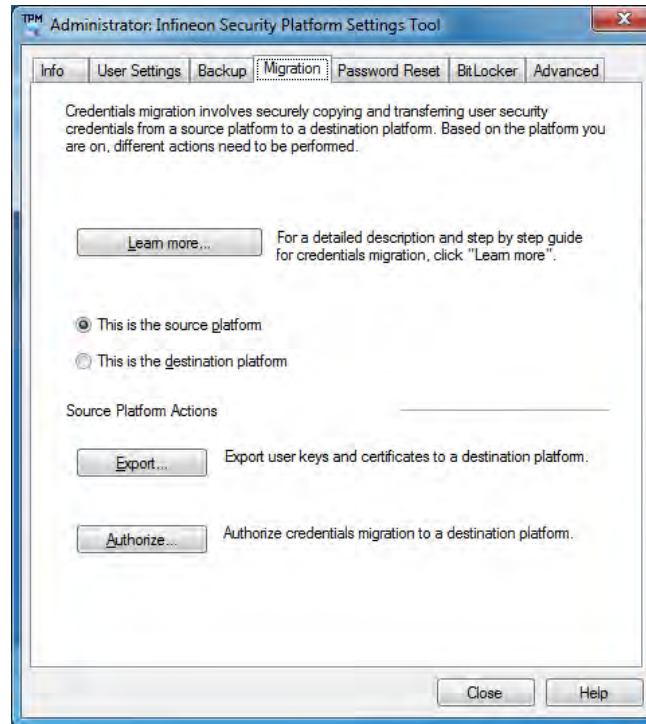

## Password Reset

Use Password Reset to reset basic user passwords when required.

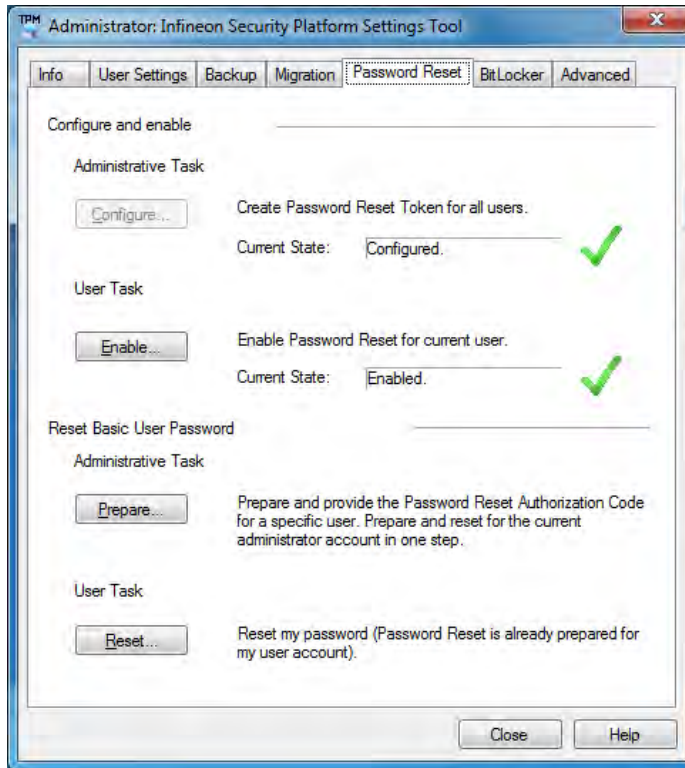


*Figure 7 - 56*  
**Infineon Security  
Platform Settings  
Tool  
(Password Reset)**


### BitLocker

BitLocker Drive Encryption can be used in conjunction with the TPM to encrypt data on the disk and is done via the **Microsoft BitLocker Control Panel Applet**. Click **Configure** and select a drive to be encrypted and then follow the Wizard to begin the encryption process.

*Figure 7 - 57*  
**Infineon Security  
Platform Settings  
Tool  
(BitLocker)**

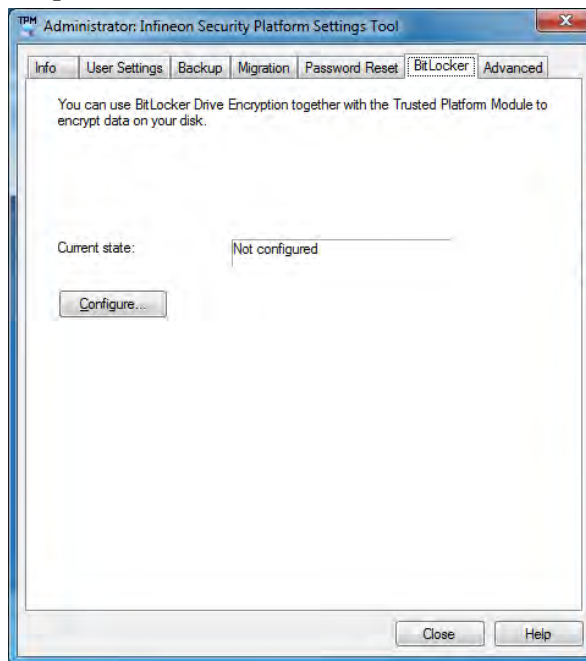

Access the Microsoft **BitLocker Drive Encryption** control panel applet from the *Windows* control panel (**System and Security**).

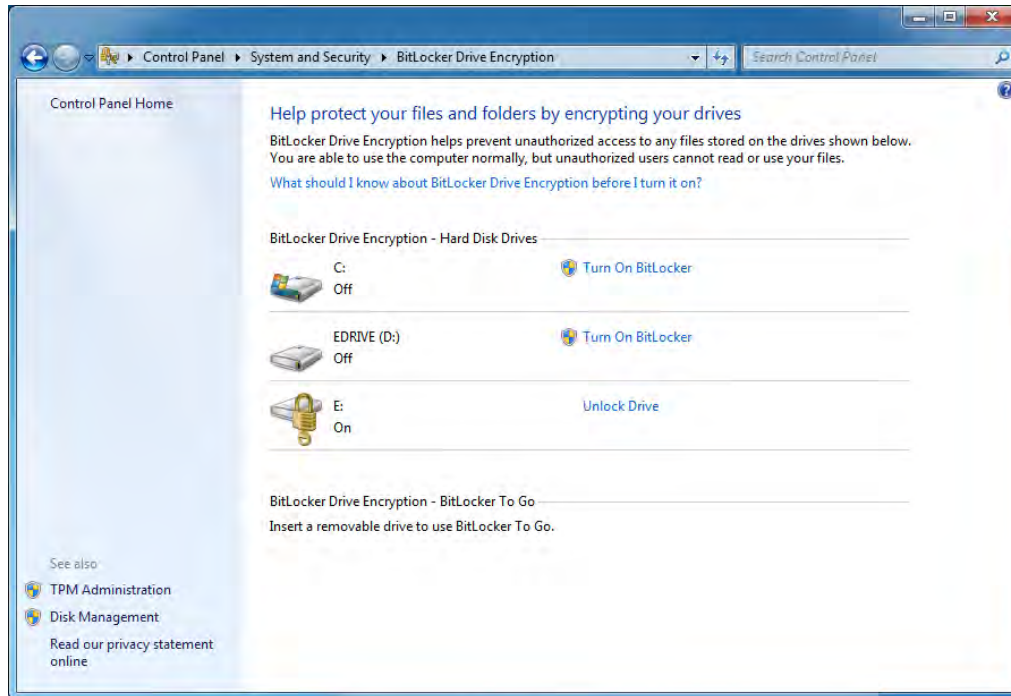


*Figure 7 - 58*  
**BitLocker Drive Encryption**

### Advanced

Configure all the Security Platform owner and policy settings from the Advanced tab. The settings that can be changed are for the local computer only.

*Figure 7 - 59*  
**Infineon Security  
Platform Settings  
Tool  
(Advanced)**

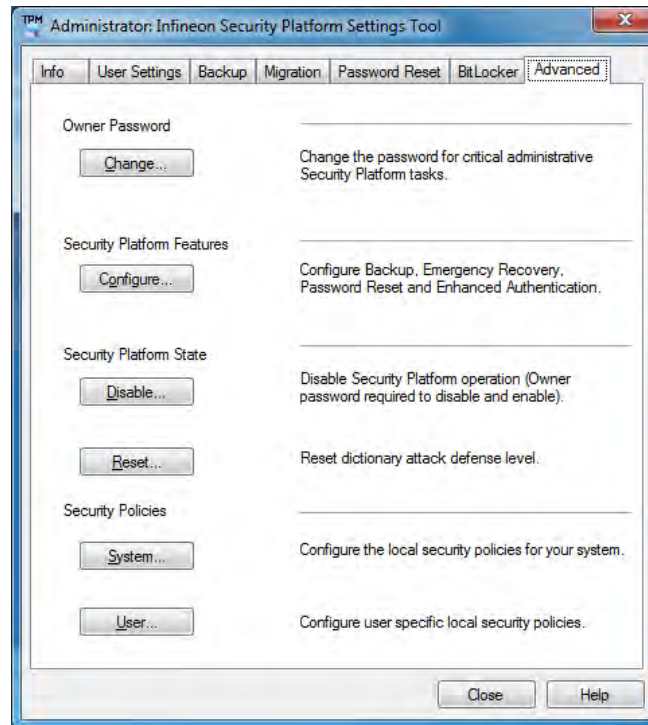


## Sound Blaster Audio

Install the **Sound Blaster AP** to allow you to configure the audio settings to your requirements for the best performance in games, music and movies.

### Sound Blaster X-Fi MB-3 Audio AP Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the DVD drive.
2. Click **Option Drivers** (button).
3. Click **6./5.Install SBX-Fi MB 3 AP > Yes**.
4. Click **Yes** to accept the license.
5. Click **Next > Full Installation** (button).
6. Click **Next > Finish** to restart the computer.

Run the **Sound Blaster X-Fi 3** control panel from the notification area of the taskbar (or from the item in the Start menu/Start screen). Click on the tabs to access the any of the control panel menus.

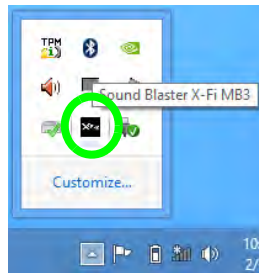


*Figure 7 - 60*  
**Sound Blaster X-Fi  
MB 3  
(Taskbar  
Notification Area  
Icon)**

### Volume Controls


You can click on the volume dials to adjust the level for either the microphone or master volume. You can choose to save the settings for **Music**, **Movie** or **Game**, and these settings can be exported or imported as required.


*Figure 7 - 61*  
Sound Blaster X-Fi 3  
Volume Controls

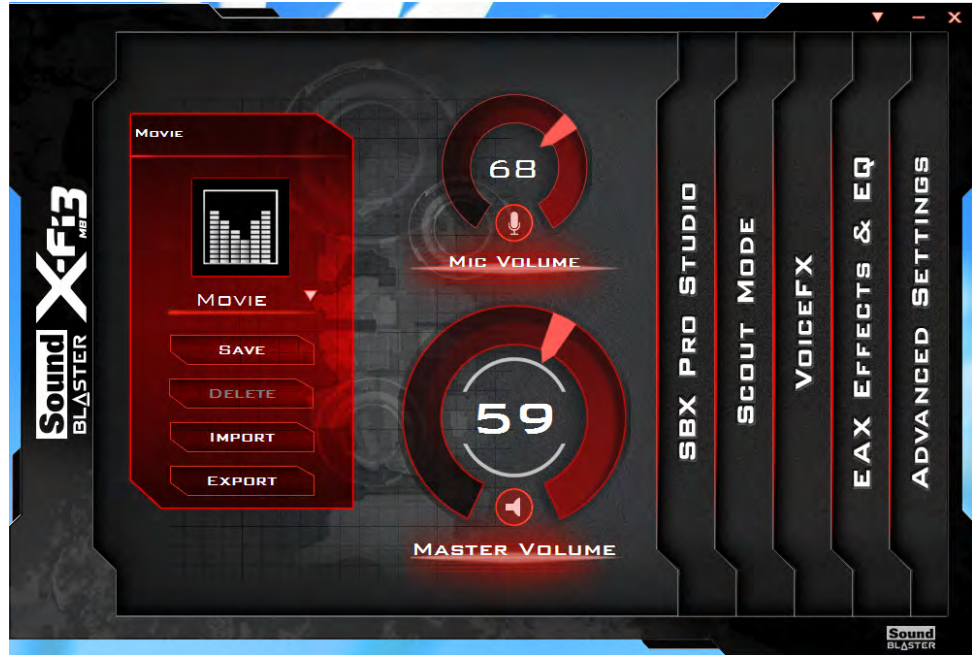



## SBX Pro Studio

Click the tickbox to enable/disable the control, and use the slider to adjust the levels. Press the play  button to test settings.

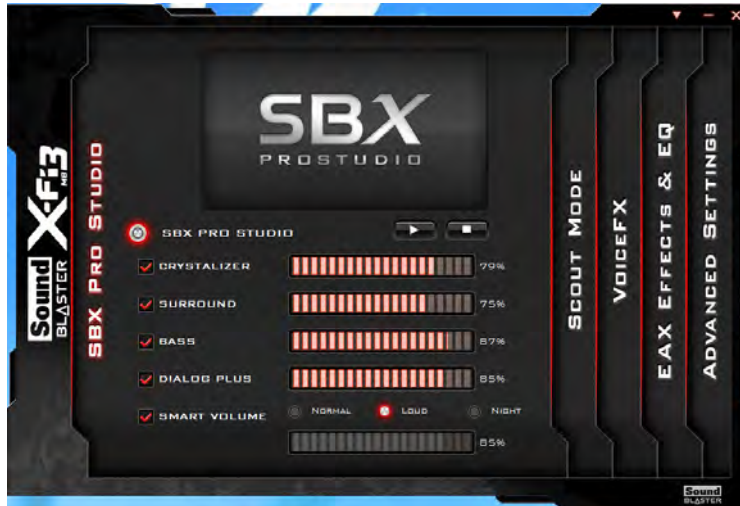

### Smart Volume Setting

The default setting for Smart Volume in SBX Pro Studio is set to Normal.

To get the full effect of this setting it is recommended that you set it to Loud.

7

*Figure 7 - 62*  
Sound Blaster X-Fi 3  
SBX Pro Studio

- **Crystalizer:** Enhances audio to make it sound livelier.
- **Surround:** Provides virtual sound channels to control the level of immersion.
- **Bass:** Enhances the bass level of the sound system.
- **Dialog Plus:** Enhances dialogue levels for movies etc.
- **Smart Volume:** Minimizes sudden volume changes to avoid the need for constant adjustment. It is recommended that this is set to **Loud** (see sidebar).

### Scout Mode

Click in the box to enable **Scout Mode** to enhance your ability to hear enemies in games from a further distance away than would normally be possible.

*Figure 7 - 63*  
Sound Blaster X-Fi 3  
Scout Mode



### Voice FX

Click in the box to enable **Voice FX** and click on the sliders to adjust the settings. Select the mode required from the dropdown, and click on **Test** to hear the playback of the effect.


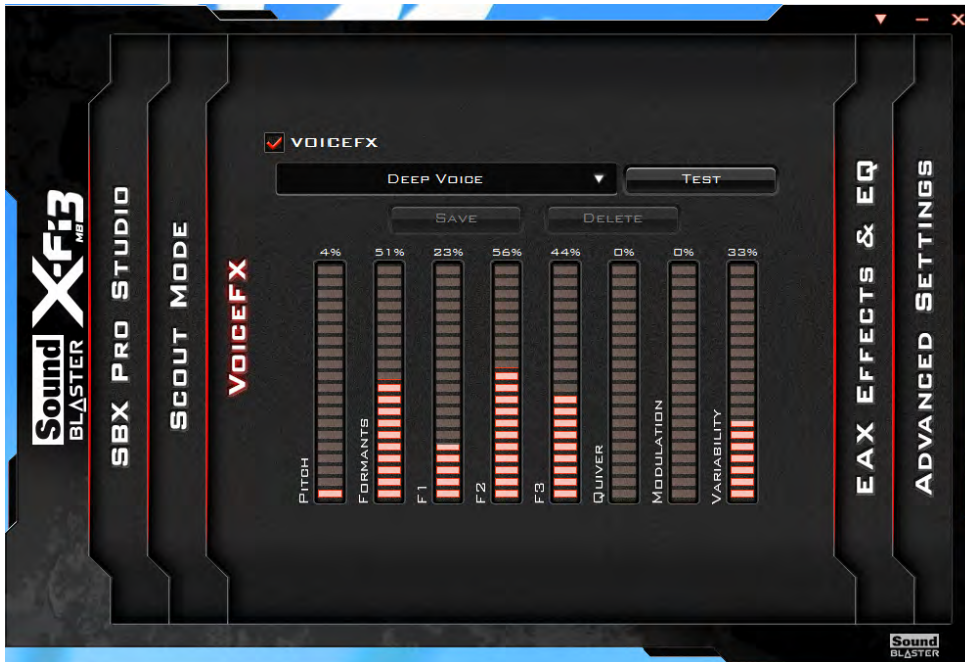


Figure 7 - 64  
Sound Blaster X-Fi 3  
Voice FX

### EAX Effects & EQ

Click to select either/or **EAX Effects** or **EQ**, select the mode required from the drop-box and click on the sliders to adjust the settings. Click on **Save** to save any custom changes to the set levels and effects.

Figure 7 - 65  
Sound Blaster X-Fi 3  
EAX Effects & EQ

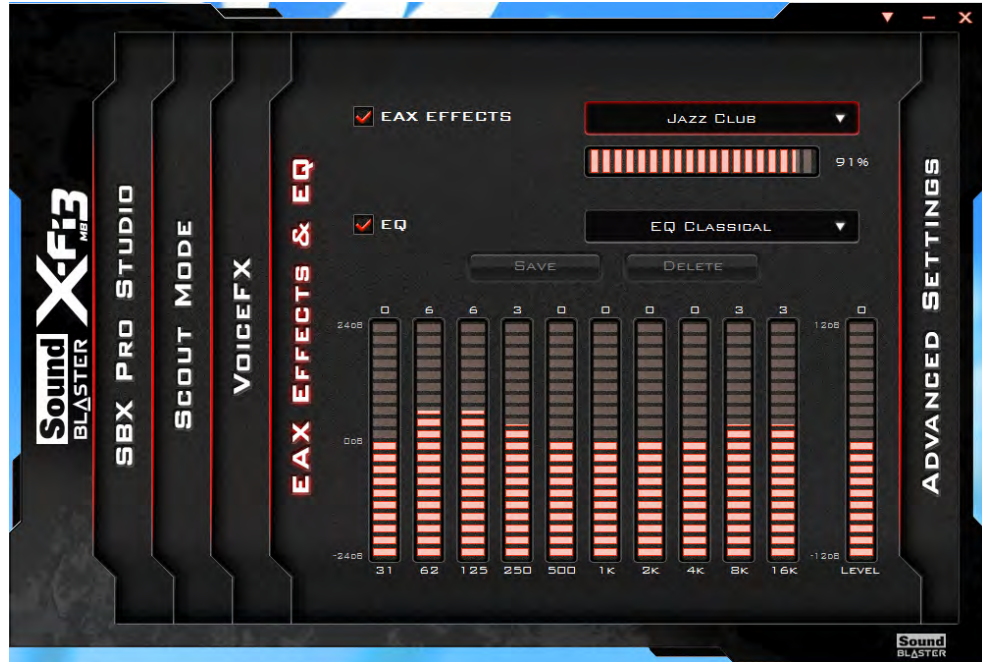

## Advanced Settings

Select the speaker/headphone configuration from the dropdown, and click on **Test** to hear the effect. You can also adjust the **Bass Management** by clicking the **Bass Redirection** and **Subwoofer Gain**, and click on the slider to adjust the **Crossover Frequency**.

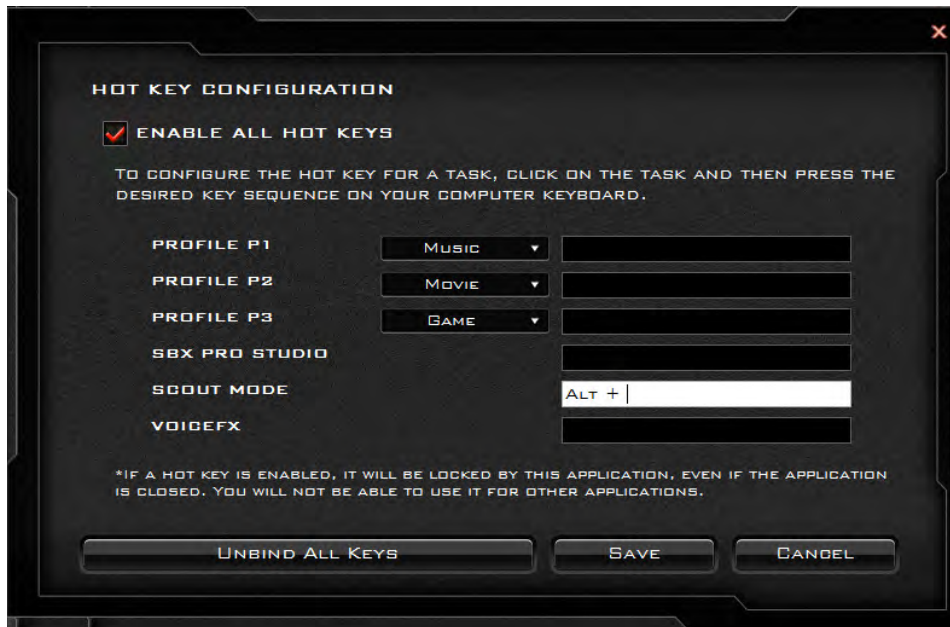


Figure 7 - 66  
Sound Blaster X-Fi 3  
Advanced Settings

### Hot Key Configuration

Click **Configure Hot Keys** in **Scout Mode** or **Advanced Settings** menus to access the **Hot Key Configuration** menu. Click **Enable All Hot Keys**, and then click on the task and press the key sequence required. Any hotkeys chosen will be locked by the application, and therefore will not be able to be used in other applications.

*Figure 7 - 67*  
**Sound Blaster X-Fi 3**  
**Hot Key**  
**Configuration**





## Creative ALchemy

The Creative ALchemy application can be run from the shortcut in the **Start** menu. Use the left menu to select any installed games and click the button to move them to the right column to enable ALchemy support for the game. Creative ALchemy restores hardware accelerated audio to enable EAX effects and 3D Audio when playing Direct Sound3D games.

## Creative Software AutoUpdate

Run the application from the shortcut in the **Start** menu and make sure you are connected to the internet, then click **Next** and follow the on screen instructions to update the software.

## Sound Blaster Audio & HDMI

1. When you connect an HDMI display to the HDMI-Out port, the Sound Blaster controls will be disabled.
2. A warning box will pop-up and will prompt “...*Do you want to select another audio device now?*”.
3. Click **No** to continue using the HDMI audio output from your external display (do not attempt to select another audio device when connected to the external HDMI display).

### IRST Driver

Install the Intel Rapid Storage Technology to support your SATA drive if set up in **AHCI mode** in the BIOS (see “*SATA Mode (Advanced Menu)*” on page 5 - 9) or if you have set up your hard disks in a RAID configuration (“*Setting Up SATA RAID or AHCI Mode*” on page 7 - 2).

1. Insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **7./6.Install IRST Driver > Yes**.
4. Click **Next > Next > Yes > Next > Next**.
5. Click **Finish** to restart the computer (you will need to restart the system again after the computer has rebooted).

**Note that after installing the IRST driver the Windows system may take up to 5 minutes at startup to load all the drivers.** By default, Intel® Rapid Storage Technology is set to **Automatic** (Delayed Start). See page 8 - 16 for details on how to change this setting.



# Chapter 8: Troubleshooting

## Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

# Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power Indicators** (see “*Speaker Area*” on page 1 - 7) to see the computer’s power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your *Power Options* (see “*Configuring the Power Buttons*” on page 3 - 8), the **Fn + F4** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn + F8 and F9** keys to adjust the brightness (see *Table 1 - 5, on page 1 - 14*).
- **Display Choice** - Press **Fn + F7** to make sure the system is not set to “external only” display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive when you start up your machine (this is a common cause of the message “*Invalid system disk - Replace the disk, and then press any key*” / “*Remove disks or other media. Press any key to restart*”).

## Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.
- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.
- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Boot** password for the SCU (see *“Security Menu” on page 5 - 11*).
- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc. (even if just brief notes).



### Warranty

The CPU is not a user serviceable part. Opening this compartment, or accessing the CPU in any way, may violate your warranty.

# Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.
- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note:** You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.
- Keep a "**Bootable CD-ROM/DVD-ROM/USB storage device**" (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).


## Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.
- Don't open your computer or undertake any repair or upgrade work if you are not comfortable with what you are doing.
- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".
- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.
- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).
- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.

## Troubleshooting

- Don't over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.


## Problems & Possible Solutions

Problem	Possible Cause - Solution
<p>You turned the <b>power on</b> but it doesn't work.</p>	<p><i>Battery missing / incorrectly installed.</i> Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.</p>
<p>The <b>Battery LED power</b> indicator , is blinking orange.</p>	<p><i>Low Battery.</i> Plug in the AC power source. If the computer doesn't start up immediately, turn it off then on again.</p>
<p>You are losing <b>battery power</b> too quickly.</p>	<p><i>The system is using too much power.</i> If your OS has a <i>Power Options</i> scheme (see <b><i>“Power Plans” on page 3 - 4</i></b>) check its settings. You may also be using an ExpressCard device/USB device/external device that is drawing a lot of power.</p> <p><i>You are attempting to run an SLI configuration on battery power.</i> Due to the high power and system demands created by enabling SLI Configuration, <b>you should not enable SLI configuration if your computer is powered by battery only.</b></p>
<p>Actual <b>battery operating time</b> is shorter than expected.</p>	<p><i>The battery has not been fully discharged before being recharged.</i> Make sure the battery is fully discharged and recharge it completely before reusing (see <b><i>“Power Conservation Modes” on page 3 - 10</i></b>).</p> <p>Check the settings of any active power plan (see <b><i>“Power Plans” on page 3 - 4</i></b>).</p> <p><i>A peripheral device/USB device is consuming a lot of power.</i> Turn off/remove the unused device to save power.</p>

## Troubleshooting

Problem	Possible Cause - Solution
<p>The <b>computer feels too hot</b>.</p>	<p>Make sure the computer is properly ventilated and the vents/fan intakes are not blocked. If this doesn't cool it down, put the system into <b>Hibernate</b> mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see "<b>Overheating</b>" on page 1 - 20). Make sure you're using the correct adapter.</p> <p>Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vents/fan intakes to be blocked.</p>
<p><b>Nothing appears on screen.</b></p>	<p><i>The system is in a power saving mode.</i> Toggle the <b>Fn + F4</b> (see "<b>Configuring the Power Buttons</b>" on page 3 - 8).</p> <p><i>The screen controls need to be adjusted.</i> Toggle the screen control <b>Fn + F8/F9</b> key combinations. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls.</p> <p><i>The computer is set for a different display.</i> Toggle the screen display key <b>Fn + F7</b> combination. If an external monitor is connected, turn it on.</p> <p><i>The <b>screen saver</b> is activated.</i> Press any key or touch the <b>TouchPad</b>.</p>
<p><b>No image</b> appears on the <b>external monitor</b> I have plugged in and powered on.</p>	<p><i>You haven't installed the video driver and configured it appropriately from the <b>Control Panel</b>.</i> See "<b>NVIDIA Video Driver Controls</b>" on page C - 1 for instructions on installing and configuring the video driver.</p>



Problem	Possible Cause - Solution
You forget the <b>boot password</b> .	<i>If you forget the password, you may have to discharge the battery of the CMOS. Contact your service representative for help.</i>
 <p data-bbox="675 396 919 426"><b>Password Warning</b></p> <p data-bbox="140 437 1453 493">If you choose to set a boot password, <b>NEVER</b> forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.</p>	
The <b>CD/DVD</b> cannot be read.	<i>The compact disc is dirty. Clean it with a cleaner kit.</i>
The <b>Optical Disk Drive tray</b> will not open when there is a disc in the tray.	<i>The disc is not correctly placed in the tray. Gently try to remove the disc using the eject hole (see <b>“Loading Discs” on page 2 - 3</b>).</i>
The <b>DVD regional codes</b> can no longer be changed.	<i>The code has been changed the maximum <b>5</b> times. See <b>“DVD Regional Codes” on page 2 - 5</b>.</i>
The <b>TouchPad</b> doesn't work.	<i>The Touchpad has been disabled. Press the Touchpad toggle (<b>Fn + F1</b>) key combination (make sure you have installed the Touchpad driver).</i>

## Troubleshooting

Problem	Possible Cause - Solution
I am sliding my finger up and down on the right side of the <b>TouchPad to scroll</b> a Window and the <b>TouchPad does not respond</b> .	<i>There are different TouchPad versions available on this computer, and this version requires tapping/holding to scroll.</i> Either tap repeatedly, or hold the finger down, at the top or bottom right of the touchpad (depending on the scrolling direction required) to scroll the window.
The <b>system freezes</b> or the screen goes dark.	<i>The system's power saving features have timed-out.</i> Use the AC/DC adapter, press a key on the keyboard, or press the sleep ( <b>Fn + F4</b> ) key combination, or press the power button if no LEDs are lit.
The system never goes into a <b>power saving mode</b> .	Power Options features are not enabled. Go to the <b>Windows</b> Power Options menu and enable the features you prefer (see <b>“Power-Saving States” on page 3 - 6</b> ). Make sure you have enabled <b>Hibernate</b> mode from the control panel.
The <b>Wireless LAN/Bluetooth/PC Camera modules</b> cannot be <b>detected</b> .	<i>The modules are off.</i> Check the appropriate Touch Sensor indicator to see if the modules are on or off (see <b>“Touch Sensor Instant Keys” on page 1 - 9</b> ). If the LED indicator is not illuminated, then press the appropriate touch sensor instant key/function key combination in order to enable the modules.
The <b>Wireless LAN/Bluetooth/PC Camera modules</b> cannot be <b>configured</b> .	<i>The driver(s) for the module(s) have not been installed.</i> Make sure you have installed the driver for the appropriate module (see the instructions in <b>Chapter 7 “Modules”</b> for the appropriate module).

Problem	Possible Cause - Solution
When a <b>DVD</b> is played in <b>Windows Media Player/Media Center</b> , the <b>audio track</b> in other languages (commentaries etc.) is <b>not clear</b> if connected to the S/PDIF-Out Jack.	<i>This is an issue with Windows Media Player/Media Center and audio output through the S/PDIF-Out Jack. We recommend that you use the <b>Power DVD</b> application to play DVDs.</i>
Nothing appears on the screen when the <b>PC Camera</b> software is run.	<i>You have selected an external display as the default display device. The PC Camera application software needs to be run while the <b>default notebook LCD</b> is the selected display device. After a camera picture is obtained on the default notebook LCD, you may then use the <b>Fn + F7</b> to toggle through the display modes (give the screen time to refresh). If you have selected an external display as your display device do not run the PC Camera software application until you have switched back to the notebook LCD.</i>
A file cannot be copied to/from a connected <b>Bluetooth</b> device.	<i>The transfer of data between the computer and a Bluetooth enabled device is supported <b>in one direction only (simultaneous data transfer is not supported)</b>. If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed</i>
The <b>Bluetooth</b> module is <b>off</b> after resuming from Sleep.	<i>The Bluetooth module's default state will be off after resuming from the Sleep power-saving state. Use the key combination (<b>Fn + F12</b>) to power on the Bluetooth module after the computer resumes from Sleep.</i>


## Troubleshooting

Problem	Possible Cause - Solution
I have <b>installed the Windows OS</b> but <b>cannot hear any sound</b> .	<i>The audio driver is not installed.</i> Install all the drivers as instructed in <a href="#">Chapter 4 "Drivers &amp; Utilities"</a> and <b>make sure you install the audio driver</b> (see <a href="#">"Audio" on page 4 - 8</a> ).
The <b>sound</b> cannot be heard or the volume is very low.	<i>The volume might be set too low.</i> Check the volume control in the <b>Volume Control Panel</b> in the Windows taskbar, use the key combination <b>Fn + F5</b> and <b>F6</b> or move your finger slowly along the volume control slider to adjust the system volume (see <a href="#">"Audio Features" on page 2 - 8</a> / <a href="#">"Touch Sensor Instant Keys" on page 1 - 9</a> ) to adjust.
<b>No sound</b> can be heard through an <b>HDMI</b> connected display device.	<i>You have not configured the HDMI audio output.</i> See <a href="#">"HDMI Audio Configuration" on page C - 18</a> .
<b>Audio Volume is too low</b> when listening through <b>headphones</b> .	<i>You have set the Speaker Configuration to 5.1 or 7.1 Speaker.</i> It is recommended that you set the <b>Speaker Configuration</b> to <b>Stereo</b> (not to 5.1 or 7.1 Speaker) when listening through headphones in order to maximize audio quality. See <a href="#">"Audio Features" on page 2 - 8</a> .
The <b>Sound Blaster</b> audio controls don't work when the system is connected to an <b>external display through an HDMI cable</b> .	<i>Note that Sound Blaster Audio will be disabled when you are connecting to an external display through an HDMI connection.</i> See <a href="#">"Sound Blaster Audio &amp; HDMI" on page 7 - 85</a> .


Problem	Possible Cause - Solution
<p>The computer is off (or in Sleep Mode) but powered by the AC/DC adapter plugged in to a working outlet, or by battery with a capacity above 20%. <b>I have plugged a device into the powered USB port in order to charge it, but the device is not charging.</b></p>	<p><i>The port is not powered on.</i> Toggle power to the port using the <b>Fn + power button</b> combination.</p> <p><i>This function may not work with certain external USB compliant devices (check your device's documentation).</i> If this is the case, <b>power the computer on and connect the external USB device</b> in order to charge it.</p> <p><b>Note</b> that this function is designed to help <b>charge USB compliant devices</b>, but is <b>not designed to allow their operation.</b></p>
<p>The <b>battery doesn't appear to be charging</b> after running computer games or high-end video applications on battery power.</p>	<p><i>The computer has been used to run high intensity programs (e.g. computer games) on DC (battery) power.</i> If the computer is running a high intensity program on battery power you should immediately plug in the AC/DC adapter when the system displays a low battery warning. However (due to safety limitations) the battery will not start to charge until the system has been turned off, and the battery has cooled down sufficiently. This may take up to around 5 or 6 hours depending on the environmental conditions.</p> <p>It is recommended that when running programs that use a substantial amount of system resources (such as computer gaming or any high-end video applications) that you power the machine by using the AC/DC adapter. Note that <b>you should not enable SLI configuration if your computer is powered by battery only</b> (see <a href="#">“NVIDIA® SLI Multi GPU Configuration &amp; Power” on page C - 15</a>).</p>

## Troubleshooting

Problem	Possible Cause - Solution
<p>When the battery is being used to power the system in an environment with an ambient temperature of below 10°C/50°F, the battery reaches a low level very quickly.</p>	<p><i>This can occur as the battery cell performs poorly in a low temperature environment, especially with a discharge rate of over 2C. Systems powered by the battery will perform normally at environmental temperatures over 10°C/50°F. To use the system at environmental temperatures below 10°C/50°F, it is recommended that the system is powered by the AC/DC adapter.</i></p> <p><b><u>Battery Notes:</u></b>            Note that when the battery capacity is measured it may read less than the 5300mAh indicated on the label, and possibly less than 5000mAh. This can be due to either of the following factors:</p> <ul style="list-style-type: none"> <li>• The battery capacity listed on the label is defined by cell character specification. There is a -5% capacity tolerance based on a test at 0.2C charge/0.2C discharge. Therefore 5035mAh (-5% of 5300mAh) meets the battery capacity specification listed.</li> <li>• This system runs with a 0.6C charge/1C~2.5C discharge rate. The higher system charge/discharge rate can result in a lower battery capacity measurement reading.</li> </ul>
<p>The fingerprint reader has problems scanning fingers.</p>	<p><i>When fingers are wet or sweaty the software application may have difficulty reading a scanned finger. Make sure your fingers are clean and dry when attempting to scan them across the sensor for detection.</i></p>

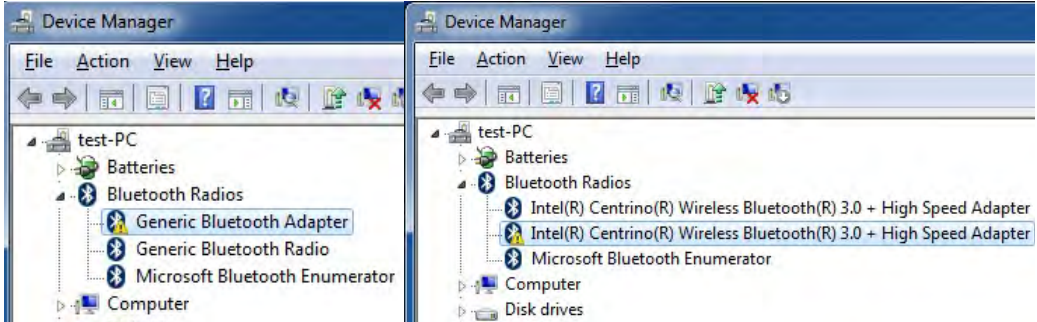Problem	Possible Cause - Solution
<p>The <b>Bluetooth module</b> is experiencing problems/ <b>2 Bluetooth adapters</b> appear in the Device Manager under <b>Bluetooth Radios</b>.</p>	<p><i>There is a conflict between an existing Bluetooth module and a Bluetooth &amp; WLAN combination module. You should have only one Bluetooth module installed in order to prevent any conflicts (this includes the Bluetooth element of any combination WLAN &amp; Bluetooth module). If you have an existing Bluetooth module installed and then decide to add a combo WLAN &amp; Bluetooth module at a later date, then uninstall the original Bluetooth module before installing the combo module.</i></p>  <p>The image contains two side-by-side screenshots of the Windows Device Manager. Both windows are titled 'test-PC' and show the 'Bluetooth Radios' category expanded. The left screenshot shows two items: 'Generic Bluetooth Adapter' and 'Generic Bluetooth Radio'. The right screenshot shows two items: 'Intel(R) Centrino(R) Wireless Bluetooth(R) 3.0 + High Speed Adapter' and 'Microsoft Bluetooth Enumerator'.</p>

## Troubleshooting

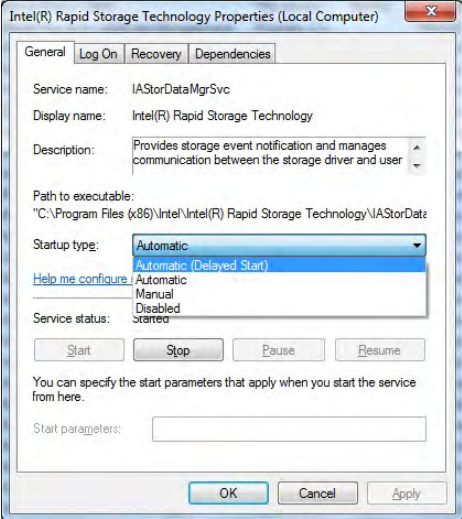Problem	Possible Cause - Solution
<p>Note that <b>after installing the IRST driver</b> the <i>Windows</i> system may take up to <b>5 minutes at startup to load all the drivers.</b></p>	<p>By default, <b>Intel® Rapid Storage Technology</b> is set to <b>Automatic (Delayed Start)</b>. If you want to change the setting then follow these steps to change the Startup type:</p> <ol style="list-style-type: none"><li>1. Go to <b>Intel® Rapid Storage Technology Properties</b></li><li>2. Select the <b>General</b> tab.</li><li>3. Change the Startup type to <b>Automatic</b>.</li><li>4. Click <b>Apply</b> and <b>OK</b> to save.</li></ol>  <p>The screenshot shows the 'Intel(R) Rapid Storage Technology Properties (Local Computer)' dialog box with the 'General' tab selected. The 'Startup type' dropdown menu is open, showing 'Automatic (Delayed Start)' as the selected option. Other options include 'Automatic', 'Manual', 'Disabled', and 'Started'. The 'Service status' is 'started'. There are 'Start', 'Stop', 'Pause', and 'Resume' buttons. At the bottom, there are 'OK', 'Cancel', and 'Apply' buttons.</p>



Problem	Possible Cause - Solution
<p>I have connected a <b>Bluetooth Mouse</b> but it <b>loses the Bluetooth connection</b> and no longer responds after a short period of inactivity.</p>	<p><i>This is an issue with this mouse model and the Intel Wireless 7260 WLAN and Bluetooth combo module series. To resolve this issue do the following:</i></p> <ol style="list-style-type: none"> <li>5. Go to the <b>Device Manager</b> control panel in <b>Windows</b>.</li> <li>6. Click the arrow alongside <b>Bluetooth</b> to expand the menu if required.</li> <li>7. Double-click <b>Intel(R) Wireless Bluetooth(R) 4.0 + HS Adapter</b>.</li> <li>8. Click the <b>Power Management</b> tab.</li> <li>9. Make sure that the tickbox alongside "<b>allow the computer to turn off this device to save power</b>" doesn't have a tick alongside it.</li> <li>10. Click <b>OK</b> and close the control panel.</li> </ol>

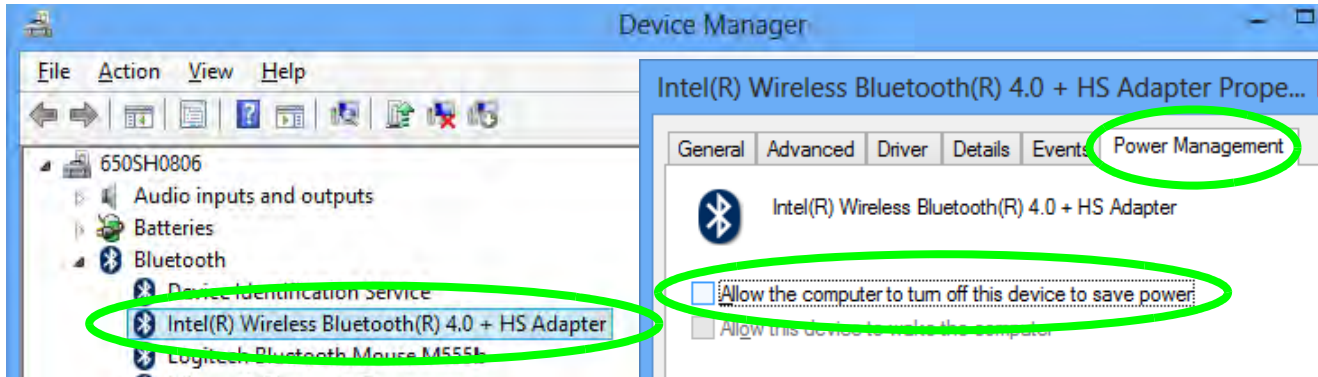


Figure 8 - 1 - Device Manager (Bluetooth)

## Troubleshooting

Problem	Possible Cause - Solution
<p>When using a <b>Bluetooth headset</b> the audio appears to be mono and not stereo.</p>	<p><i>This is a common issue with Bluetooth headsets. To resolve this issue do the following (you will need to <b>repeat this procedure after every boot up, restart, or when the system resumes from hibernation</b>):</i></p> <ol style="list-style-type: none"><li>1. Go to the <b>Devices &amp; Printers</b> control panel in <b>Windows</b>.</li><li>2. Double-click the Bluetooth headset.</li><li>3. Click <b>Connect</b> to complete the stereo connection.</li></ol> <p><b>OR</b></p> <ol style="list-style-type: none"><li>1. Go to the <b>Sound</b> control panel in <b>Windows</b>.</li><li>2. Right-click (in the <b>Playback</b> tab) the Bluetooth Stereo Audio device (the default device is <b>Headset</b>).</li><li>3. Click <b>Connect</b> to complete the stereo connection.</li></ol>

# Bluetooth Connection Problems

If you are experiencing problems connecting to some Bluetooth devices (in particular certain mobile phones and headsets) it may be necessary to download and install the **Windows Mobile Device Center** software (for *Windows Vista* and *Windows 7*). Go to the Microsoft website and search for the **Microsoft Windows Device Center Driver for Windows Vista (64-bit or 32-bit) and Windows 7 (64-bit or 32-bit)**, and then download the driver.

1. Install the **Microsoft Windows Device Center Driver** as appropriate for your operating system.
2. **Windows Vista** will automatically configure the driver for you, however **Windows 7** requires further configuration.
3. Make sure the Bluetooth device is powered on.
4. Go to the **Windows 7** control panel and double-click **Device Manager (Hardware and Sound > Devices and Printers)**.
5. **Bluetooth Peripheral Device(s)** will be listed under **Other Devices** (note this will only be listed if you have connected, or tried to connect to, a Bluetooth device previously).

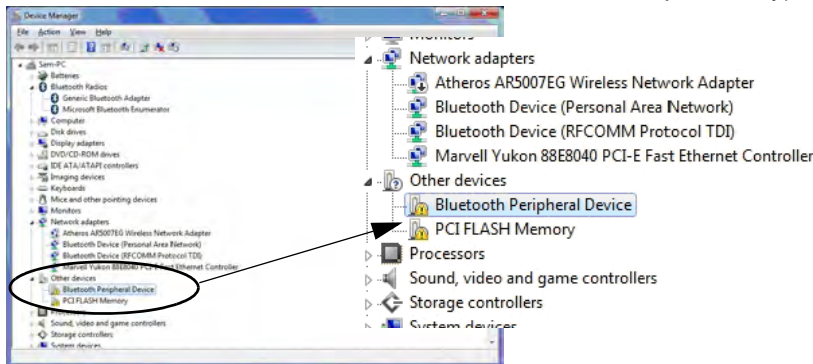


Figure 8 - 2 - Device Manager

**Bluetooth Peripheral Devices**

You will need to repeat the procedure listed here for all **Bluetooth Peripheral Devices** listed under **Other Devices** i.e. until there are no more **Bluetooth Peripheral Devices** listed under this menu heading.

## Troubleshooting

6. Right-click **Bluetooth Peripheral Device** and click on **Update Driver Software**.
7. Click **Browse my computer for driver software**.
8. Click **Let Me pick from a list of device drivers on my computer**.

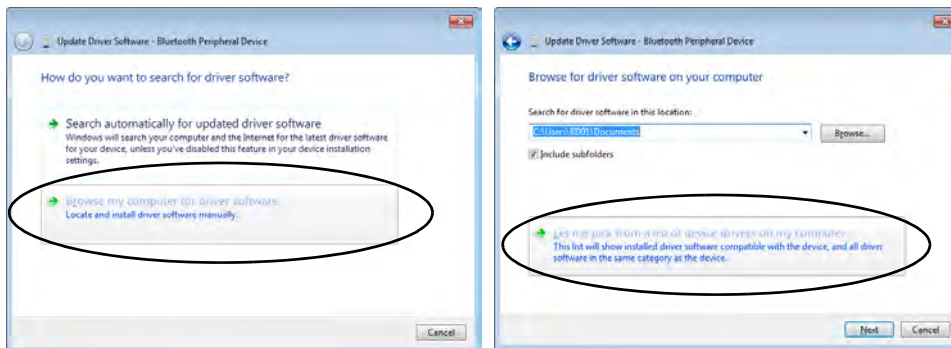


Figure 8 - 3 - Browse my computer.../Let me pick from...

9. Select **Bluetooth Radios** from the list.


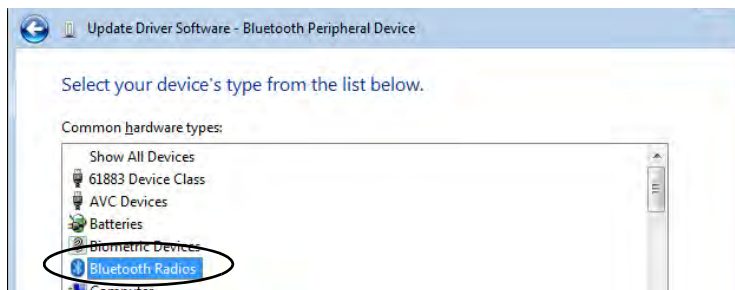


Figure 8 - 4 - Select Bluetooth Radios

10. A list of drivers will appear with **Manufacturer** on one side and **Model** in the other.
11. Choose **Microsoft Corporation** (make sure you choose the full name **Microsoft Corporation** and do not choose **Microsoft** - Note that you must have installed the **Microsoft Windows Device Center Driver for Microsoft Corporation** to appear in the list).
12. Select **Windows Mobile-based device support** from the **Model** list.

Make sure you select  
**Microsoft Corporation**

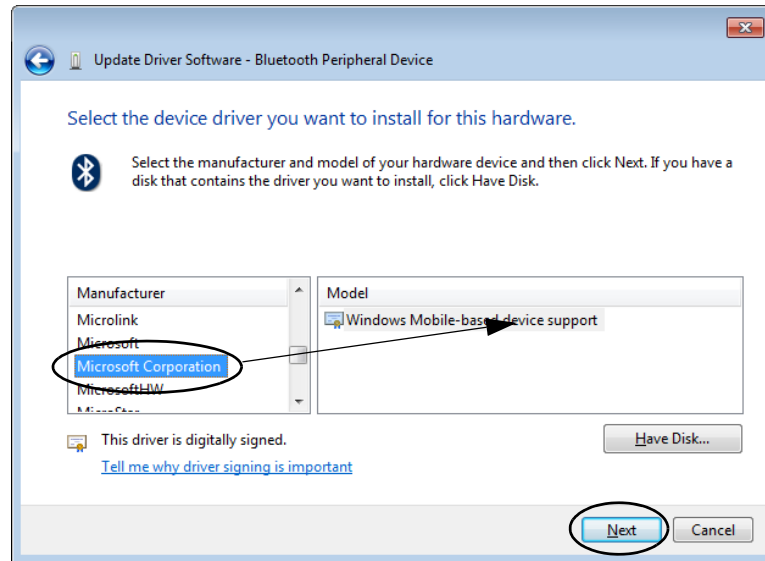


*Figure 8 - 5 - Select Device Driver*

13. Click **Next > Yes** and the driver will install.
14. Click **Close** to complete the installation.

## Troubleshooting

15. The **Device Manager** should now display the **Windows Mobile-based device support** under **Bluetooth Radios**.
16. You will need to repeat the process for any other **Bluetooth Peripheral Devices** listed under **Other Devices**.

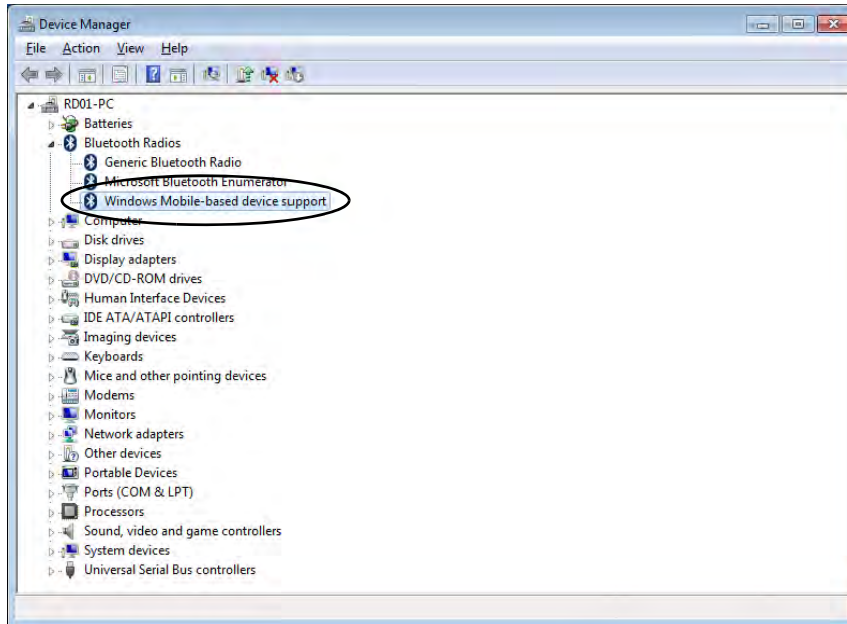

*Figure 8 - 6 - Device Manager - Bluetooth Radio*

## Intel® My WiFi Configuration

*(For Intel® WLAN Modules Only)*

Intel® My WiFi Technology (Intel® MWT) uses your WLAN to transform your system into a Wi-Fi Personal Area Network, and enables you wirelessly share your videos, photos, music with other WiFi enabled devices, while still connecting to the Internet through your WiFi wireless connection.

Intel® MWT also features a chat function, and offers you the option of being able to create a WiFi hotspot from your computer. Intel® MWT offers greater range and speed than other personal area networks, and does not require an access point.



### Intel® My WiFi Help

To get help on **Intel® My WiFi** configuration and settings, access the **Intel® My WiFi Dashboard** from the **Start** menu (**Start > All Programs > Intel PROSet Wireless > Intel(R) My WiFi Dashboard**), or by clicking the taskbar icon . click the **Help** icon  in the dashboard and select a help topic from the **Contents** menu.

## Troubleshooting

### Installing Intel® MyWiFi Technology (for Intel® WLAN Modules Only)


If you want to install **Intel® MyWifi Technology** (Personal Area Network) then follow the procedure outlined here. Note that if you wish to install Intel® MyWiFi you will need to **install Microsoft.net Framework 4.0 (or later version) before installing the driver** as per the procedure below. To get the **Microsoft.net Framework** file go to the *Microsoft* website, search for the file, download it and then install it.

1. **Make sure the WLAN module is powered on**, and then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Insert the *Device Drivers & Utilities + User's Manual disc* into the CD/DVD drive.
3. Click **Browse** and browse to the driver location (X: denotes your DVD drive):
  - **X:\Options\02\_WLAN\Intel\Dashboard\Autorun.exe**
4. Click **Next > Next**.
5. Click the button to accept the license and click **Next > Next > Install**.
6. Click **Finish**.



## Intel® My WiFi Configuration

You can configure the My WiFi settings as follows.

1. Make sure the Wireless LAN module is on.
2. Access the **Intel® WiFi Connection Utility** from the **Start** menu (**Start > All Programs > Intel PROSet Wireless > Intel(R) My WiFi Dashboard**), or click the icon  in the notification area of the taskbar (or right-click and select Open Dashboard).
3. An initial welcome message will appear on the first run of the program (click “**Don’t show this message again**” to turn this off in future).

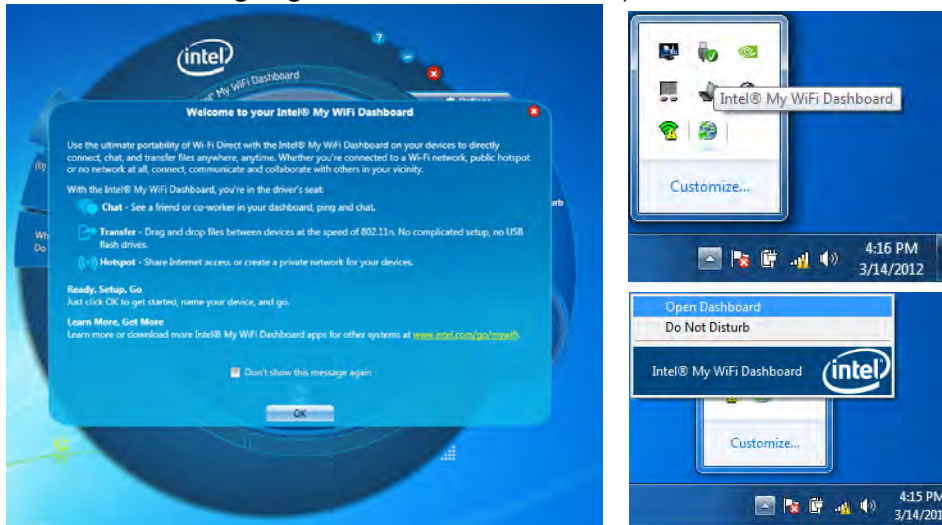


Figure 8 - 7  
Intel® My WiFi  
Utility - Welcome

### Intel® My WiFi Interface

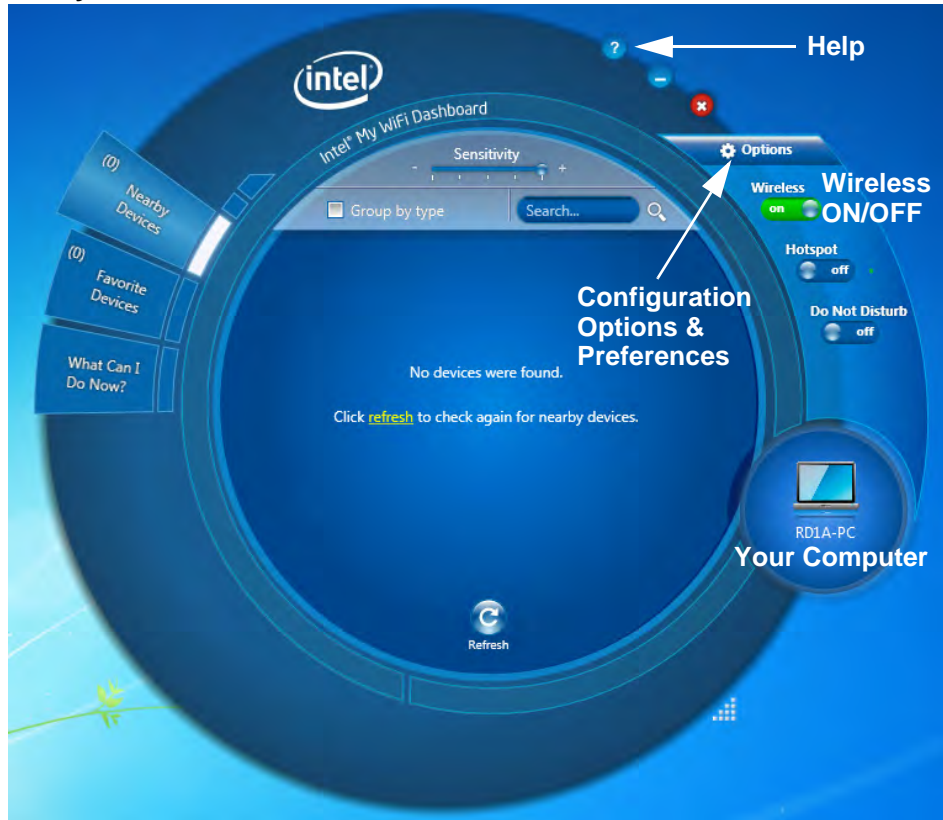



Figure 8 - 8  
Intel® My WiFi  
Utility - Interface

## Intel® My WiFi Help

Click the **Help** icon  in the dashboard to bring up the Help menu and select and item from the **Contents** menu to obtain the help information.


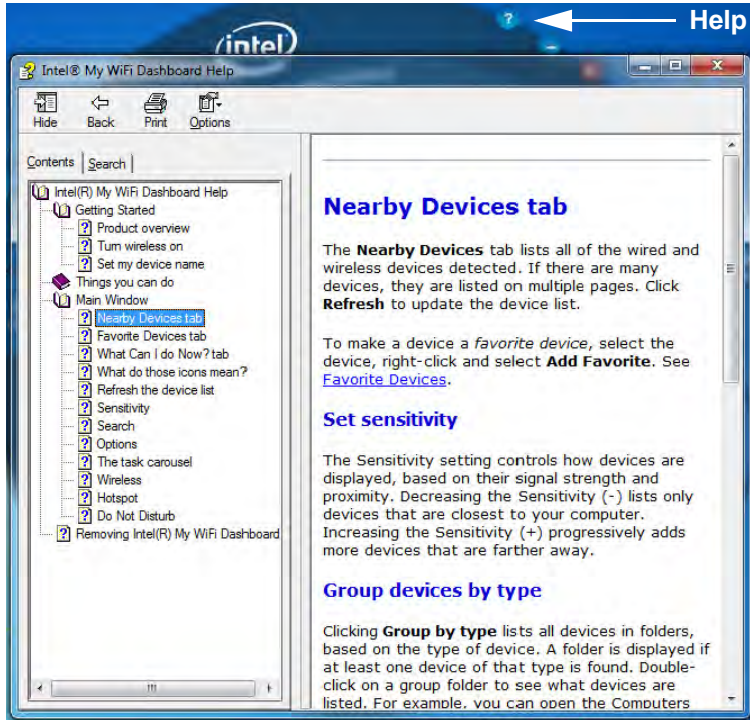


Figure 8 - 9  
Intel® My WiFi  
Utility - Help

## Preferences


Click the **Options** icon  and select **Preferences** to configure the options.

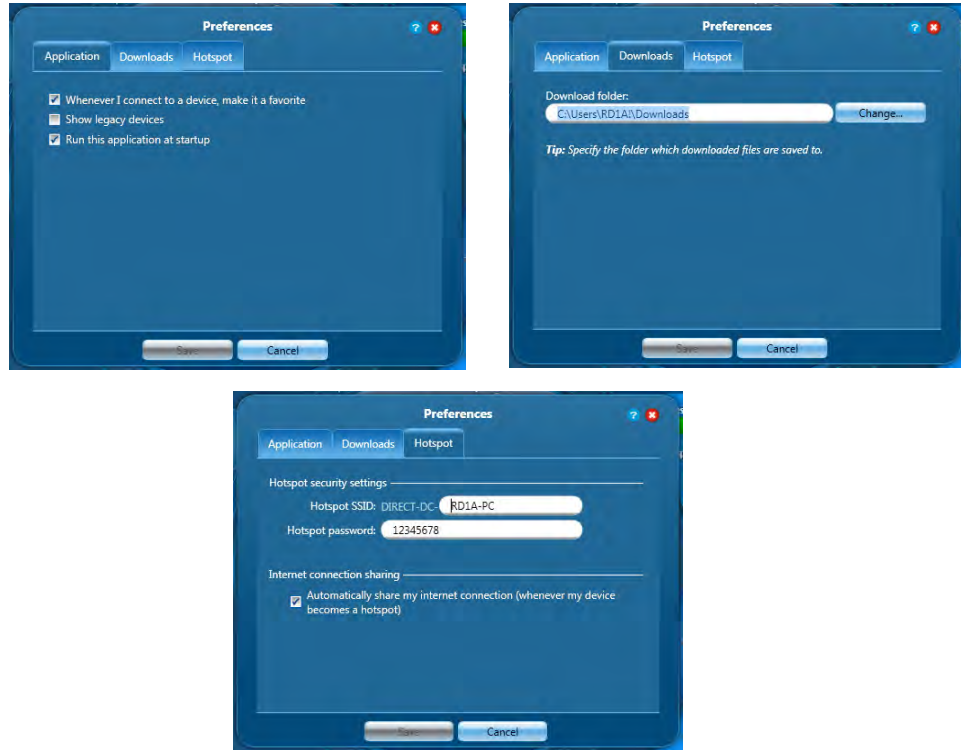

*Figure 8 - 10*  
**Intel® My WiFi**  
**Utility - Preferences**

## Hotspot

You can turn the computer into a hotspot to allow other devices to connect to it (and any locally connected devices), and also (if available) the internet.

1. Click the **Hotspot** icon  to turn the **Hotspot** on.
2. The **Hotspot** settings tab shows the SSID and password (you will need to enter this information when accessing the **Hotspot** from the client computer/device).
3. Click **OK** to close the **Hotspot** settings.

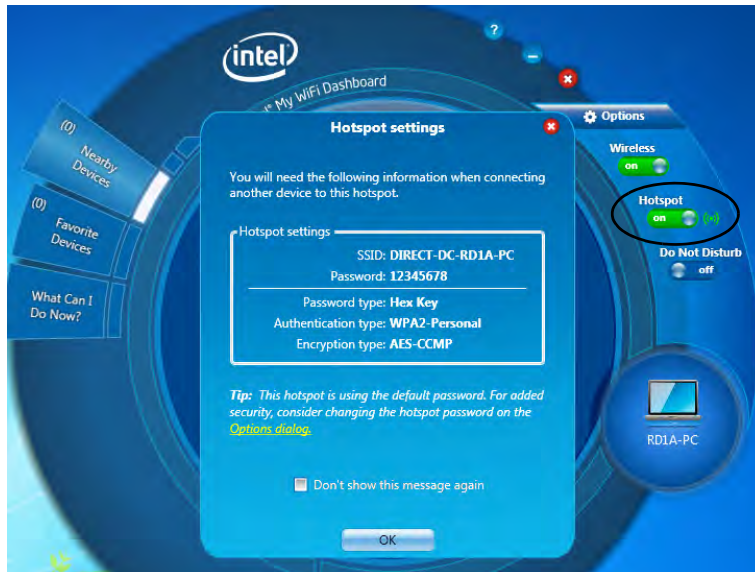





Figure 8 - 11  
Intel® My WiFi  
Utility - Hotspot

## Troubleshooting

### Finding Devices

You can find any **Nearby Devices** by clicking the **Refresh** button  in the main window. Click again at any time to update the list. If a lot of devices are found they will be listed on multiple pages and you can use the left  or right  buttons to turn the pages.

### Sensitivity

The **Sensitivity** controls displays available devices based on their signal strength and proximity e.g decreasing (-) the sensitivity lists only devices closest to the computer's location.


### Group Devices by Type

If you click **Group by type** it will list all devices according to their type in a folder group. Double-click on any group folder to see the devices of that type listed. There are 12 possible device types available.

### Search

If you want to search for a particular device by name then enter the device name in the Search field to return results for devices matching the name of the device.

## Favorite Devices

The **Favorite Devices** tab is where you keep devices to which you connect most often, and this is particularly useful in environments where many devices are listed nearby. A favorite device will display the icon .


To make any device a favorite just click to select it and select **Add Favorite**.



Figure 8 - 12  
Intel® My WiFi  
Utility - Interface

## Troubleshooting

### Connect to a Device

1. Click the device you want to connect to, and click the connect icon .
2. An invitation will be sent to the target device.
3. The user must then accept the invitation.
4. After the invitation is accepted the connection will be made.
5. Use the **Windows Network and Sharing Center** to set permissions for viewing and sharing the resources on your computer with another connected computer.

### Further Information

For information on how to **block/unblock** devices, setting **Do Not Disturb**, **sharing an internet connection** and **chat** options see *“Intel® My WiFi Help” on page 8 - 27.*




 





# Appendix A: Interface (Ports & Jacks)

## Overview

The following chapter will give a quick description of the ports & jacks which allow your computer to communicate with external devices, connect to the internet etc.








# Ports and Jacks

Item	Description
<p>Card Reader</p> 	<p>The card reader allows you to use the following digital storage cards:</p> <p>MMC (MultiMedia Card) / RSMMC SD (Secure Digital) / Mini SD / SDHC / SDXC MS (Memory Stick) / MS Pro / MS Duo</p> <p>Push the card into the slot and it will appear as a removable device.</p>
<p>DC-In Jack</p> 	<p>Plug the supplied AC/DC adapter into this jack to power your computer.</p>
<p>DisplayPort</p> 	<p>The DisplayPort is a digital display interface standard that allows a digital audio/video interconnect, between the computer and its external display or a home-theater system.</p>
<p>DVI-Out Port</p> 	<p>The DVI-Out (<b>Digital Visual Interface</b>) Port is a video connector interface. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see <a href="#">“Configuring an External Display (NVIDIA)” on page C - 6</a>) by means of a DVI cable. If you are using an older type of monitor you will need to use a converter to convert the signal from DVI to VGA.</p>

Item	Description
<p>e-SATA/Powered USB 3.0 Port</p> 	<p>This is a combined <b>e-SATA (external Serial Advanced Technology Attachment)</b>/ USB 3.0 compatible port.</p> <p>Plug external Serial ATA hard drives into this <b>e-SATA (external Serial Advanced Technology Attachment)</b> port. *See <b>“USB 2.0/1.1 Ports”</b> on page A - 5 for further USB port information.</p> <p><b>Note:</b> The <b>powered USB 3.0 port</b> (see <b>“Left View”</b> on page 1 - 18) may be toggled on /off by means of the <b>Fn + Power Button</b> key combination (<b>press for around 1 to 2 seconds</b> to toggle). When the powered USB port is on it will supply power (<b>for charging devices only, not for operating devices</b>) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page 8 - 13).</p> <p><b>Note:</b> This function is designed to help <b>charge USB compliant devices</b>, but is <b>not designed to allow their operation</b>.</p>
<p>HDMI-Out Port</p> 	<p>The HDMI-Out (<b>High-Definition Multimedia Interface</b>) port is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see <b>“Configuring an External Display (NVIDIA)”</b> on page C - 6) by means of a HDMI cable. <b>Note that HDMI carries both audio and video signals</b> (see <b>“HDMI Audio Configuration”</b> on page C - 18).</p>
<p>Headphone-Out Jack</p> 	<p><b>Headphones</b> or <b>speakers</b> may be connected through this jack. <b>Note:</b> Set your system’s volume to a reduced level before connecting to this jack.</p>






## Interface (Ports & Jacks)

Item	Description
Line-In Jack 	The Line-In jack allows you to play audio sources through the computer's speakers. Note that audio input through Line-in will default to the <b>mute</b> setting. To set up your audio sources to play through the Line-in jack go to the <b>Sound</b>  control panel and make sure the Mute box is not ticked.
Microphone-In Jack 	Plug an external microphone in to this jack to record on your computer.
Mini-IEEE 1394 Port 	This allows high-speed connection to various peripheral devices, e.g. external disk drives and digital cameras ( <b>see note below</b> ). <div style="border: 2px solid red; border-radius: 15px; padding: 10px; text-align: center; margin: 10px 0;">   <b>IEEE 1394</b>                          The Mini-IEEE 1394 ports only support <b>SELF POWERED</b> IEEE 1394 devices.                     </div>
RJ-45 LAN Jack 	This port supports LAN (Network) functions. <b>Note:</b> Broadband (e.g. ADSL) modems usually connect to the LAN port.
S/PDIF-Out Jack 	This S/PDIF ( <b>Sony/Philips Digital Interface Format</b> ) Out Port allows you to connect your DVD-capable PC to a Dolby AC-3 compatible receiver for "5.1" or 'dts' surround sound.

A

### A - 4 Interface (Ports & Jacks)

Item	Description
<p>Security Lock Slot</p> 	<p>To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.</p>
<p>USB 2.0/1.1 Ports*</p>   <p>USB 3.0 Port</p> 	<p>These USB (<b>Universal Serial Bus</b>) 2.0 compatible ports (USB 2.0 is fully USB 1.1 compliant) are for low-speed peripherals such as keyboards, mice or scanners, and for high-speed peripherals such as external HDDs, digital video cameras or high-speed scanners etc. Devices can be plugged into the computer, and unplugged from the computer, without the need to turn the system off (if the power rating of your USB device is 500mA or above, make sure you use the power supply which comes with the device).</p> <p>This model has three USB 3.0 ports on the left side of the computer which are denoted by their blue color. USB 3.0 will transfer data much faster than USB 2.0, and is backwards-compatible with USB 2.0.</p> <p>The USB 3.0 ports require a driver (see <i><b>“USB 3.0 (Win 7 Only)” on page 4 - 6</b></i>) installation for <b>Windows 7</b> (no driver is required for <b>Windows 8</b>).</p>

## Interface (Ports & Jacks)

A

# Appendix B: Control Center

## Overview

The following chapter will give a quick description of the functions of the **Control Center**. The **Control Center** gives quick access to frequently used controls, power management features and enables you to quickly turn modules on/off. Click the **Control Center** icons to toggle the appropriate function, or hold the mouse button down and move the slider where applicable. Certain functions will automatically be adjusted when a power mode is selected. The **Control Center** in *Windows 8* works under the **Desktop** app (see *“Function/Hot Key Indicators & Control Center” on page F - 15*) and not under the Start screen, and does not feature the wireless/Bluetooth buttons and Airplane Mode etc.



Figure B - 1 - Control Center

## Control Center

### Power Modes

You can set a **Power Mode** by clicking the appropriate icon at the top of the **Control Center**. Each power mode will affect the power status of modules (e.g. WLAN, Bluetooth, 3G or Camera), screen brightness, TouchPad power and Silent Mode.

You can click a **Control Center** icon to set an overall power mode and then click individual icons in the **Control Center** to power on/off any modules etc.

The **table overleaf** illustrates the basic settings for each power mode. If you choose user defined the settings will correspond to your selected system settings.



Modes		Power Saving	Flight	Entertainment	Quiet	Performance	User Defined	
Icon								
Power Plan		Power Saver	Balanced	Power Saving	Power Saving	High Performance	User Defined	
Power Conservation Mode		Energy Star	BIOS Default	Energy Star	Energy Star	Performance		
Brightness		14	42	100	42	100		
WLAN		OFF	OFF	ON	ON	ON		
Bluetooth		BIOS Defined						
PC Camera		OFF	OFF	OFF	ON	ON		
TouchPad		ON	ON	OFF	ON	ON		

Table B - 1- Power Modes

## Control Center

### Power Status

The **Power Status** icon will show whether you are currently powered by the battery, or by the AC/DC adapter plugged in to a working power outlet. The power status bar will show the current battery charge state.

### Brightness

The **Brightness** icon will show the current screen brightness level. You can use the slider to adjust the screen brightness or the **Fn + F8/F9** key combinations, or use the **Fn+ F2** key combination to turn off the LED backlight (press any key to turn it on again). Note that screen brightness is also effected by the **Power Mode** selected (see [Table B - 1, on page B - 3](#)).

### Volume



The **Volume** icon will show the current volume level. You can use the slider to adjust the Volume or the **Fn + F5/F6** key combinations, or use the **Fn+ F3** key combination to mute the volume.

### Power Conservation


This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity (see [“Power Conservation Modes” on page 3 - 10](#)). Click either the **Performance**, **Balanced** or **Energy Star** button.



**Sleep** 

Click the **Sleep** button to bring up the **Hibernate**  or **Sleep**  buttons, and click either button to have the computer enter the appropriate power-saving mode (see *“Power-Saving States” on page 3 - 6*).

**Display Switch** 

Click the **Display Switch** button to access the menu (or use the  + **P** key combination) and select the appropriate attached display mode (see page *C - 13*).

**Time Zone** 

Clicking the **Time Zone** button will access the **Date and Time Windows** control panel.


**Desktop Background** 

Clicking the **Desktop Background** button will allow you to change the desktop background picture.

**K/B LED**   
K/B LED

Click to access the keyboard setting control to configure the keyboard LED.

**TouchPad/PC Camera/Wireless LAN Module /Bluetooth**    

Click any of these buttons to toggle the TouchPad or module's power status. A crossed out icon will appear over the top left of the icon  when it is off. Note that the power status of a module, and TouchPad power, is also effected by the **Power Mode** selected (see *Table B - 1, on page B - 3*). The WLAN and Bluetooth buttons are not featured in the *Windows 8* system.

**Caps Lock/Scroll Lock/ Number Lock**   

Click the button to toggle the appropriate lock mode.



# Appendix C: NVIDIA Video Driver Controls

The basic settings for configuring the LCD are outlined in *“Video Features” on page 1 - 22*. For information on the *Windows 8* operating system see *Appendix F*.

## NVIDIA Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

1. Insert the *Device Drivers & Utilities + User’s Manual* disc and click **Install Drivers** (button).
2. Click **3.Install VGA Driver > Yes**.
3. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
4. Click **Next**.
5. Click the **RESTART NOW** button to restart the computer.

After Video (VGA) driver has been installed, and the system restarted, the OS will automatically run the "Winsat.exe" to rate the performance. Allow time for this process to finish and do not restart during this process (if you have restarted the system see *“Windows Update” on page 4 - 9*).




### Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported (see *“Video Adapter” on page E - 2, or contact your service center for details*).



### NVIDIA Control Panel


To access the **GeForce.....** control panel from the desktop; right-click the **desktop**, then click **NVIDIA Control Panel**.

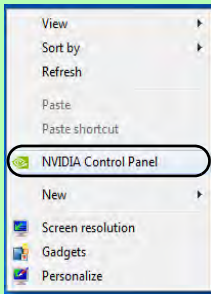

## NVIDIA Control Panel

More advanced video configuration options are provided in the **NVIDIA Control Panel** tab.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **NVIDIA Control Panel** (click "**Classic View**" from the left of the menu if you are in **Control Panel Home**).

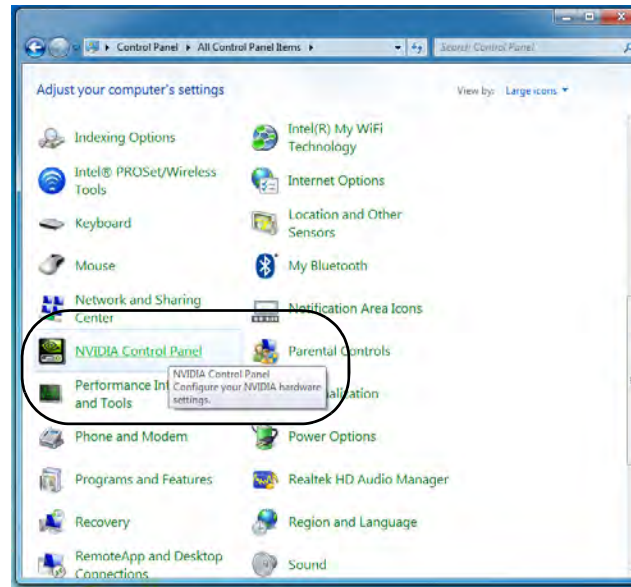

*Figure C - 1*

### NVIDIA GeForce..... Control Panel

The **NVIDIA Control Panel** provides additional video configuration controls and tools which allow quick access to features such as display configuration, 3D Settings and Help menus etc.



## Navigating the Control Panel

Navigate through the control panels in much the same way as you would a web page. Click on the sub-headed links in the left menu (and on the highlighted links) for information. Use the buttons on the top left to go back, forward etc.


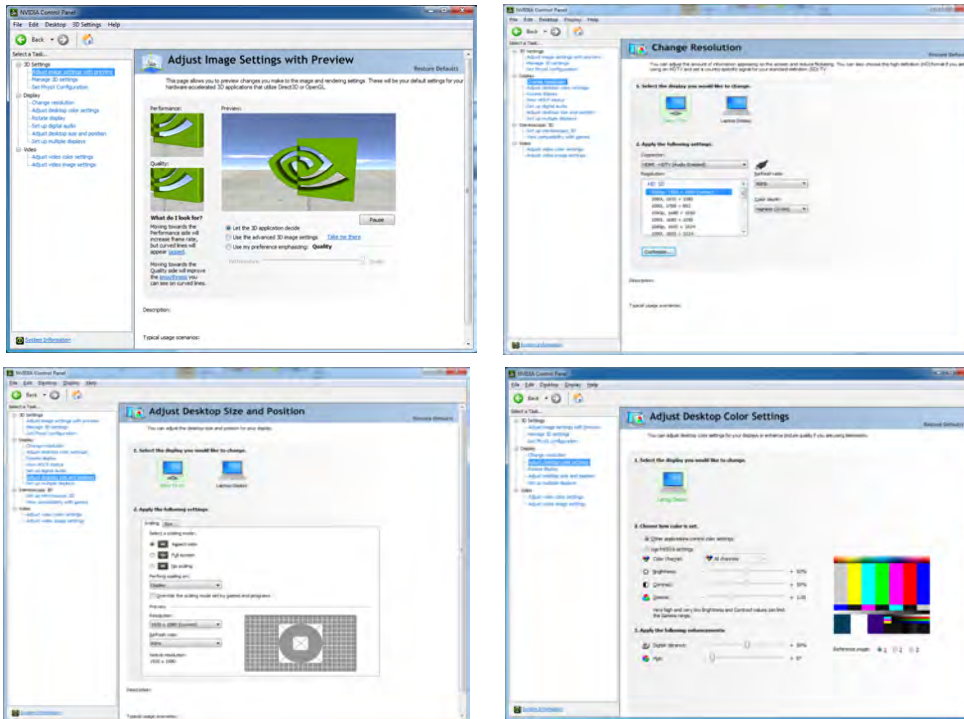


Figure C - 2  
NVIDIA Control  
Panels

## NVIDIA Video Driver Controls

The **Help** menus provide index and search features, and direct links to the NVIDIA website etc.

*Figure C - 3*  
**Help Menu**

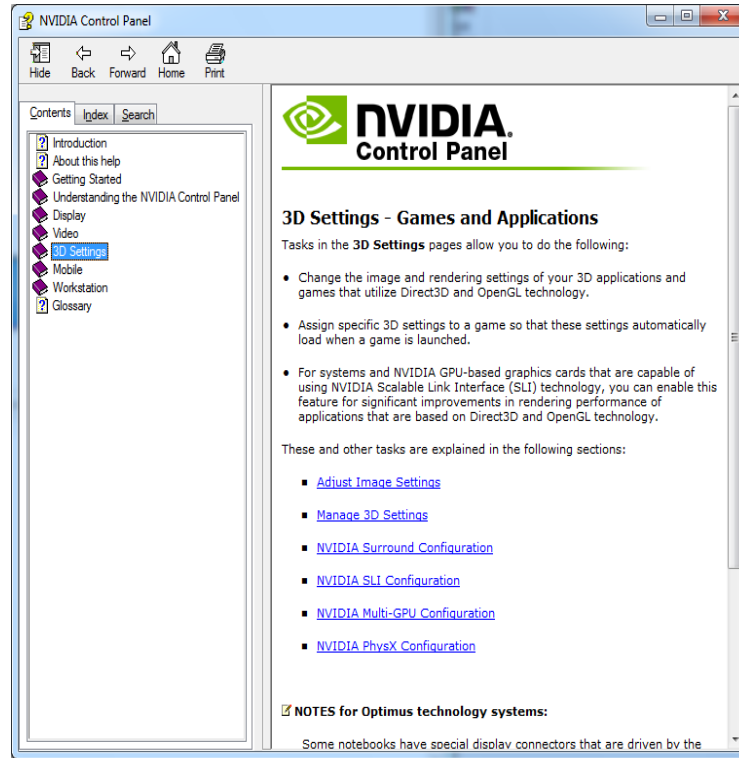



## Display Devices

Note that you can use a DVI cable connected to the DVI-Out port, an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port (if you are using an older type of monitor you can use a converter to convert the signal from DVI to VGA) or DisplayPort cable connected to the DisplayPort, to connect an external display. See your display device manual to see which formats are supported.

Display Mode	Description
Single	One of the connected displays is used as the display device
Clone Displays	Clone simply shows an exact copy of the Primary display desktop on the other display(s). This mode will drive multiple displays with the same content
Extend	Extend treats both connected displays as separate devices, and they act as a virtual desktop resulting in a large workspace. When enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one of the displays, and a different program visible in the other display



### Sound Blaster Audio & HDMI Connection

Note that **Sound Blaster Audio** will be disabled when you are connecting to an external display through an **HDMI connection**.

*Table C - 1*  
**Display Modes**



### SLI Configuration & Multiple Displays

Note that if SLI configuration is enabled only a **Single** display may be used as the display device.



### Display Not Shown

If the attached display does not appear in the “1.Select the displays you want to use.” window, click “**My Display is not shown...**” and then click the appropriate button to force detection of the missing display.


### HDMI Audio Setup

See “**HDMI Audio Configuration**” on page C - 18 for instructions on configuring audio for HDMI display devices.

# Configuring an External Display (NVIDIA)

## Clone the Displays

1. Attach your external display to the appropriate port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page C - 2).
3. Double-click **Display** (if the sub-menus are not visible), and then click **Set up multiple displays**.
4. Any attached display will appear under “1.Select the displays you want to use.”

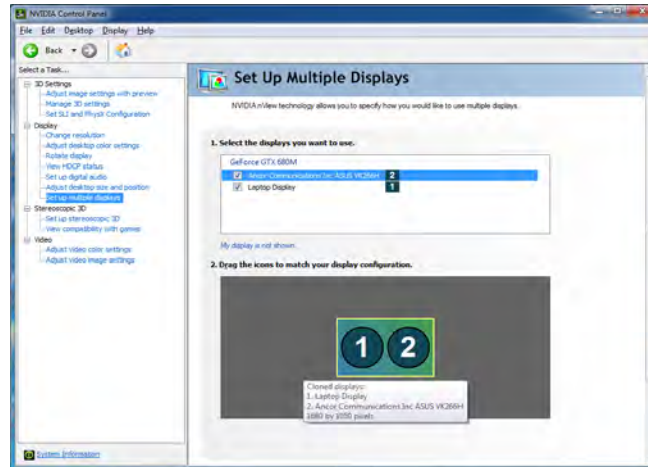


*Figure C - 4*  
**Set Up Multiple Displays**

5. Click the tickbox alongside any display you wish to use.
6. Click **Apply > Yes** to save any changes made (the **Apply** button will appear in the bottom right of the control panel when changes have been made).

## Extending the Display

1. Attach your external display to the appropriate port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page C - 2).
3. Double-click **Display** (if the sub-menus are not visible), and then click **Set up multiple displays**.
4. Click to select a primary display under “**1. Select the displays you want to use.**”
5. Right-click the icons under “**2. Drag the icons to match ....**” and select **Extend**.

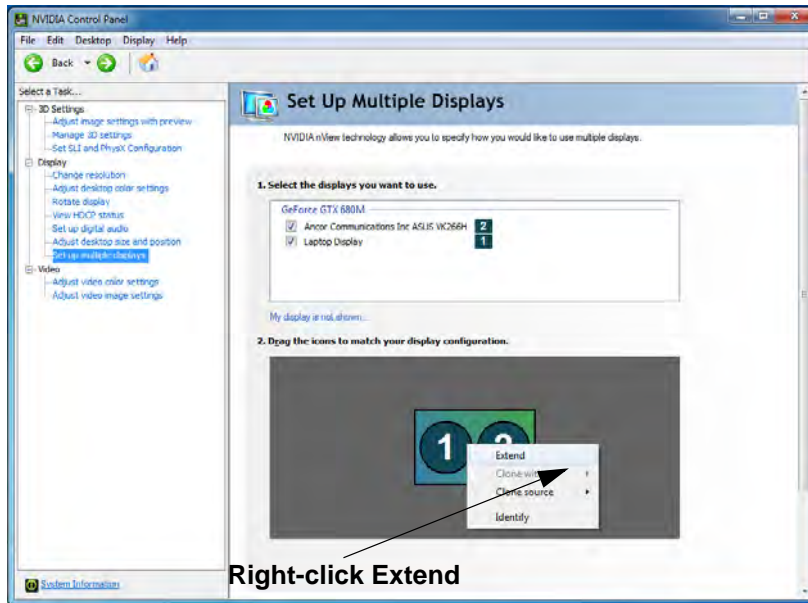

### Changing the Primary Display on Extended Displays


If you want to switch the primary display if the displays are extended then right-click the secondary display icon. Select “**Make this the Windows main display**”. Click **Apply > Yes** to save the change (see over).

Figure C - 5  
Extend the Display


## NVIDIA Video Driver Controls

6. The Primary display (the main window display) will be denoted by an **asterisk \*** in the top right corner of the icon.
7. To change the Primary display **right-click the icon** and select **Make primary**.
8. Click **Apply > Yes** to save any changes.

*Figure C - 6*  
**Switch Primary Display**

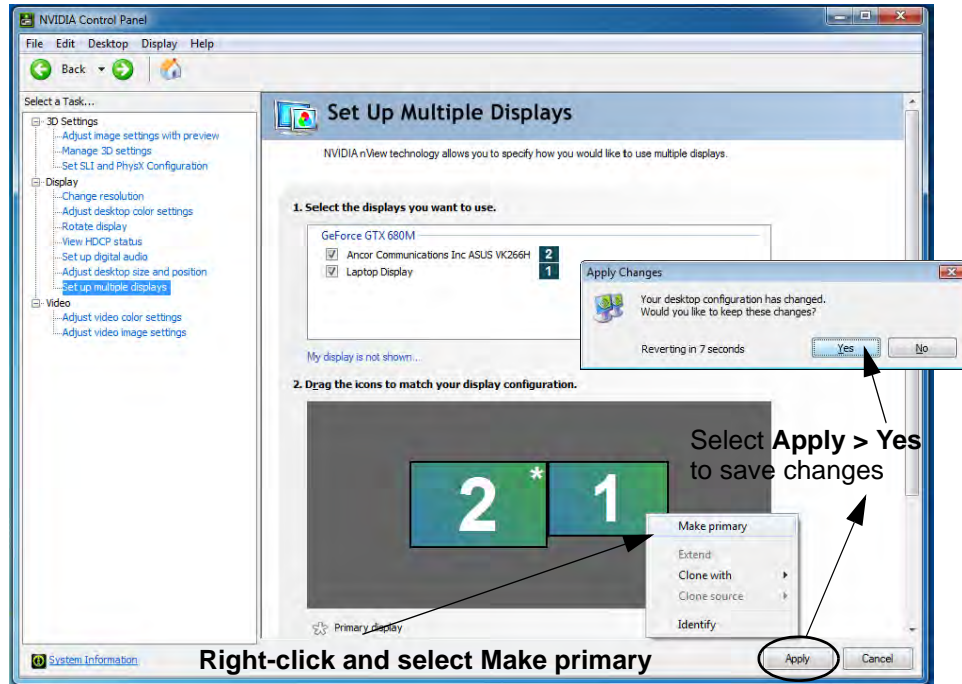

9. You can drag the icons to match the desktop layout you want to use (e.g. you may want to extend the display to the right or left of the primary display).
10. Click **Apply** > **Yes** to save any further changes.

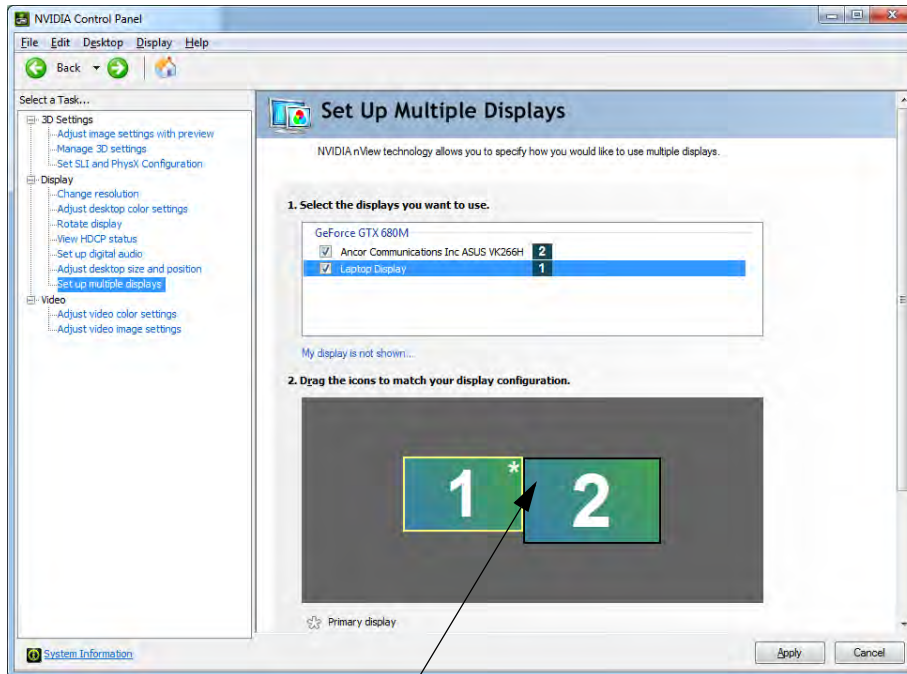

*Figure C - 7*  
**Drag Display  
Icons**


Drag the display icons to match the layout you want to use.

### Multiple Display Connection to HDMI-Out Port & DisplayPort

Note that the **NVIDIA** video cards **can support up to two external displays** (one attached to the HDMI-Out port and another attached top the DisplayPort), in addition to the built-in LCD.

Therefore it is possible to set up 3 simultaneous displays (including the built-in LCD), and these may be configured in **Clone** mode or **Extend** mode as required. Connect all the attached displays to the appropriate ports, and configure them as outlined on the previous pages.


*Figure C - 8*  
**Set Up Multiple Displays (3 Displays)**

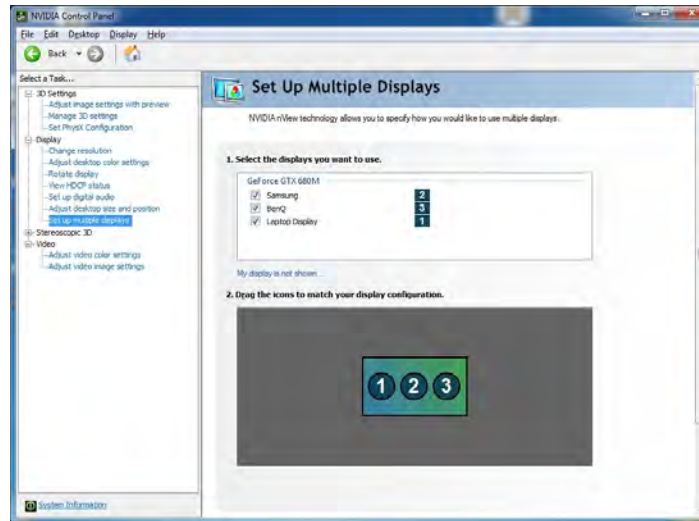

# Attaching Other Displays (Win 7)

## Configuring an External Display in Windows 7

1. Attach your external display to the appropriate port, and turn it on.
2. Go to the **Screen resolution** control panel.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

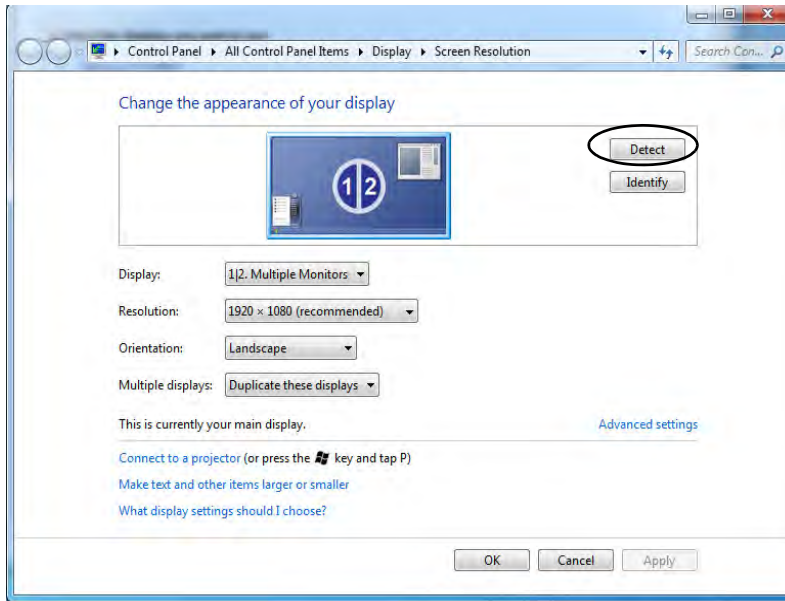

### Function Key Combination


You can use the **Fn + F7** key combination to toggle through the display options:

- Notebook Only
- External Display Only
- Notebook + External Display

Make sure you give the displays enough time to refresh.

*Figure C - 9*  
**Screen Resolution  
Multiple Displays  
(Win 7)**

5. You can configure the displays from the **Multiple Displays** menu.

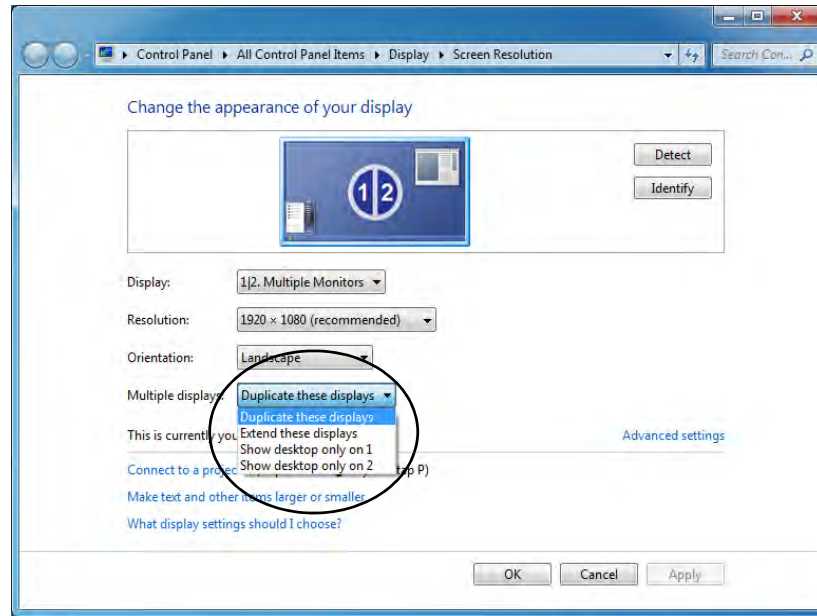



*Figure C - 10*  
**Screen Resolution**  
**Multiple Display**  
**Options**  
**(Win 7)**

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.




## Using the Windows Logo Key + P/Fn + F7 Key Combination to Switch Displays

You can also use the  + **P/Fn** + **F7** key combination to quickly change display configuration and modes in *Windows 7*.

1. Attach your external display to the appropriate port, and turn it on.
2. Press the  + **P/Fn** + **F7** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or  + **P/Fn** + **F7**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.



*Figure C - 11*  
 + **P/Fn** + **F7**  
Display  
Configuration  
Selection  
(Win 7)


### Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported. Note that not all video card options for this computer model series support SLI configuration (see [“Video Adapter Options” on page D - 2](#), or contact your service center for details).

## NVIDIA® SLI Multi GPU Configuration

This computer features an **NVIDIA Scalable Link Interface (SLI)** that improves graphic quality and performance by combining **dual NVIDIA GPUs** (two video cards are required) in a single system. To enable/disable SLI Configuration:

1. Go to **NVIDIA Control Panel** (see page [C - 2](#)).
2. Click **“+”** next to **3D Settings** if its sub-items are not shown and then click **Set SLI and PhysX configuration**.

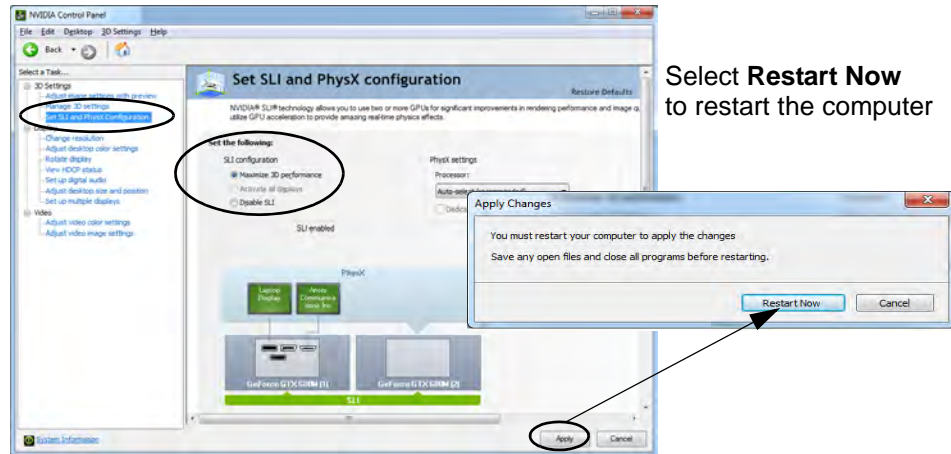

Select **Restart Now** to restart the computer

3. Click **“Maximize 3D Performance”** under **“SLI configuration:”**.
4. Click to select **“PhysX settings; Auto-select (recommended) is the default setting.**
5. Click **Apply** and **Restart Now** to restart the computer (see over).

Figure C - 12  
Set SLI Configuration

## NVIDIA® SLI Multi GPU Configuration & Power

Note that due to the high power and system demands created **when two video adapters are installed** in an SLI configuration, **you should not power the system using the battery only** and you **will require identical (300W) dual power adapters, connected to a power converter box, to power the system.**



*Figure C - 13 - Dual Power Adapters & Converter Box*

- Only **enable an SLI configuration** if the system is powered by **identical dual power adapters connected by means of the power converter box.**
- If the computer is currently powered by battery only **do not enable an SLI configuration.**
- If you have currently enabled an SLI configuration, and the computer is powered by the dual AC/DC adapters, **do not switch to battery power only** (or go to the **NVIDIA Control Panel** and disable the SLI configuration before switching to battery power only).



### SLI Configuration & Multiple Displays


Note that if an SLI configuration is enabled only a **Single** display may be used as the display device.

# Manage 3D Settings

You can configure the 3D **global settings** (to be applied to all application programs) or make specific adjustments for installed **program settings**.

1. Go to **NVIDIA Control Panel** (see page **C - 2**).
2. Click **Manage 3D Settings** and select either **Global Settings** or **Program Settings**.
3. Click the **Setting** menu items to select any global options required, or **select a program to customize** from the drop-down menu (click **Add** to add any program that does not appear in the menu).
4. Click **Apply** to save the settings.


Figure C - 14  
Manage 3D  
Settings

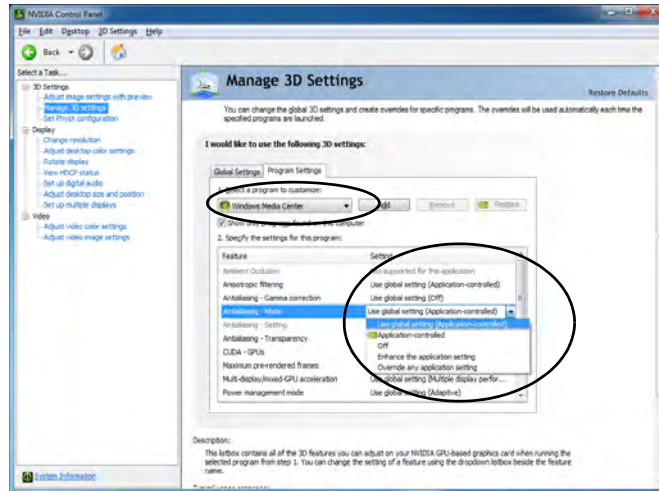

# Adjust Video Settings

You can adjust video color and image settings from the **Video** sub-menus.

1. Go to **NVIDIA Control Panel** (see page **C - 2**).
2. Click “+” next to **Video** if its sub-items are not shown and then click either **Adjust video color settings** or **Adjust video image settings**.
3. Make any adjustments required for any display and click **Apply** to save the settings.

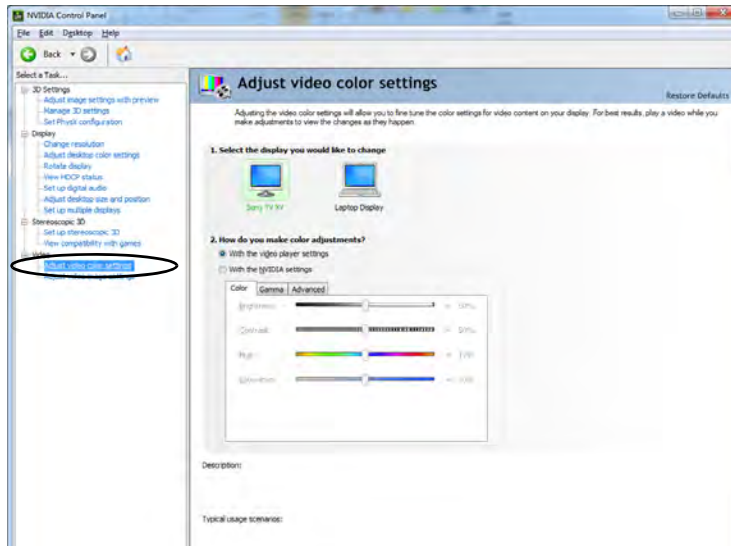


*Figure C - 15*  
Adjust Video Color  
Settings

# HDMI Audio Configuration

As HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals you can configure the audio output from the **NVIDIA control panel** and **Sound** control panel. The settings will depend upon the external HDMI display you have connected to.


When you connect a display to the HDMI-Out Port then the **Set up digital audio** item will appear under **Display**. Click **“Open Windows Sound Settings”** (button) to access the **Sound** control panel.


Figure C - 16  
Set up Digital Audio

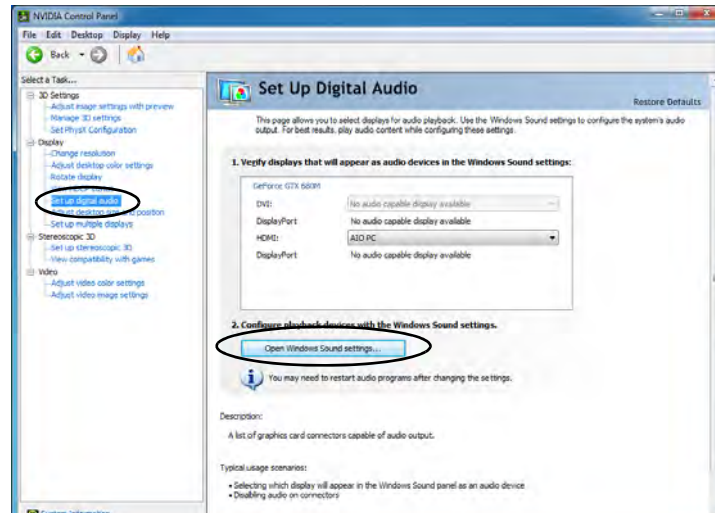

## Audio Setup for HDMI

In some cases it will be necessary to go to the Sound control panel and manually configure the HDMI audio output.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Sound**  (**Hardware and Sound**).
3. Click **Playback** (tab)
4. The playback device will be selected.
5. You may need to select the audio device and click **Set Default** (button).
6. Double-click the device to access the control panel tabs.

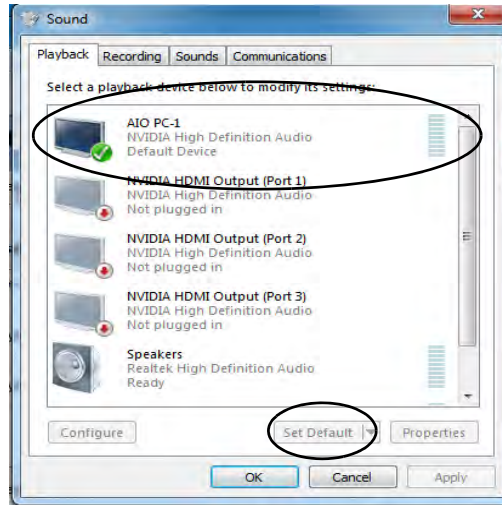


*Figure C - 17*  
**Sound Playback**  
**Options**

## NVIDIA Video Driver Controls

- Adjust the HDMI settings from the control panel tabs.
- Click **OK** to close the **Sound** control panel.

Figure C - 18  
HDMI Device  
Properties

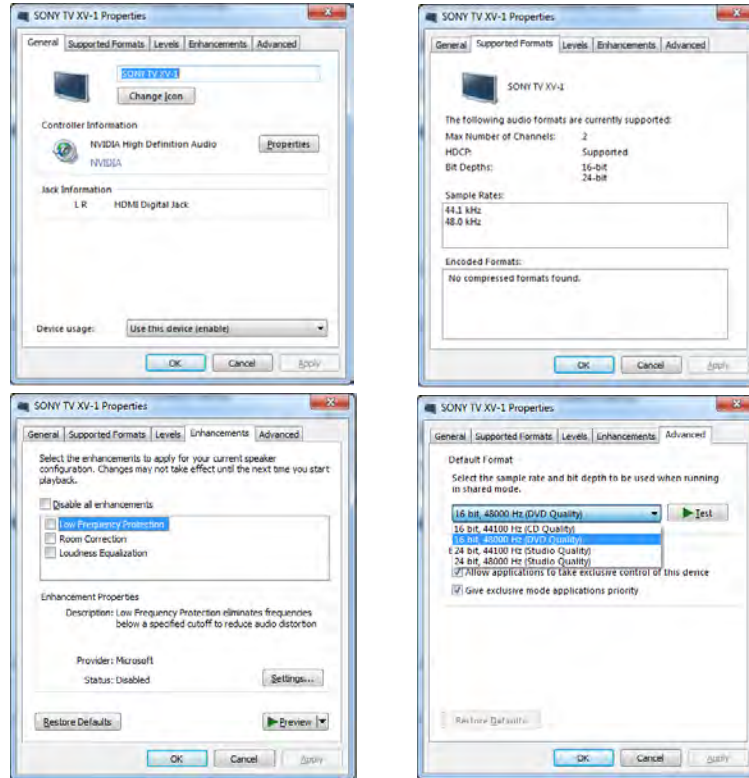



### HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- Under certain conditions, if the HDMI cable is disconnected, the default audio playback device will not revert to speakers until the computer is restarted (if you do not wish to restart the computer then go to the **Sound** control panel and select **Speakers** as the default audio playback device).

### HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in [“Configuring an External Display \(NVIDIA\)” on page C - 6](#).
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

### Sound Blaster Audio & HDMI

1. When you connect an HDMI display to the HDMI-Out port, the Sound Blaster controls will be disabled.
2. A warning box will pop-up and will prompt “**...Do you want to select another audio device now?**”.
3. Click **No** to continue using the HDMI audio output from your external display (do not attempt to select another audio device when connected to the external HDMI display).



#### Other Applications

If you are using a third party application to play DVDs etc. you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

### HDCP Status

If your external display is HDCP (High Bandwith Digital Content protection) compatible then the NVIDIA control panel will display the HDCP system status.

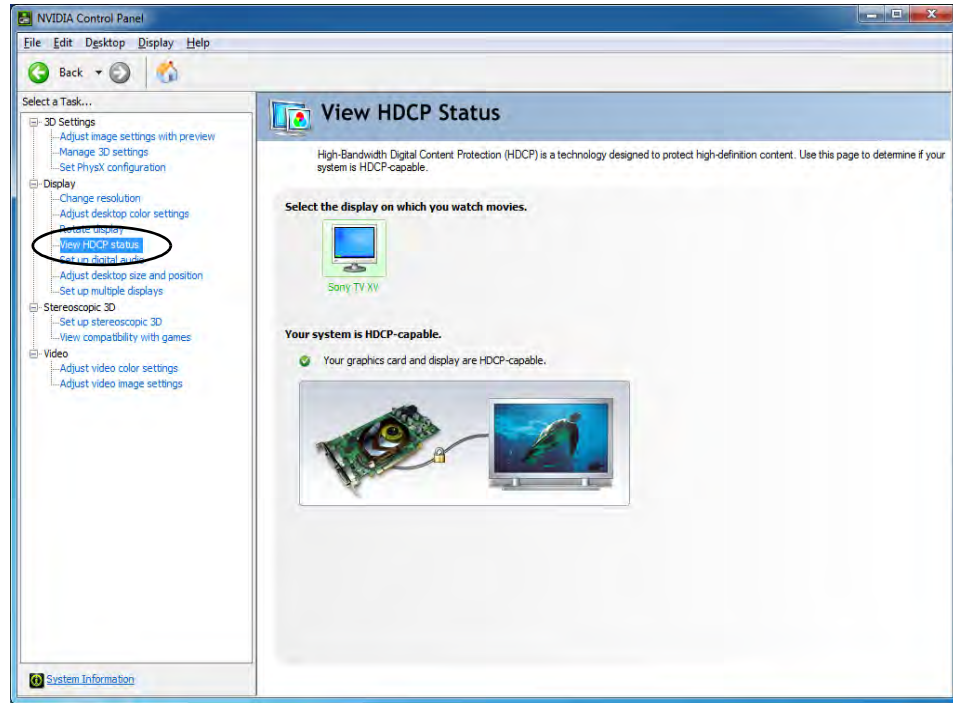


Figure C - 19  
HDCP Status

## NVIDIA 3D Shutter Glasses Kit

The NVIDIA 3DVISION™ 2 shutter glasses kit is supported only by **Model B computers which include the built-in 3D emitter and shutter glasses kit**. Install the video driver as indicated in *“NVIDIA Video (VGA)” on page 4 - 7*.



### Important Safety Instructions

Make sure you read all the enclosed safety instructions and precautions included in the NVIDIA 3D Vision Kit before setting up the 3D Glasses and IR Emitter. Follow the setup instructions provided in the documentation to set up the 3D Vision kit safely and take the **“User Vision Test,”** which will initiate when you turn on your GeForce 3D Vision for the first time. If you cannot see the image in 3D during the test, you should **DISCONTINUE USE IMMEDIATELY**. Continued use may result in health-related complications.

The NVIDIA 3DVISION shutter glasses kit is supplied with a single pair of shutter glasses and all necessary cables etc. Set up the hardware (run the set up wizard as indicated overleaf) as instructed in the manual supplied with the kit, however **make sure you have installed the NVIDIA driver from the *Device Drivers & Utilities + User’s Manual disc***. For further details contact your service center.

After the NVIDIA driver has been installed you can setup NVIDIA 3D Vision.



### NVIDIA Driver

Install the NVIDIA driver (see *“NVIDIA Video (VGA)” on page 4 - 7*) from the ***Device Drivers & Utilities + User’s Manual disc*** (to ensure compatibility).

### Stereoscopic 3D Hardware Setup

If your computer model features a **built-in 3D IR emitter** the location is illustrated below. The effective viewing angles of the emitter are illustrated overleaf. Make sure that you are viewing the notebook screen within the area highlighted overleaf in order to get the proper stereoscopic 3D effect.



*Figure C - 20*  
IR Emitter Location



#### USB Connection & 3D Glasses

The light on the glasses will **flash amber while charging**, and **solid amber when fully charged**.


The glasses hold approximately 40 hours of viewing per full charge. **Flashing red** indicates that less than 2 hours of charge are remaining.

The indicator light displays for about 30 seconds after turning the glasses on

## Viewing Angles

The emitter's **horizontal** viewing angle is **100 degrees**.

The emitter's **vertical** viewing angle is **75 degrees**.

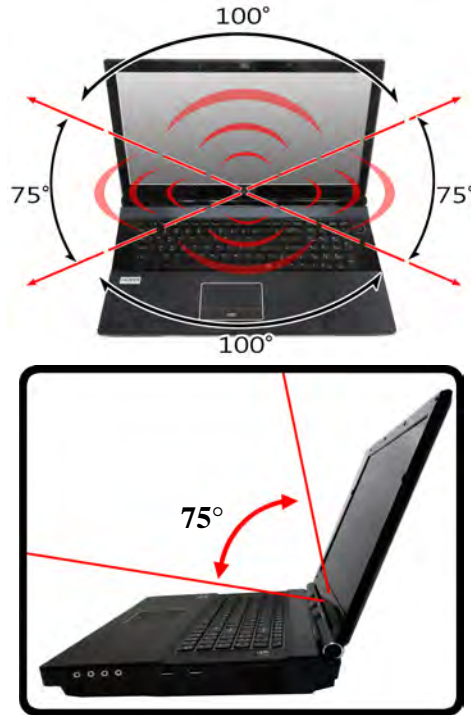

*Figure C - 21*  
**Emitter - Viewing**  
**Angles**

## NVIDIA Video Driver Controls

### Enable 3D Vision

You can enable 3D Vision if the NVIDIA control panel enclosed by clicking **Enable 3D Vision** from the **Start** menu.


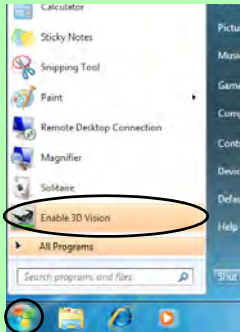


Figure C - 22


### Set Up Stereoscopic 3D

### Set Up Stereoscopic 3D

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **NVIDIA Control Panel** (click "**Classic View**" from the left of the menu if you are in **Control Panel Home**).
3. Double-click **Stereoscopic 3D** (if the sub-menus are not visible), and then click **Set up Stereoscopic 3D**.
4. Click **Enable stereoscopic 3D** (checkbox) to enable 3D Vision.
5. Click **Apply** to save the setting.

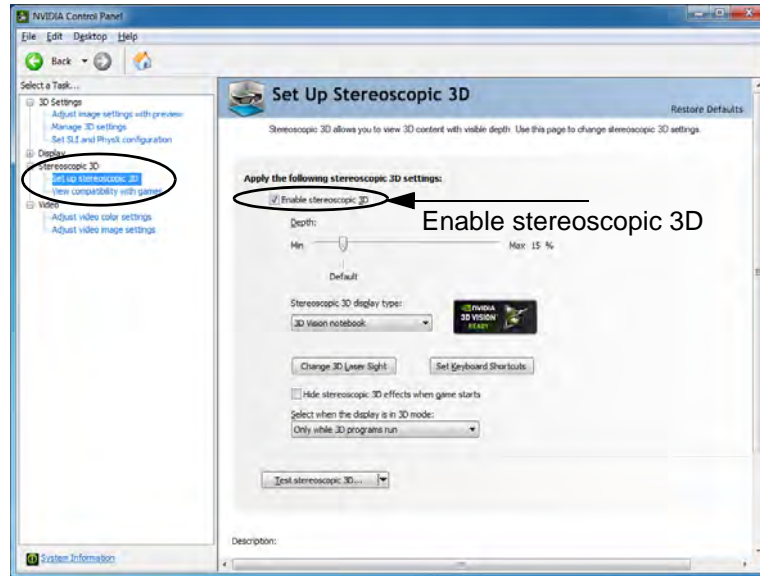

6. Select the drop-down menu at the bottom of the screen to **Test stereoscopic 3D**.
7. Select **Run Setup Wizard** from the drop-down menu (you can also select **Run Medical Image Test** from this menu).
8. Follow the on-screen instructions to set up 3D Vision and click “**Next**” to progress through the steps (this notebook has a built-in emitter).

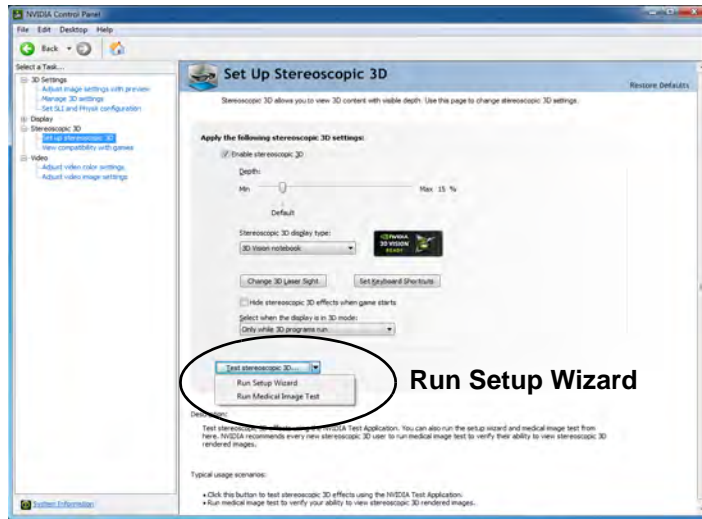


*Figure C - 23*  
**Set Up  
Stereoscopic 3D  
with Drop-Down  
Menu**

9. During the setup procedure you will need to click to answer questions on what you see in 3D on the screen.
10. Configure the stereoscopic 3D from the control panels (make sure you charge the 3D shutter glasses by plugging them into one of the computer’s USB ports using the USB cable provided).

## NVIDIA Video Driver Controls

11. The stereoscopic depth may be adjusted by using the control panel slider.
12. Click **View Compatibility With Games** to check 3D support for any games.

*Figure C - 24*  
**Compatibility With Games**

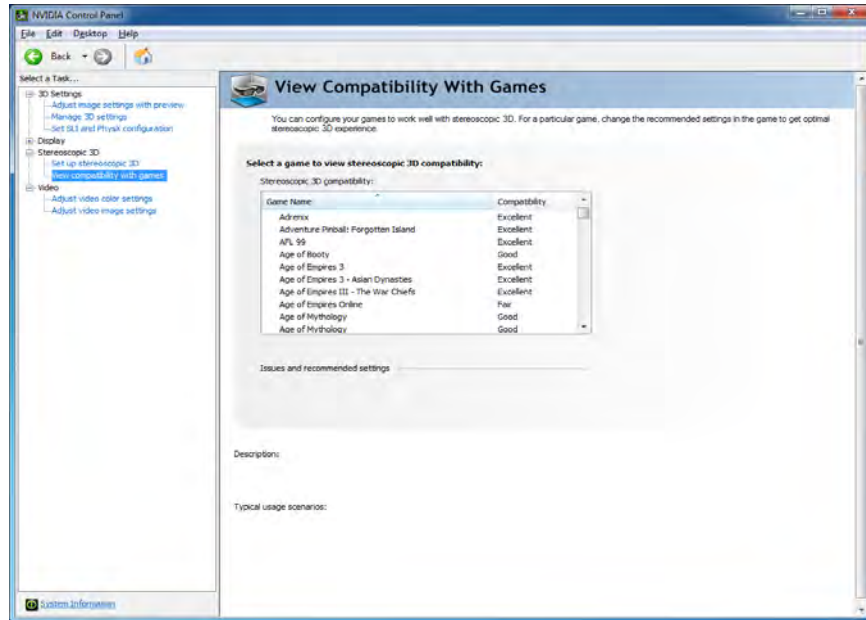



# Appendix D: AMD Video Driver Controls

The basic settings for configuring the LCD are outlined in *“Video Features” on page 1 - 23.*

## Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3.*

### Video (VGA)

1. Insert the *Device Drivers & Utilities + User’s Manual* disc and click **Install Drivers** (button).
2. Click **2.Install VGA Driver > Yes**.
3. Click **Next > Install** (button).
4. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
5. Click **Accept** (button) and click **Yes**.
6. Click **Finish > Yes** to restart the computer.
7. After the computer has restarted, click **Restart Now** to restart again to refresh the video driver.

Note that when attempting to access the **AMD Catalyst™ Control Center** in *Windows 7*, you may be prompted to **install Microsoft.net Framework Vx.X**. To get the **Microsoft.net Framework** file go to the *Microsoft* website, search for the file, download it and then install it.




### Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported (see *“Video Adapter Options” on page D - 3, or contact your service center for details*).



### Taskbar Icon

The **Catalyst™ Control Center** can also be accessed by double-clicking the icon  in the taskbar (or by right-clicking the icon and selecting **Configure Graphics**).


If you don't see the icon in the taskbar, click **Preferences** in the **Catalyst™ Control Center**, and select **Enable System Tray Menu** (see over).

*Figure D - 1*  
**Catalyst Control Center Access**

## Catalyst™ Control Center

Adjust the video settings from the **Catalyst™ Control Center**.


1. Right-click the desktop and select **Catalyst Control Center**.  
**OR**
2. Click **Advanced settings** in the **Screen Resolution** control panel (see [“Video Features” on page 1 - 23](#)), click the **Catalyst Control Center** tab and then click **ATI Catalyst control Center**.

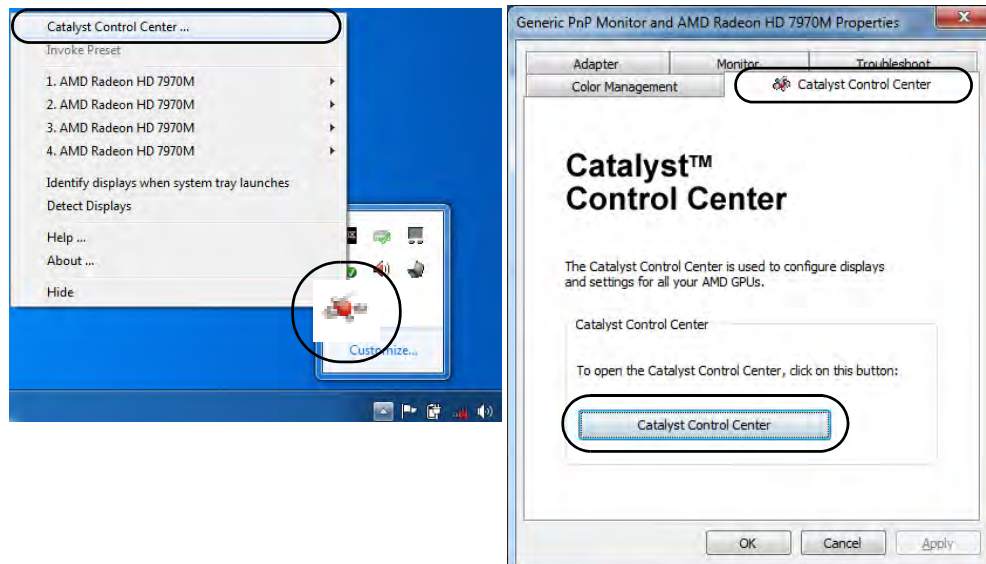


## Catalyst™ Control Center Preferences

The **Preferences** button in the **Catalyst™ Control Center** menu allows you to configure the control panel settings. You can view the control panel in either **Standard View** or **Advanced View**. To display **Standard View** or **Advanced View**:

1. Open the **Catalyst™ Control Center**.
2. Click the **Preferences** button and select either **Advanced View** or **Standard View**.

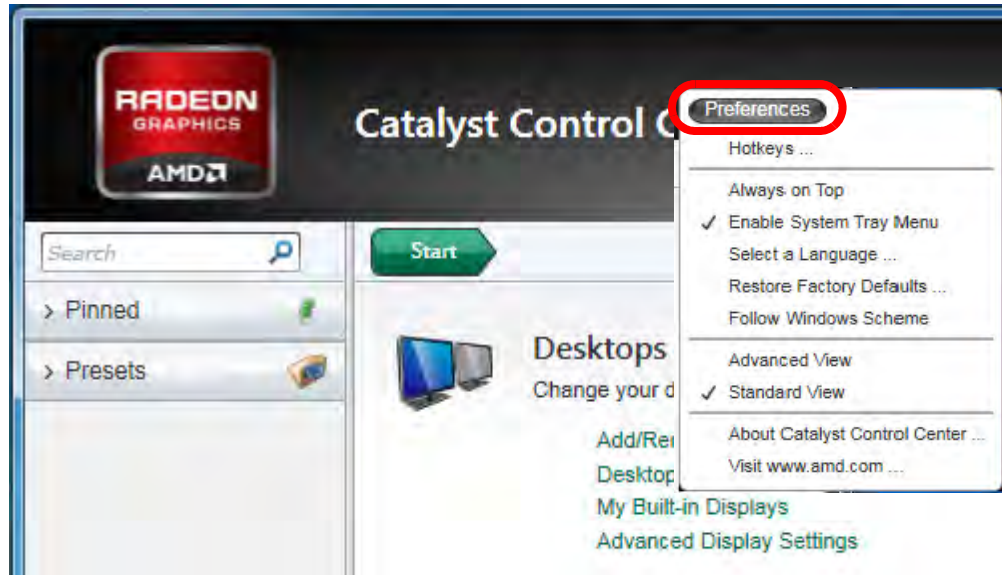




**Preferences & Views**

You can switch between **Advanced** and **Standard** views from the **Preferences** menu.

*Figure D - 2*  
**Catalyst Control Center Preferences**

### Standard View

The **Standard View** menus feature a series of menu headings with clickable sub-menus which allow you to adjust **Desktops and Displays**, **Power**, **Video**, **Gaming** and **Information**. Click the **Start** button to access the top level menu from any sub-menu heading.

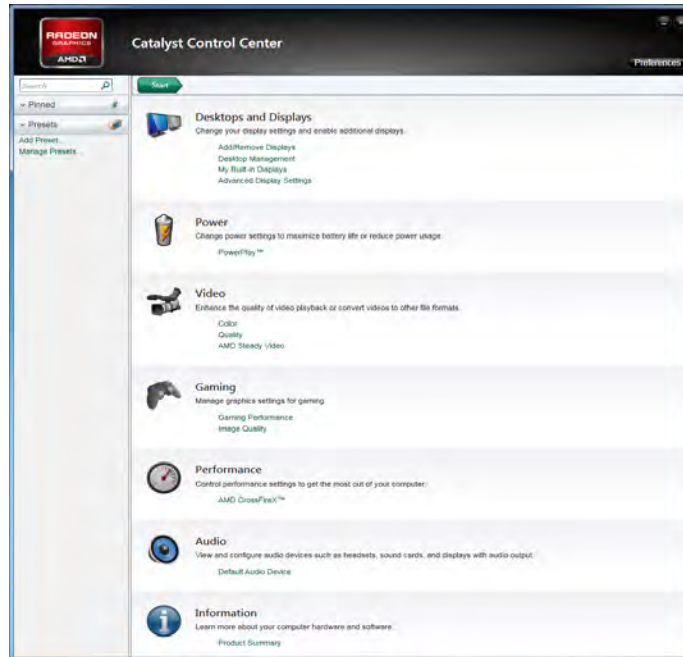

*Figure D - 3*  
Catalyst Control  
Center Standard View

## Advanced View

The **Advanced View** menus display all the menu headings as a series of buttons on the left. Click the arrows in any button to display the sub-menus (note all the figures in the remainder of this chapter are in **Advanced View**).



### Sub-Menu

Click a menu button to expand any sub-menus, and then click the appropriate sub-menu heading to configure the item.

### Catalyst Control Center Versions

Due to driver updates your Control Center screens may appear slightly different from those pictured on these pages.

*Figure D - 4*  
Catalyst Control Center Advanced View

## AMD Video Driver Controls




### Help Menus

Press **F1** to bring up **Help** menu. Click the question mark **?** in the top right to bring up help on a specific page.

*Figure D - 5*  
ATI Catalyst Control Center Advanced Menus

The **Catalyst™ Control Center** provides additional video configuration controls and tools which allow quick access to features such as display options, 3D Settings, color, power and Information menus etc. Adjust settings from the options in the sub-menus.

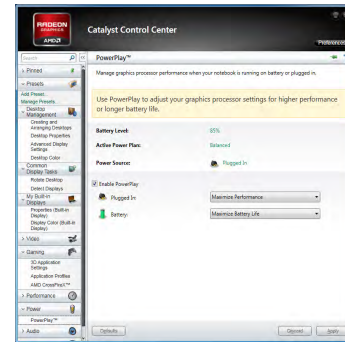

## Display Devices & Options

Note that you can use a DVI cable connected to the DVI-Out port, an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port (if you are using an older type of monitor you can use a converter to convert the signal from DVI to VGA) or DisplayPort cable connected to the DisplayPort, to connect an external display. See your display device manual to see which formats are supported.

Display Mode	Description
Single	One of the connected displays is used as the display device
Duplicate	Both connected displays output the same view
Extend	Both connected displays are treated as separate devices, act as a virtual desktop and may be configured independently



### Sound Blaster Audio & HDMI Connection

Note that **Sound Blaster Audio will be disabled** when you are connecting to an external display through an **HDMI connection**.

*Table D - 1*  
**Display Modes**



### Detect Displays


Click **Detect Displays** (button) to automatically update the attached display information.

You can set a preference for automatic display detection in **Advanced Display Settings (Desktop Management)**. You can choose to have attached displays automatically detected when the CCC is opened, or to use manual detection only.

## Configuring an External Display In the CCC

You can use the **Catalyst™ Control Center** to configure any attached displays.

1. Attach your external display to the appropriate port, and turn it on.
2. Open the **Catalyst™ Control Center**.
3. Select **Desktop Management** from the menu on the left (click the arrow to expand the menu) and click **Creating and Arranging Desktops**.
4. Attached displays will appear in the lower part of the screen (click **Detect Displays** to find any attached displays that do not automatically appear).

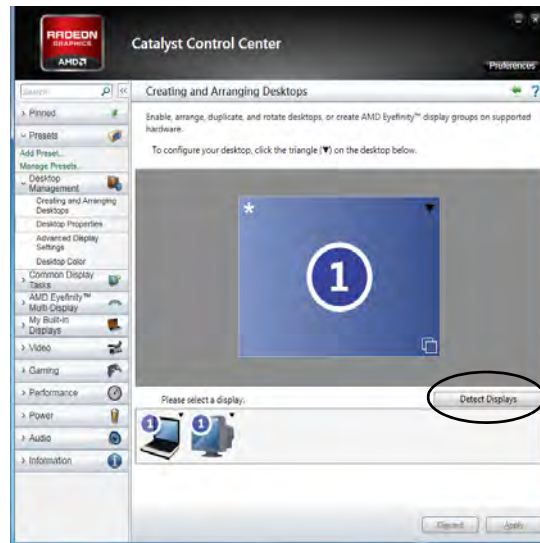


Click **Detect Displays** to find any attached displays that do not automatically appear.

*Figure D - 6*  
**Desktop Management**



5. Click the triangle icon ▼ (or right-click the display icon) on the attached display icon at the bottom to bring up the options (e.g **Duplicate** or **Extend**).
6. Select an option from the menu (click **Continue** if required), and click **Yes** to accept the settings.

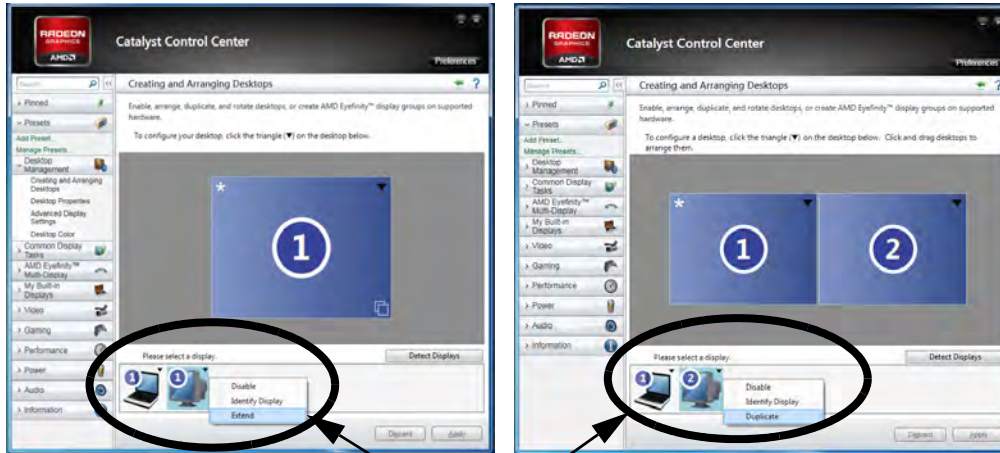

Attached displays will appear here.



### Disable Displays

If you want to disable any of the displays, right-click the display icon at the bottom of the screen and click **Disable**.


 



Figure D - 7  
Desktop  
Management with  
External Display

### My Digital Flat-Panels


An additional menu button entitled My Digital Flat-Panels will appear when an external digital display is attached. This menu allows you to configure the properties of the external display. After making any adjustments you may need to click the **Apply** button to confirm the changes.

*Figure D - 8*  
**My VGA Displays/  
My Digital Flat-  
Panels**

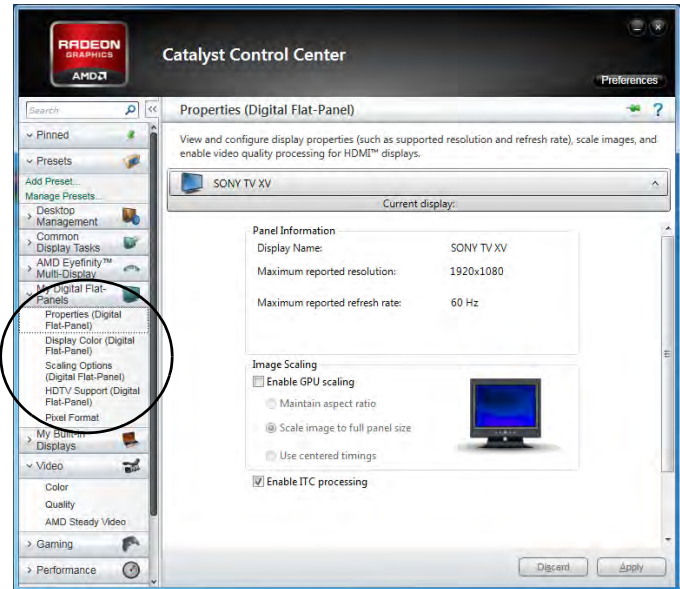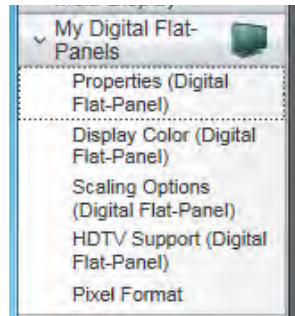

## HDTV Support

If your flat panel supports HDTV functions then this can be configured from **My Digital Flat-Panels > HDTV Support (Digital Flat-Panel)**.

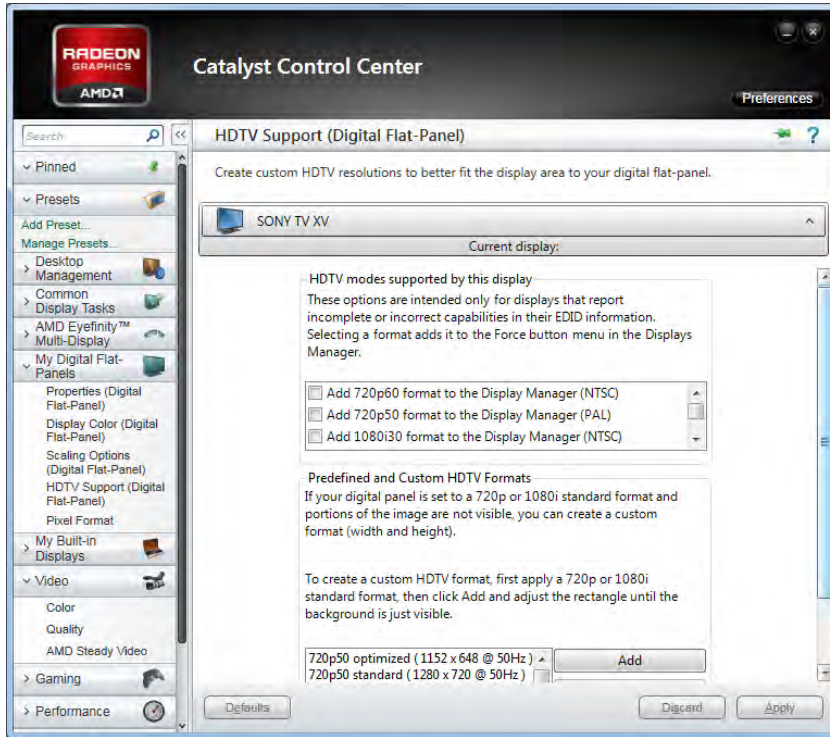


*Figure D - 9*  
**My Digital Flat-Panels**  
**(HDTV Support)**




### Configuring an External Display In Windows 7

1. Attach your external display to the appropriate port, and turn it on.
2. Go to the **Screen resolution** control panel (see *“Video Features” on page 1 - 23*).
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

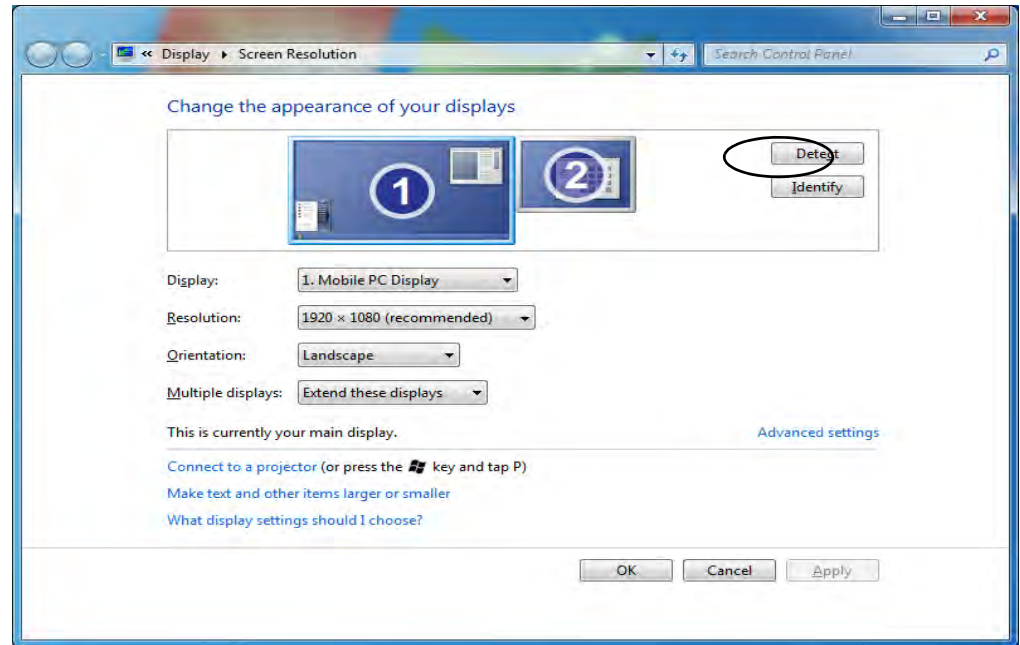

*Figure D - 10*  
**Screen Resolution**  
**Multiple Displays**  
**(Win 7)**


5. You can configure the displays from the **Multiple Displays** menu.

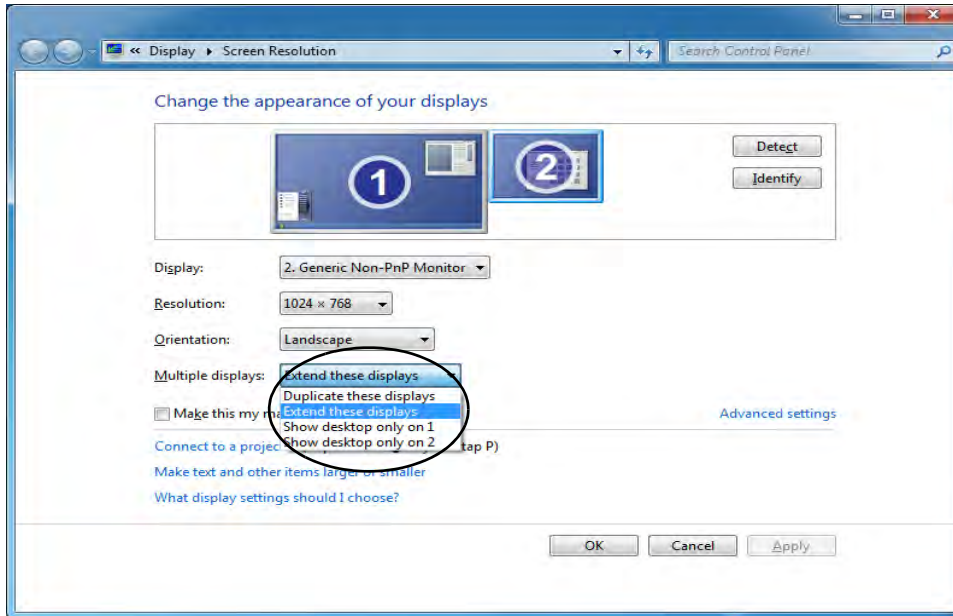




*Figure D - 11*  
**Screen Resolution**  
**Multiple Display**  
**Options**  
**(Win 7)**

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

### Using the Windows Logo Key + P/Fn + F7 Key Combination to Switch Displays

You can also use the  + **P/Fn + F7** key combination to quickly change display configuration and modes in *Windows 7*.

1. Attach your external display to the appropriate port, and turn it on.
2. Press the  + **P/Fn + F7** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or  + **P/Fn + F7**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.

*Figure D - 12*  
 + **P/Fn + F7**  
Display  
Configuration  
Selection  
(Win 7)



## PowerPlay™

When enabled, **PowerPlay™** can be used to automatically set to adjust the graphics processor settings for higher performance or longer battery life when the system is either **Plugged In** or on **Battery**.

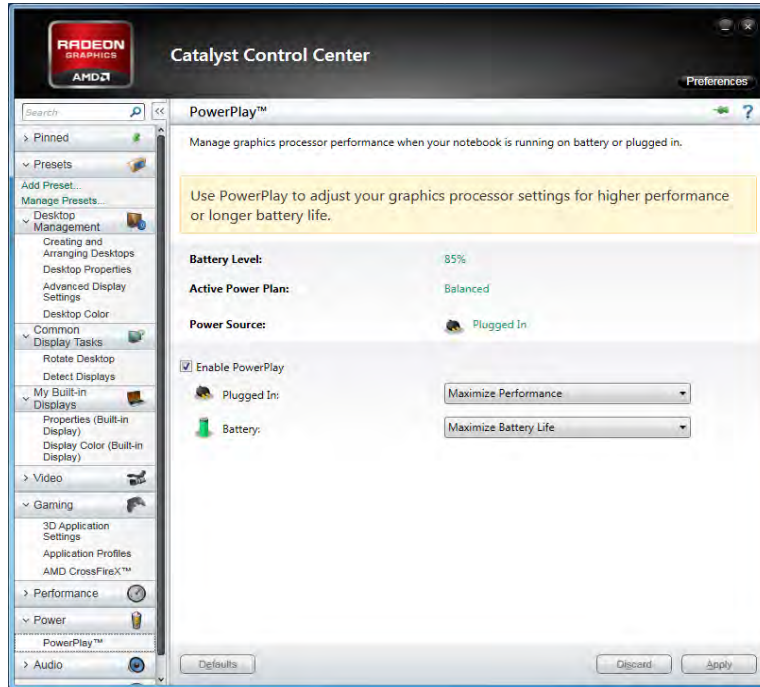


Figure D - 13  
PowerPlay™



# AMD CrossFireX™ Multi GPU Configuration

The **Gaming** menu includes configuration options for AMD CrossFireX™. AMD CrossFireX™ combines the processing power of multiple GPUs to a single display, and this may be enabled/disabled from the **AMD CrossFireX™ Configuration** menu (this sub-menu is also available in the Performance menu).

*Figure D - 14*  
**Gaming - AMD  
CrossFireX™**





## AMD CrossFireX™ Multi GPU Configuration & Power

Note that due to the high power and system demands created **when two video adapters are installed** in a CrossFire configuration, **you should not power the system using the battery only and you will require identical (300W) dual power adapters, connected to a power converter box, to power the system.**



*Figure D - 15 - Dual Power Adapters & Converter Box*

- Only enable a CrossFire configuration if the system is powered by identical dual power adapters connected by means of the power converter box.
- If the computer is currently powered by battery only **do not enable a CrossFire configuration.**
- If you have currently enabled a CrossFire configuration, and the computer is powered by the dual AC/DC adapters, **do not switch to battery power only** (or go to the **Catalyst™ Control Center** and disable the CrossFire configuration before switching to battery power only).




### CrossFire Configuration & Multiple Displays


Note that if a CrossFire configuration is enabled only a **Single** display may be used as the display device.

# HDMI Audio Configuration

HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals. Configure the audio output as per the instructions below.

1. Connect a device with HDMI support to the HDMI-Out port.
2. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
3. Click **Sound**  (**Hardware and Sound**), and click **Playback** (tab).
4. Depending on your display, the playback device may be selected automatically; however in some cases you may need to select the audio device and click **Set Default** (button) or select **Realtek Digital Output** and click **Set Default** (button).

*Figure D - 16*  
**Sound - HDMI  
Device  
(Set Default)**

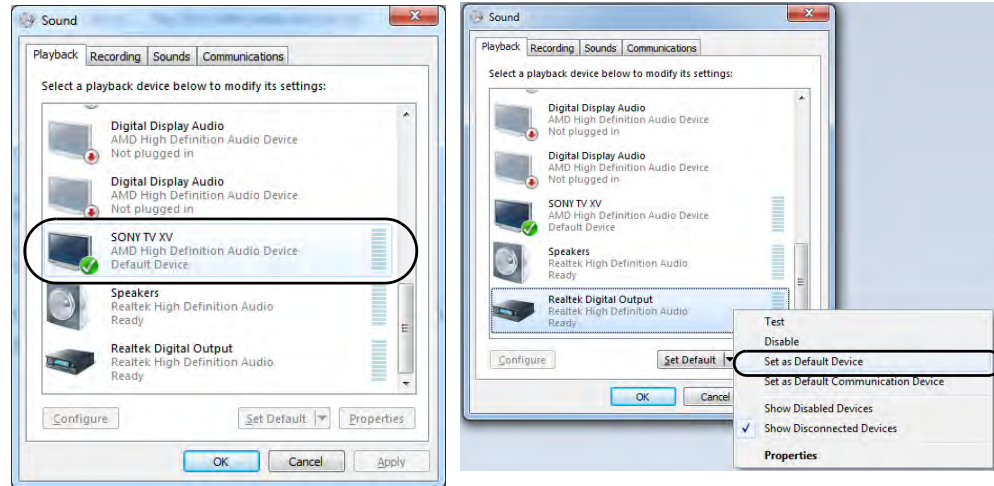

5. Double-click the connected HDMI device (or right-click and select **Properties**) to adjust the HDMI settings from the control panel tabs.
6. Click **OK** to close the control panel (see notes overleaf).

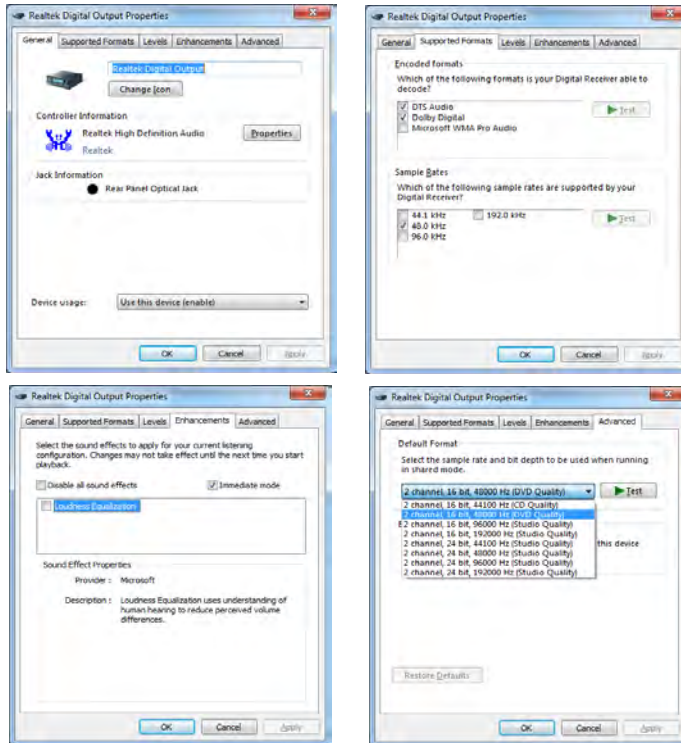


Figure D - 17  
HDMI Device  
Properties



### Other Applications

If you are using a third party application to play DVDs etc. from any attached DVD device, you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

### HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- To play audio sources through your external display's (TV or LCD) speakers you will need to go to the audio configuration control panel on the display and configure the audio input accordingly (see your display device manual).

### HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***“Configuring an External Display In the CCC” on page D - 8.***
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

### Sound Blaster Audio & HDMI

1. When you connect an HDMI display to the HDMI-Out port, the Sound Blaster controls will be disabled.
2. A warning box will pop-up and will prompt ***“...Do you want to select another audio device now?”***
3. Click **No** to continue using the HDMI audio output from your external display (do not attempt to select another audio device when connected to the external HDMI display).

## Audio

You can use Audio menu in the **Catalyst™ Control Center** to configure any attached audio device.

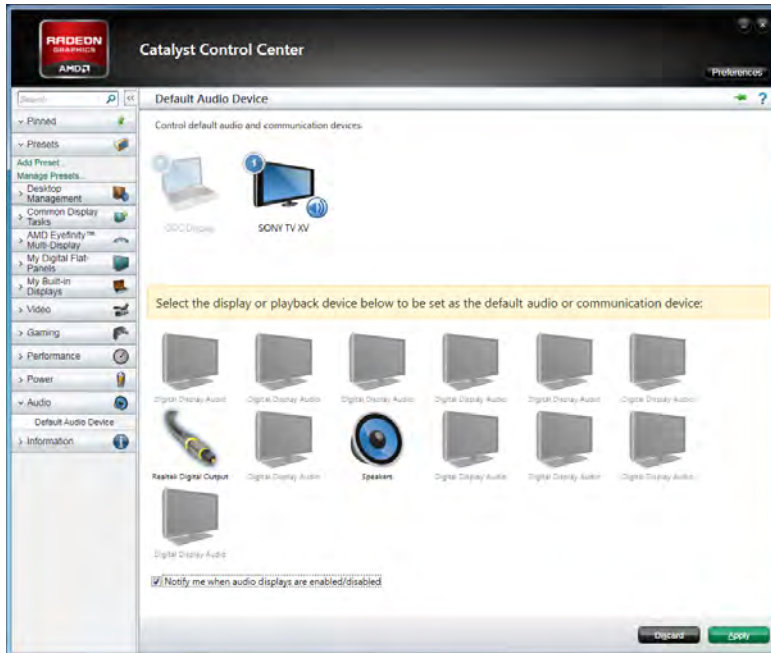


Figure D - 18  
Audio



# Appendix E: Specifications



## Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/speeds and CD/DVD device types) may be changed, updated or delayed due to the manufacturer's release schedule. Check with your service center for details.

## Specifications

<b>Processor</b>	<b>Memory</b>	<b><u>For All Models:</u></b>
<b>Intel® Core i7-3960X (3.30GHz)</b> 15MB L3 Cache, 32nm (32 Nanometer), DDR3-1600MHz, TDP 130W	<b>Four Channel DDRIII (DDR3)</b>  Four 204 Pin SO-DIMM Sockets Supporting <b>DDRIII (DDR3) 1333/1600</b> MHz Memory Modules (real operational frequency depends on the FSB of the processor)	NVIDIA® GeForce GTX 780M PCIe * 16 Video Card 4GB GDDR5 Video RAM
<b>Intel® Core i7-3930X (3.20GHz)</b> 12MB L3 Cache, 32nm (32 Nanometer), DDR3-1600MHz, TDP 130W	Supports Microsoft DirectX® 11.0 Supports DisplayPort 1.2 NVIDIA PhysX™ GeForce CUDA™ Technology Supports NVIDIA® SLI Technology	Supports Microsoft DirectX® 11.0 Supports DisplayPort 1.2 NVIDIA PhysX™ GeForce CUDA™ Technology Supports NVIDIA® SLI Technology
<b>Intel® Core i7-3820 (3.60GHz)</b> 10MB L3 Cache, 32nm (32 Nanometer), DDR3-1600MHz, TDP 130W	Memory Expandable up to <b>32GB</b> Compatible with 2GB, 4GB or 8GB Modules	Supports NVIDIA® SLI Technology
<b>Core Logic</b>	<b>Video Adapter</b>	<b><u>For All Models:</u></b>
Intel® X79 Express Chipset	<b><u>For All Models:</u></b> NVIDIA® GeForce GTX 680M PCIe * 16 Video Card	NVIDIA® GeForce GTX 770M PCIe * 16 Video Card
<b>Display</b>	4GB GDDR5 Video RAM On Board Supports Microsoft DirectX® 11.0	3GB GDDR5 Video RAM Supports Microsoft DirectX® 11.0
17.3" (46.94cm) FHD (1920 * 1080) 16:9 Backlit Panel  For <b>Model B</b> with 3D Support Built-in 3D IR Emitter One NVIDIA® 3D Vision™ 2 Shutter Glasses Kit	Supports DisplayPort 1.2 NVIDIA PhysX™ GeForce CUDA™ Technology Supports NVIDIA® SLI Technology ===== For <b>Model B</b> with 3D Support Supports 3DTV Play™ =====	Supports DisplayPort 1.2 NVIDIA PhysX™ GeForce CUDA™ Technology Supports NVIDIA® SLI Technology
		Supports NVIDIA® SLI Technology





**NVIDIA® SLI or AMD™ CrossfireX  
Multi GPU Configuration & Power**

Note that where **two video adapters** are installed in an **SLI** or a **Crossfire** configuration, **dual power adapters connected to a power converter box** are required to power the system (see pages **C - 15 & D - 17**).

Single video adapter configurations only require a single power adapter.

**For Model A Only:**

NVIDIA® Quadro K5000M PCIe \* 16  
Video Card  
**4GB** GDDR5 Video RAM  
Supports DirectX® 11  
Supports DisplayPort 1.2  
NVIDIA PhysX™  
GeForce CUDA™ Technology  
OpenGL 4.3

**For Model A Only:**

NVIDIA® Quadro K5100M PCIe \* 16  
Video Card  
**8GB** GDDR5 Video RAM  
Supports DirectX® 11.1  
Supports DisplayPort 1.2  
NVIDIA PhysX™  
GeForce CUDA™ technology  
OpenGL 4.3

NVIDIA® GeForce GTX 880M PCIe \* 16  
Video Card  
**8GB** GDDR5 Video RAM  
Supports DirectX® 11.1  
Supports DisplayPort 1.2  
NVIDIA PhysX™  
GeForce CUDA™ technology  
Supports NVIDIA® SLI® technology

AMD Radeon™ HD 7970M PCIe \* 16  
Video Card  
**2GB** GDDR5 Video RAM  
Supports DirectX® 11  
Supports DisplayPort 1.2  
Supports AMD™ Eyefinity Technology  
Supports AMD CrossFireX™ Technology

**For Model A Only:**

AMD Radeon™ R9 M290X PCIe \* 16  
Video Card  
**4GB** GDDR5 Video RAM  
Supports DirectX® 11.1  
Supports DisplayPort 1.2  
Supports AMD™ Eyefinity Technology  
Supports AMD CrossFireX™ Technology

**BIOS**

One 64Mb SPI Flash ROM  
AMI BIOS

**Storage**

Up to three (**Factory Option**)  
Changeable 2.5" 9.5 mm (h) **SATA**  
(Serial) Hard Disk Drives/SSD supporting  
RAID level 0/1/5/Recovery  
  
One 12.7 mm Super Multi/Blu-Ray  
Combo/Blu-Ray Writer SATA Optical  
Device Drive (**Factory Option**)

## Specifications

<b>Audio</b>	<b>Card Reader</b>	<p>One DVI-I Out Port (Single Link)                  One HDMI™ (High-Definition Multimedia Interface) Out Port (with HDCP)                  One Headphone/Speaker-Out Jack                  One Microphone-In Jack                  One S/PDIF Out Jack                  One Line-In Jack                  One RJ-45 LAN Jack                  One DC-In Jack</p>
<p>High Definition Audio                  S/PDIF Digital Output                  Built-In Microphone                  5 Built-In Speakers                  One built-in 3W Sub woofer                  Sound Blaster® X-Fi™ MB 3                  External 7.1CH Audio output supported by headphone, microphone, S/PDIF &amp; Line-In Jack</p>	<p>Embedded Multi-In-1 Push-Push Card Reader                  - MMC / RSMCMC                  - SD / Mini SD / SDHC / SDXC                  - MS / MS Pro / MS Duo</p> <p><b>Note:</b> Some of these cards require PC adapters that are usually supplied with the cards.</p>	<b>Communication</b>
<b>Keyboard &amp; Pointing Device</b>	<b>Slots</b>	<p>Built-In 10/100/1000Mb Base-TX Ethernet LAN</p>
<p>Full Size Winkey Illuminated Keyboard with Numeric Keypad</p> <p>Built-In TouchPad (with Multi Gesture Functionality)</p> <p>Six Touch Sensor Instant Keys (Volume Up, Volume Down, Mute, WLAN, Bluetooth &amp; PC Camera)</p> <p>W/A/S/D Gaming Keys</p>	<p>One ExpressCard™ (34/54) Slot</p> <p>One Mini Card Slot for WLAN &amp; Bluetooth Combo Half Mini-Card Module with PCIe &amp; USB Interface</p>	<p><b>Intel® Centrino® Ultimate-N 6300</b> 3*3 (802.11 a/g/n) Half Mini-Card PCIe WLAN Module (<b>Factory Option</b>)</p>
	<b>Interface</b>	<p><b>Intel® Centrino Advanced-N 6235</b> 2*2 (802.11 a/g/n) Half Mini-Card PCIe WLAN + Bluetooth V4.0+HS Combo Module (<b>Factory Option</b>)</p>
	<p>Three USB 3.0 Ports (Including one Powered USB port)                  Two USB 2.0 Ports                  One eSATA Port (SATA Interface, AC/DC Powered USB 3.0 Combo)                  One Mini-IEEE1394b Port                  One DisplayPort (Version is Video Controller Dependent)</p>	<p><b>Intel® Dual Band Wireless-AC 7260</b> (2*2 802.11 a/c) Half Mini-Card PCIe WLAN + Bluetooth Combo Module (<b>Factory Option</b>)                  (see over)</p>

<p><b>Intel® Wireless-N 7260</b> (2*2 802.11 b/g/n) Half Mini-Card PCIe WLAN + Bluetooth Combo Module (<b>Factory Option</b>)</p> <p><b>Combo WLAN</b> (802.11b/g/n) and <b>Bluetooth v4.0+LE</b> Half Mini-Card Module (<b>Factory Option</b>)</p> <p><b>Qualcomm® Atheros Killer™</b> Wireless-N 1202 Dual Band (2*2 802.11 a/b/g/n) Half Mini-Card PCIe WLAN + Bluetooth Combo Module (<b>Factory Option</b>)</p> <p>(802.11 a/g/n) Half Mini-Card Wireless LAN <b>N1202</b> + Bluetooth v4.0 Combo Module (<b>Factory Option</b>)</p> <p><b>Bluetooth 2.1</b> + EDR (Enhanced Data Rate) Module (<b>Factory Option</b>)</p> <p>2.0M FHD / 2.0M HD PC <b>Video Camera Module</b> (<b>Factory Option</b>)</p> <p>2.0M FHD / 2.0M HD PC <b>Video Camera Module</b> (<b>Factory Option</b>)</p>	<p><b>Indicators</b></p> <p>LED Indicators (Power/Suspend, Battery, HDD/ODD, WLAN, Bluetooth, Num Lock, Caps Lock, Scroll Lock, *Camera)  <i>*Camera LED is located on camera module</i></p> <p><b>Security</b></p> <p>Security (Kensington® Type) Lock Slot          BIOS Password          Fingerprint Reader Module          Trusted Platform Module 1.2</p> <p><b>Operating System</b></p> <p>Windows® 7 with Service Pack 1          Windows® 8 (64 bit)</p> <p><b>Design Feature</b></p> <p>Alloy Plate</p> <p><b>Power Management</b></p> <p>Supports Wake on LAN          Supports Wake on USB</p>	<p><b>Power</b></p> <p>Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19.5V, 16.92A (<b>330 Watts</b>) OR 20V, 15A (<b>300 Watts</b>)</p> <p>Removable Polymer Smart Li-Ion 78.44WH Battery Pack</p> <p>Power Converter Box and 2nd Adapter for Dual Video Adapter Configuration</p> <p><b>Environmental Spec</b></p> <p>Temperature          Operating: 10°C - 35°C          Non-Operating: -20°C - 60°C          Relative Humidity          Operating: 20% - 80%          Non-Operating: 10% - 90%</p> <p><b>Physical Dimensions &amp; Weight</b></p> <p>419mm (w) * 286mm (d) * 57.9mm - 62.1mm (h)          5.5kg with Single VGA Card, Battery &amp; ODD</p>
---	--	---

## Specifications

# Appendix F: Windows 8

## Overview

This Appendix contains information (including control panel information, driver installation etc.) for users of the *Windows 8 OS*.

You can refer to the main manual for details of drivers required, audio & video information, BIOS, modules etc. However any information specific to *Windows 8* will be included in this Appendix, as well as details on how to navigate the *Windows 8 Metro User Interface* to access the applications, control panels, taskbar etc.



### Windows 7/8 OS

In order to run **Windows 7 (32 Bit)** without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM), however if you are running **Windows 7 or 8 (64 bit)** your computer requires a minimum **2GB** of system memory (RAM).

## Windows 8 Start Screen & Desktop


The apps, control panels, utilities and programs within *Windows 8* are accessed from the **Metro** user interface's **Start screen** and/or **Windows Desktop**. The **Desktop** (which runs as an app within the Start screen) can be accessed from the **Desktop** item in the Start screen (or by using the **Windows Logo Key**  + **D** key combination).



Figure F - 1 - Windows Start Screen

## Apps & Tiles

The **Windows 8** Start screen will contain a number of apps, and many more will be installed as you add more applications etc. Not all of these apps can fit on one screen so you will often need use the **slider** at the bottom of the screen in order to view all the necessary apps.

### Accessing Pinning/Unpinning All Apps

You can add and remove the tiles for apps and control panels in the Start screen. Right-click on a blank area of the Metro UI **Start** screen and you will see the **All Apps** icon. Click the **All Apps** icon to display all the installed applications etc. Right-click any icon to bring up the menu at the bottom of the screen. You can then click the appropriate icon to **pin the app** to (or unpin from) the **Start** screen, or to the **taskbar** in the **Desktop application**.

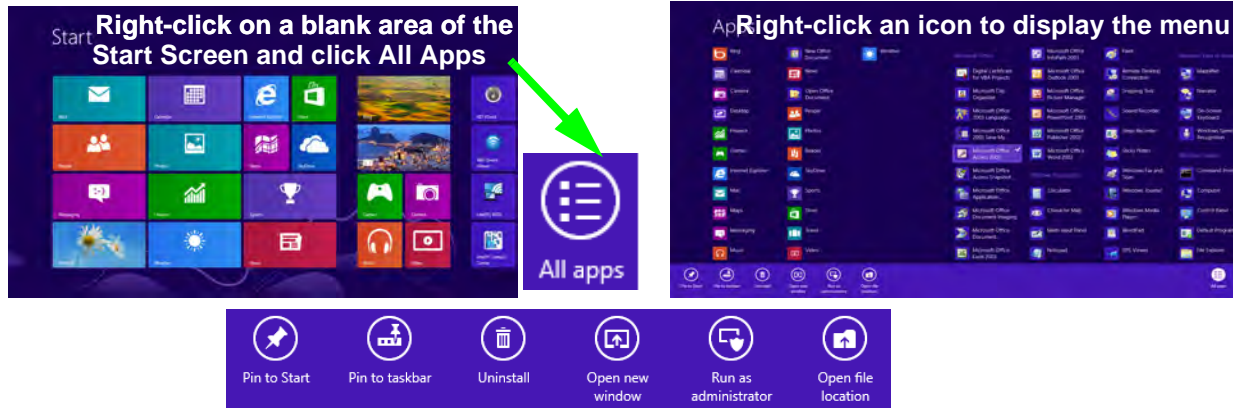



Figure F - 2 - All Apps

## Windows 8

### Desktop Application

When the **Desktop app** is running (click the app in the Start screen or use the **Windows Logo Key**  + **D** key combination) you can use lower left hot corner to switch between the Start screen and the **Windows Desktop**. To do so move your mouse to hover over the bottom left corner of the screen and click the pop-up.

When you move to the lower left hot corner in the Start screen itself it will take you back to your most recently used app.

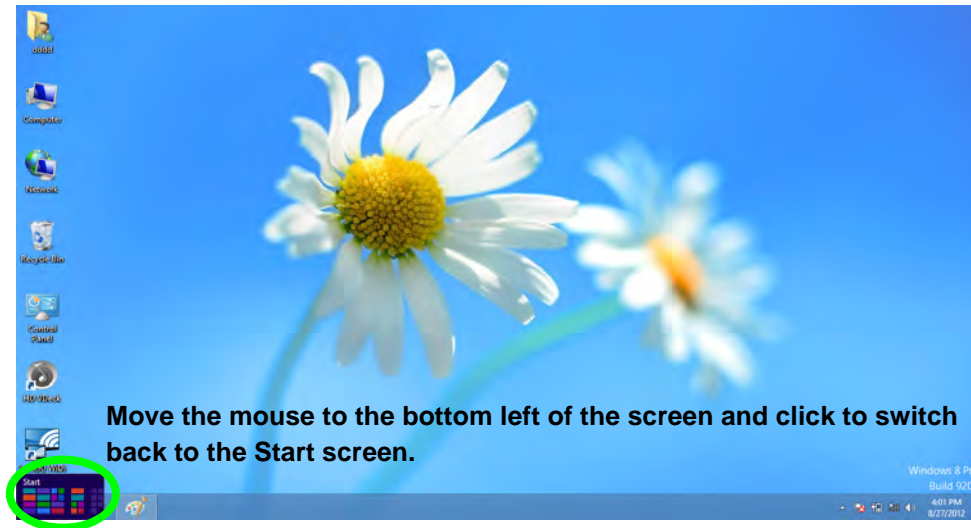



Figure F - 3 - Desktop



When the Desktop app is running you can right-click the lower left hot corner (or use the **Windows Logo Key**  + **X** key combination) to bring up an advanced context menu of useful features such as Control Panel, Programs and Features, Power Options, Task Manager, Search, Windows Explorer, Command Prompt, Device Manager and Network Connections etc.

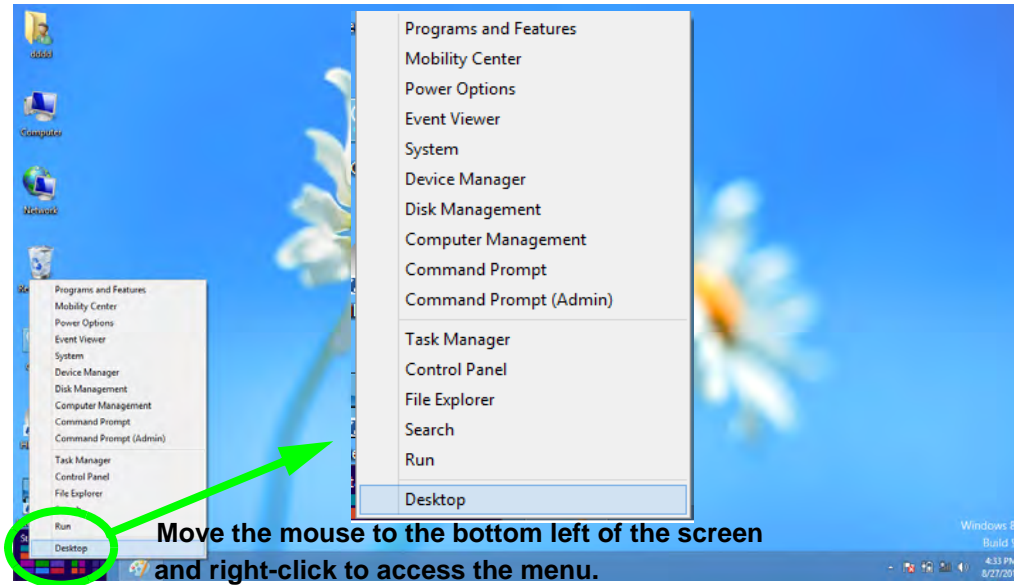


Figure F - 4 - Advanced Context Menu (Right-Click lower left hot corner)




### Display Most Recently Used Apps

If you are in the **Start** screen, **Desktop** or an app you can move your mouse to the upper left corner of the screen to get back to the most recently used app.

To view all the most recently used apps hover over the top left of the screen and then move the mouse down along the left side of the screen to display the list.

## Windows 8

### Windows 8 Charms Bar

The right side of the screen displays the *Windows 8 Charms Bar*. The Charms Bar contains the **Search**, **Share**, **Start**, **Devices** and **Settings** menus. To access up the Charms Bar move the cursor to the upper or lower right corners of the screen, and then hover over one of the items in the Charms Bar to activate it (the bar will be black when it is active), or use the **Windows Logo Key**  + **C** key combination.







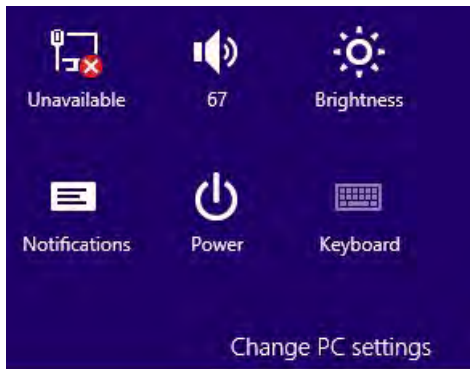



Figure F - 5 - Start Screen with Charms Bar

## F - 6 Windows 8 Start Screen & Desktop
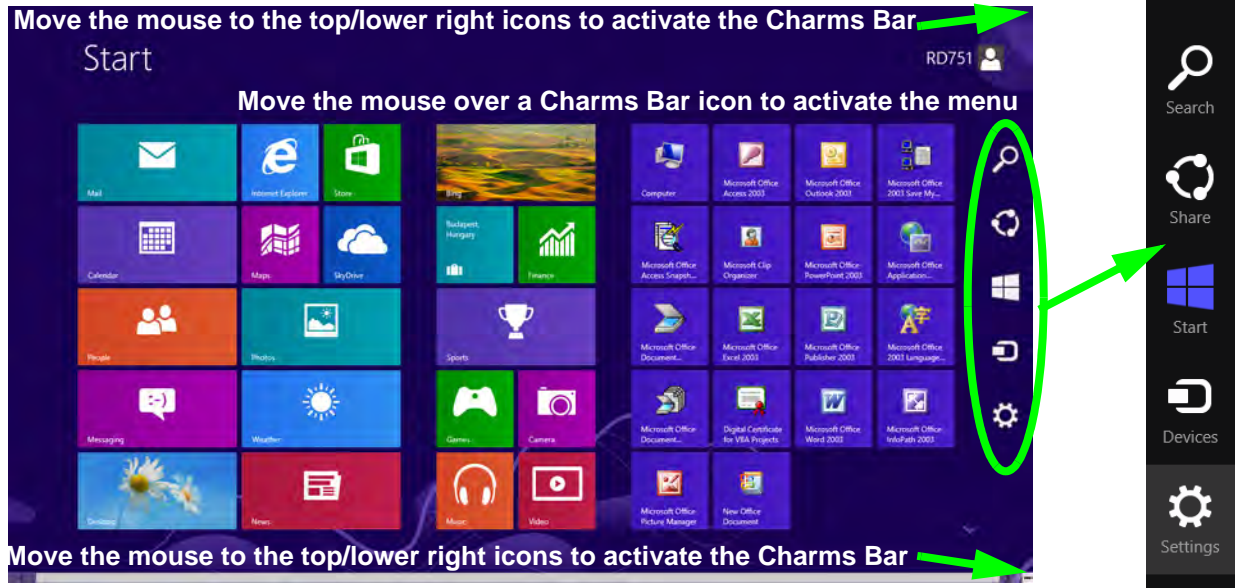
## Charms Bar Items

- **Search** : You can search for any file, application, apps and control panel settings with instantaneous results.
- **Share** : This button is used to share information with people via mail or social networks.
- **Start** : Click to bring up the Start Menu (the same function as pressing the Windows Logo Key or clicking the bottom left of the screen).
- **Devices** : Click this button to change connected peripheral device settings e.g. an external display.
- **Settings** : This button gives instant access to the computer settings, such as Network, Audio, Brightness, Notifications, Power and Keyboard (click **Change PC Settings** to activate the PC Settings menu).





**Charms Bar - TouchPad Access**

To quick access the **Charms Bar** using the TouchPad:

1. Place your finger **off** the TouchPad (slightly to the right of the pad resting on the computer).
2. Move your finger across to the left on to the TouchPad.
3. The Charms Bar will then pop-up.

Figure F - 6 - Settings Menu

# Windows 8 Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The Control Panel is much the same as that in *Windows 7*, however it can be accessed in a number of ways in *Windows 8*.

- Click **Search** in the **Windows Charms Bar** (see previous page) and the search pane will pop out. Type *Control Panel* and select it from the results to the left.



Figure F - 7 - Search (Control Panel)

- Click on **Computer** in the **Start** screen, click on **Computer** in the top menu and select **Open Control Panel** from the ribbon.

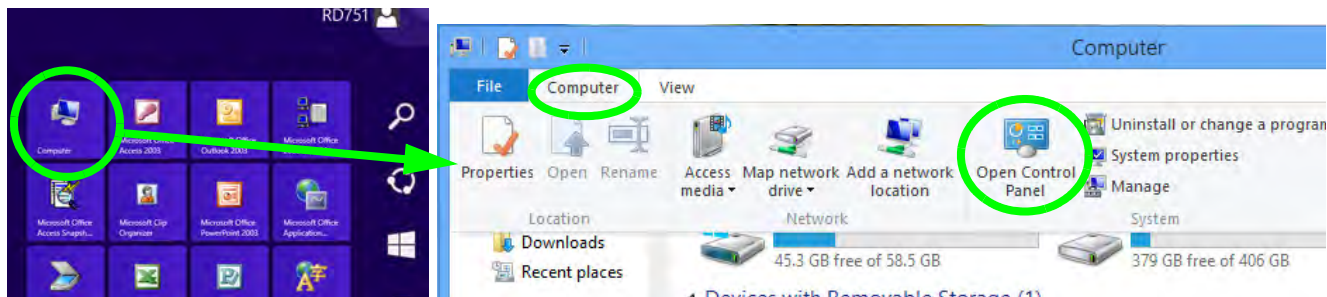


Figure F - 8 - Open Control Panel (Computer)

- When in the **Desktop** app (this does not apply to the Start screen) click on **Settings** in the **Windows Charms Bar** and select **Control Panel** from the menu.

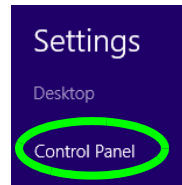


Figure F - 9 - Settings Charms Bar (Desktop App Only)

- **Right-click on a blank area of the Metro UI Start screen**, click the **All Apps** icon and click Control Panel.

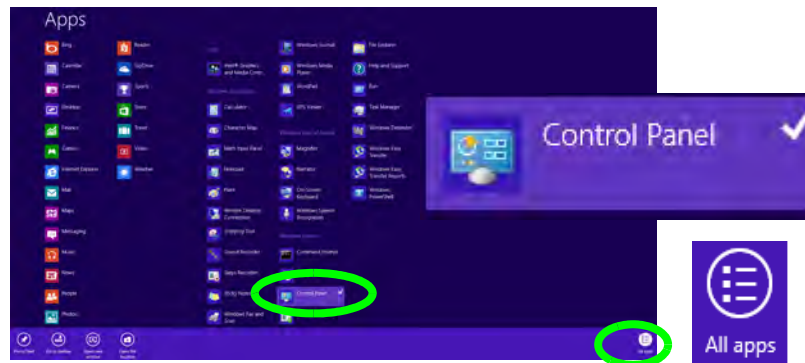




Figure F - 10 - All Apps - Control Panel

## Windows 8

- Right-click the lower left hot corner to bring up the menu and select Control Panel (see *Figure F - 4 on page F - 5*).



### Keyboard Shortcut to Control Panel

You can also use keyboard shortcuts to access the Control Panel. Press the **Windows logo key**  and **X** to bring up the context menu, and then press **P** to bring up the Control Panel. Alternatively press the **Windows logo key**  and **R** to bring up the **Run** dialog box, and then type “**Control Panel**” and press Enter to access the Control Panel.

## Windows 8 Taskbar

In many instances throughout this manual you will see an instruction to access the **notification area of the taskbar**. In *Windows 8* the taskbar is accessed from the **Desktop** application. If you are in the Start screen you will need to click the Desktop app to switch to the Desktop.

The taskbar is displayed in much the same way as it was in *Windows 7*, and you can see the notification area of the taskbar in the bottom right of the screen. Some of the Control Panels and applications referred to during the course of this manual can be accessed from here.



Figure F - 11 - Desktop Taskbar

You can pin/unpin apps to/from the taskbar in much the same way as you can to the Start screen (see *“[Accessing Pining/Unpinning All Apps](#)” on page F - 3*).

## LED Indicators

The two sets of LED indicators (**LED Status Indicators** and **LED Power Indicators**) display helpful information about the current status of the computer.


 







Icon	Color	Description	Icon	Color	Description
	Blinking Blue	Hard Disk Activity		Orange	DC Power is Plugged In
	Blue	Number Lock is Activated 		Blinking Green	The Computer is In Sleep Mode
	Blue	Caps Lock is Activated 		Blinking Orange*	The Powered USB Port is On*
	Blue	Scroll Lock is Activated 		Orange	The Battery is Charging
				Blinking Orange	The Battery has Reached Critically Low Power Status
				Green	The Battery is Fully Charged

Table F - 1 - LED Status Indicators

**\*Note:** The powered USB 3.0/e-SATA port (see [Figure 1 - 8 on page 1 - 18](#)) may be toggled on/off by means of the **Fn + Power Button** key combination (**press for around 1 to 2 seconds** to toggle). When the powered USB port is on it will supply power (**for charging devices only, not for operating devices**) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page [8 - 13](#)).



## Keyboard - Windows 8

The main difference between the *Windows 7* & *Windows 8* keyboards is in the function of the **Windows Logo Key** (in the **Start** screen), otherwise the keyboard functions are identical (see “*Keyboard*” on *page 1 - 10*).




Figure F - 12 - Keyboard

The function/hot key indicators function in the same manner as outlined for *Windows 7* on “*Function Keys & Visual Indicators*” on *page 1 - 14* (except for the **Mute**, **Volume** and **Brightness** indicators which use the standard *Windows 8* indicators). However the indicators work under the **Desktop** app (see “*Desktop Application*” on *page F - 4*) and not under the **Start** screen.



### Windows Logo Keyboard Shortcut

Use the Windows logo key  + **D** key combination to switch between the **Start** screen and **Windows Desktop** (see *Table F - 2* overleaf for further information).

## Keyboard Shortcuts

The following Windows Logo Key (Winkey) keyboard shortcuts are useful for navigation/operation in *Windows 8*.



Windows Logo  Key +	Description
Tap Winkey	Toggle between the <b>Start screen</b> and the foremost running app or the <b>Windows Desktop</b>
C	Display <b>Charms</b> menu
D	Switch to the <b>Windows Desktop</b> and toggle show Desktop
E	Switch to the Windows desktop and launch <b>Windows Explorer</b> with <b>Computer</b> displayed
F	Display file <b>Search</b>
I	Open the <b>Settings</b> charm
K	Open the <b>Connect</b> charm
L	Lock the computer and display the <b>Lock screen</b>
P	Display the <b>Second Screen</b> menu (see <a href="#">Figure F - 14 on page F - 16</a> )
R	Switch to the <b>Windows Desktop</b> and display the <b>Run</b> dialog box
Z	Access the <b>App Bar</b> (see <a href="#">Figure F - 4 on page F - 5</a> )

Table F - 2 - Keyboard Shortcuts

## Function/Hot Key Indicators & Control Center

The function/hot key indicators and Control Center function in the same manner as outlined for *Windows 7* (except for the **Mute**, **Volume** and **Brightness** indicators which use the standard *Windows 8* indicators) in “*Function Keys & Visual Indicators*” on page 1 - 14 and “*Control Center*” on page 1 - 15. However both of these functions work under the **Desktop** app (see “*Desktop Application*” on page F - 4) and not under the Start screen, and the Control Center does not feature the wireless/Bluetooth buttons and Airplane Mode.

  
**Control Center**

Click on any button to turn any of the **modules** (e.g. **Clickpad/Touchpad, Camera**) on/off.

Click on the power conservation modes to switch between **Performance, Balanced** or **Energy Star** modes (see page 3 - 10). To remove the Power Conservation Modes screen just click in a blank area of the icon or press a key on the keyboard.

Click on the buttons (or just click and hold the mouse button) to adjust the slider for **Brightness/Volume**.

Click on **Display Switch** and click to choose a display mode from the menu (see page C - 13).

Click on **K/B LED** to turn the keyboard LED on/off.

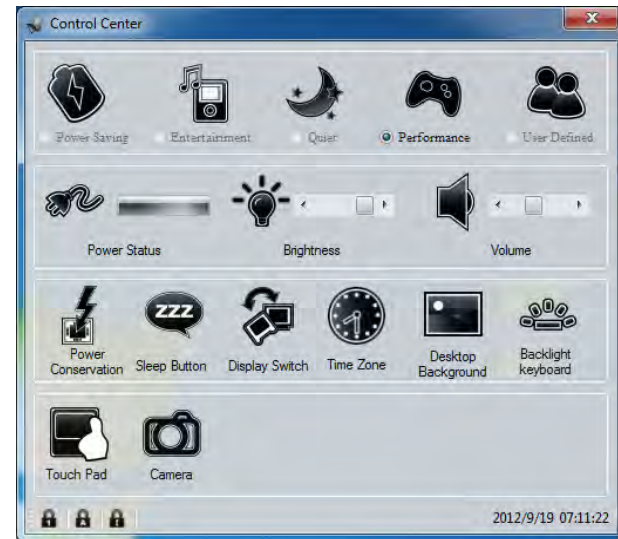


Figure F - 13 - Control Center

# Video Features

You can switch display devices, and configure display options, from the **Display** control panel (in **Appearances and Personalization**) in *Windows 8* in the same manner as *Windows 7* running the **Desktop** app (see “*Desktop Application*” on page F - 4 and *Appendix C*). In *Windows 8* it is possible to quickly configure external displays from the **Devices** menu item in the **Charms Bar** (see “*Windows 8 Charms Bar*” on page F - 6).

### To Configure Displays from Devices (Charms Bar):

1. Attach your external display to the appropriate port, and turn it on.
2. Go to the **Start** screen and select **Devices** in the **Charms Bar**.
3. Click **Second Screen**.
4. Click on any one of the options from the menu to select Duplicate, Extend or a Single display.

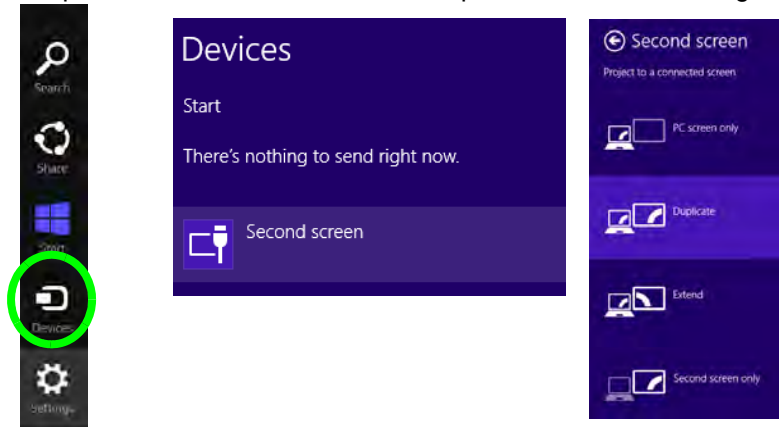


Figure F - 14 - Second Screen (Devices)

## Power Options

Power Options can be accessed from the Control Panel in the same manner as *Windows 7* from the Desktop app. The **Power** item in **Settings** in the **Charms Bar** in *Windows 8* may be used to **Shut down**, **Restart** or send the computer to **Sleep**.

### Shut Down, Restart or Sleep

1. Go to the **Charms Bar** and click **Settings**.
2. Click **Power** .
3. Select **Sleep**, **Shut Down** or **Restart**.

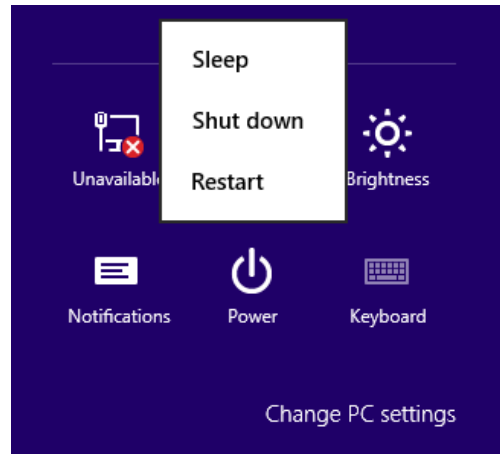


Figure F - 15 - Power (Settings)

## Windows 8

### Ctrl + Alt + Delete Key Combination

You can use the **CTRL + ALT + DEL** key combination from almost any of the *Windows 8* interfaces/apps to bring up a full-screen displaying **Lock**, **Switch User**, **Log off**, **Change a password** and **Task Manager** options. If you click the **Power** icon in the lower right corner of the screen a power management option menu appears to display **Sleep**, **Shut down**, and **Restart**.

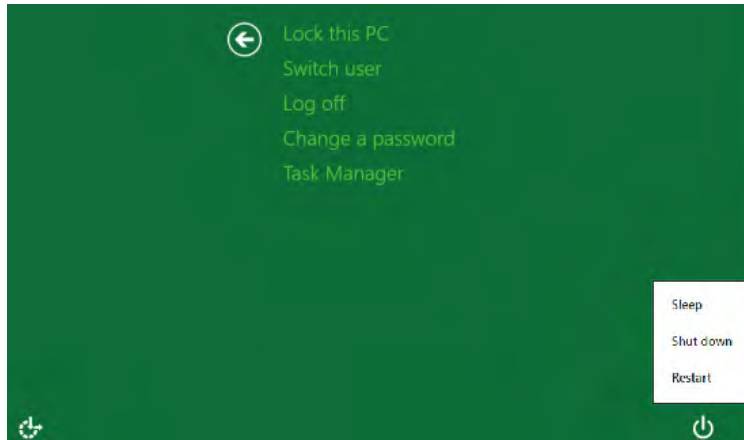


Figure F - 16 - CTRL + ALT + DEL Menu

To fully control all the power options (including Hibernate mode) go to the **Power Options** control panel and configure the power button, sleep button and lid (see *Figure F - 17 on page F - 19*) to perform the function selected.

## F - 18 Power Options

## Wake On LAN Settings

If you require your computer to wake up from network activity in *Windows 8* then make sure that the computer is either in **Sleep** or **Hibernate**. The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

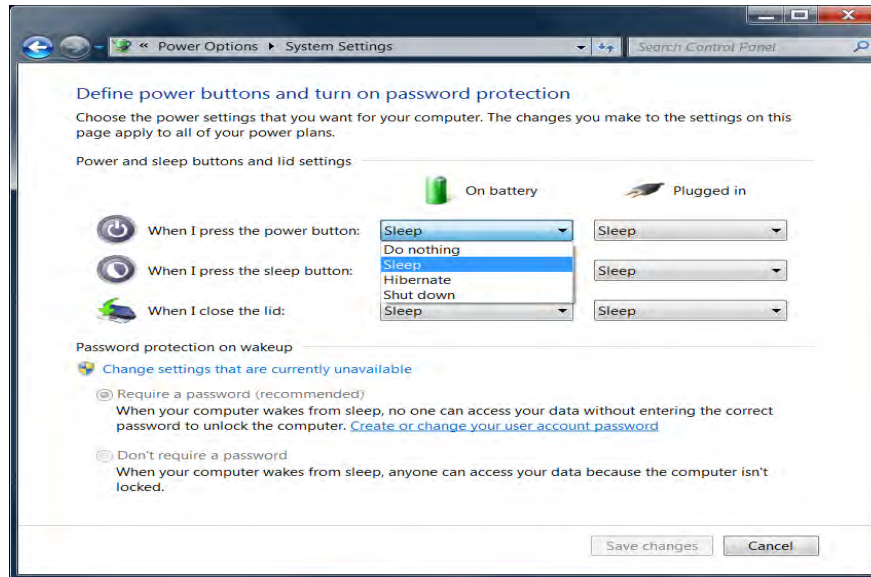


Figure F - 17 - Power Options Define Power Buttons



### Wake On LAN Support (Windows 8)

Wake-On-LAN is only supported from **Sleep** or **Hibernate** states in *Windows 8*.

Wake-On-LAN is not supported from Shut-down states in *Windows 8*.



## Screen Resolution for Metro Style Apps (Windows 8)

The minimum resolution in which Metro style apps will run is **1024x768**.

The minimum resolution required to support all the features of Windows 8 (including multitasking with snap) is **1366x768**.

These specs are the minimum screen resolution that supports all the features of Windows 8 on a useful physical size.

## Running Metro UI Apps

To run apps in the Metro UI in *Windows 8* you will need to check that the **Screen Resolution** and **User Account Control Settings** are compatible with the system requirements:

### Screen Resolution Settings

1. Switch to the Windows Desktop (click the app or use the Windows logo key **⊞** + **D** key combination).
2. Right-click a blank area of the Windows Desktop and select **Screen Resolution**.
3. Adjust the **Resolution** to make sure that it is at least **1024 \* 768**, although preferably **1366 \* 768** or above (see sidebar).

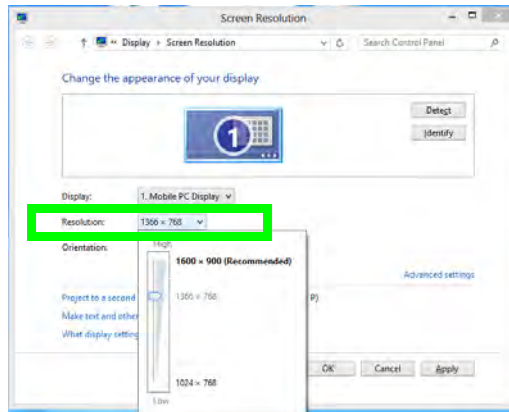


Figure F - 18 - Screen Resolution



## User Account Control Settings

If your computer meets the minimum screen resolution requirements, and still you can't run Metro apps, then that you have to check the status of **User Account Control (UAC)**. Metro apps may fail to open when the UAC is turned off. To check whether the UAC is on or off, follow the instructions below.

1. Open the **Control Panel** (see *“Windows 8 Control Panel” on page F - 8*).
2. Click on **User Accounts** and then click on **Change User Account Control settings** (or click **System and Security** and click **Change User Account Control Settings** under **Action Center**).
3. If the slider is in the **Never notify** position, then the UAC is disabled.
4. To enable or turn on the UAC, move the slider to **Always notify** or **Notify me when apps try to make changes to my computer (default)** position, and then click **OK**.

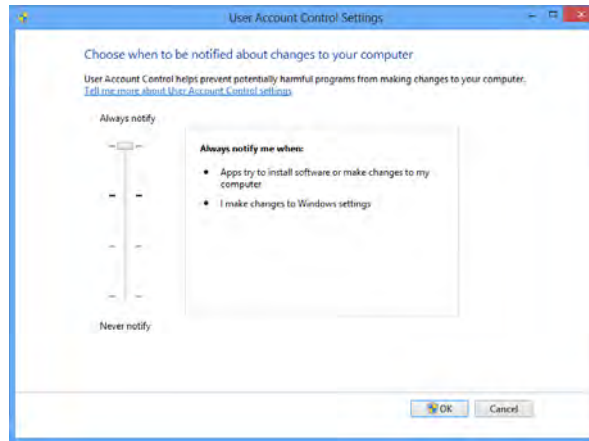


Figure F - 19 - User Account Control

# Drivers & Utilities

Make sure you install all the drivers and utilities for your system. Follow the instructions in *Chapter 4 “Drivers & Utilities” on page 4 - 1 / “Modules” on page 7 - 1* for installing all the basic system drivers and module drivers for *Windows 7 & 8*.

However note that the **USB 3.0 and PC Camera drivers/applications are not required for Windows 8.**

## Driver Installation (Windows 8)

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the computer's DVD drive.
2. Click the message "Tap to choose what happens with this disc."
3. Click **Run autorun.exe**.

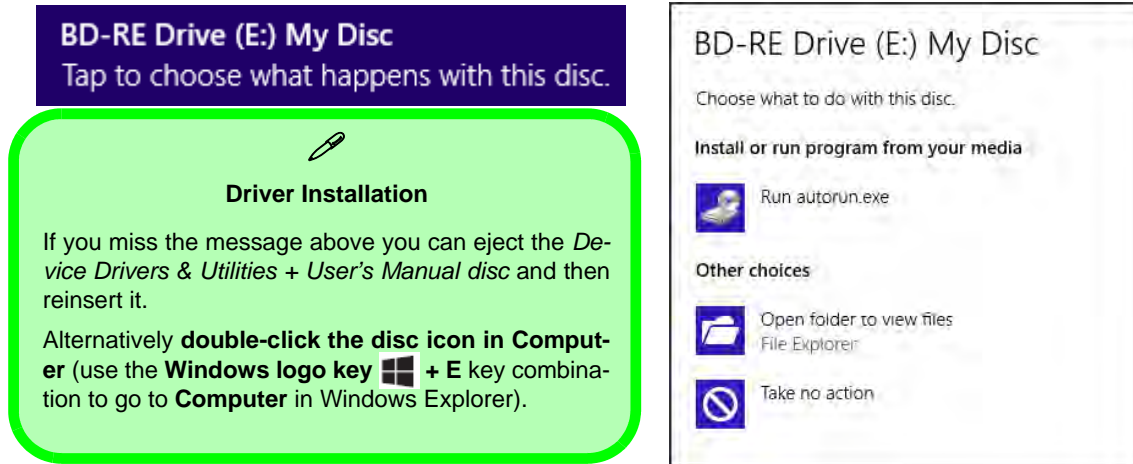


Figure F - 20 - Autorun Driver Installation Disc

4. Click **Install Drivers** (button), or **Option Drivers** (button) to access the **Optional** driver menu.
5. Check the driver installation order from [Table F - 3, on page F - 24](#) (the drivers must be installed in this order) which is the same as that listed in the **Drivers Installer** menu below.
6. Click to select the driver you wish to install, (you should note down the drivers as you install them).
7. Follow the instructions for each individual driver installation procedure as listed on the appropriate pages.

## Windows 8

Win 7 SP1/Win 8 Driver		
<b>Chipset</b>	<b>Page 4 - 6</b>	<b>Intel Rapid Storage Technology</b> (for RAID & AHCI mode Hard Disk Drives) See “ <b>RAID Setup (Windows 8)</b> ” on page <b>F - 53</b> if you want to configure a <b>RAID in Windows 8</b> .
The USB 3.0 driver is not required for <b>Windows 8</b>		The PC Camera driver is not required for <b>Windows 8</b> (see page <b>F - 25</b> )
<b>NVIDIA Video (VGA)</b> <b>AMD Video (VGA)</b>	<b>Page 4 - 7</b>	<b>Wireless LAN Settings (Windows 8)</b> - see page <b>F - 30</b> <b>Page 7 - 56</b>
<b>LAN</b>	<b>Page 4 - 7</b>	<b>Fingerprint Reader Module (Windows 8)</b> - see page <b>F - 37/</b>
<b>Card Reader</b>	<b>Page 4 - 8</b>	<b>Bluetooth Settings (Windows 8)</b> - see page <b>F - 48</b>
<b>TouchPad</b>	<b>Page 4 - 8</b>	<b>Sound Blaster Audio</b> <span style="float: right;"><b>Page 7 - 89</b></span>
<b>Hot Key</b>	<b>Page 4 - 8</b>	<b>*Note all drivers provided are for Windows 7 with Service Pack 1 or Windows 8 64 bit.</b>
<b>MEI Driver</b>	<b>Page 4 - 8</b>	
<b>Audio</b>	<b>Page 4 - 8</b>	

Table F - 3 - Driver Installation

*All drivers provided are for Windows 7 with Service Pack 1 or Windows 8 64 bit.*

*Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules, however the Qualcomm Atheros WLAN (Combo) module only requires the WLAN driver installation.*


## PC Camera (Windows 8)

Use the **Fn + F10** key combination (see *“Function Keys & Visual Indicators” on page 1 - 14*) or **Control Center button** to toggle power to the PC Camera module.

When the PC Camera is in use the LED indicator to the left of the camera will be illuminated in red (see **2** *Figure 1 - 2 on page 1 - 6*).

Note that you need to use the **Camera app** in *Windows 8* to take pictures and capture video (the camera application listed in **Chapter 7** is for *Windows 7* only).

### Metro UI Camera App

1. Make sure the PC Camera is turned on by using the **Fn + F10** key combination (or **Control Center button**).
2. Run the Camera app from the Metro UI by clicking on the **Camera app icon** .
3. The camera interface is a translucent app bar with three buttons.

 



Figure F - 21 - Camera App Bar

- **Camera options:**. Click this button to open a window with three main options:

  
**Camera Options**

- **Resolution** (determined by the camera spec)
- **Audio device** (select microphone to use)
- **Video Stabilization** (a toggle based on spec of the camera)

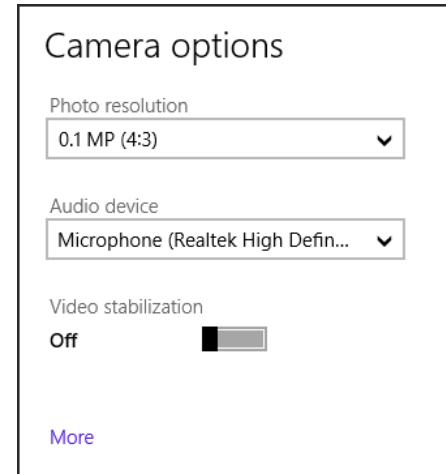


Figure F - 22 - Camera Options

- You can also click on **More** to adjust **Brightness**, **Contrast** and **Flicker** (if you find that the video screen in the camera program is flickering, you can try to adjust the setting here),

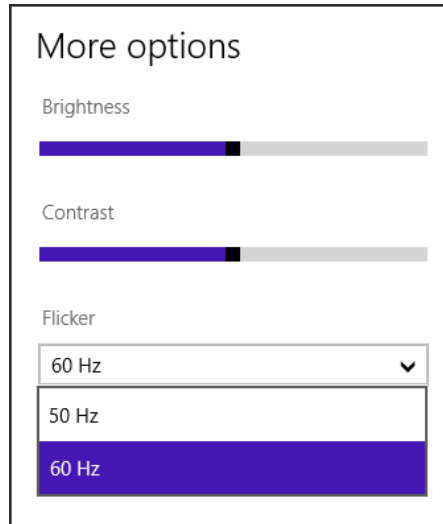





Figure F - 23 -More Camera Options

- Timer:** This button will start a three second countdown before the system takes a still photo or video recording starts.
- Video Mode:** This button toggles between still photo mode (transparent button ) and video recording mode (highlighted white button ) .

### Taking Pictures/Capturing Video

1. Make sure the PC Camera is turned on by using the **Fn + F10** key combination (or **Control Center button**).
2. Run the Camera app from the Metro UI by clicking on the **Camera app** icon .
3. Click to select the timer if you require a countdown before capture.
4. Click to select either photo or video modes.
5. Click in the main window to take a picture or start video capture (if video capture begins a timer will appear in the bottom right corner of the screen).
6. To stop video capture click the main window again.
7. Captured photos and videos will be saved to a **Camera Roll** folder within the **Picture** folder in **Libraries**.

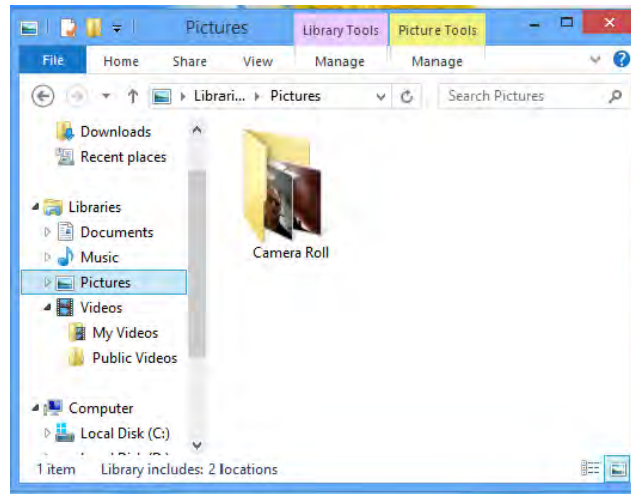


Figure F - 24 - Libraries - Pictures



8. A scroll arrow will appear on the left side of the screen after any pictures/videos have been captured.
9. Click the arrows (on either side of the screen) to browse through the captured photos/video, and back to the Camera app.
10. Clicking on a captured photo will bring up an app bar with **Crop** and **Delete** buttons.



*Figure F - 25 - Crop & Delete Buttons (for Still Photos)*

11. Use the handles to **Crop** any captured picture, and click **OK** to save the changes made.
12. Click **Delete** to delete any captured photo (note that no prompt will appear to confirm the delete).
13. Right-click any captured video to bring up app bar with **Trim** and **Delete** buttons.



*Figure F - 26 - Trim & Delete Buttons (for Video Files)*

14. Use the buttons at either end of the slider to adjust the video length and click **OK** to save the changes made.

# Wireless LAN Settings (Windows 8)

If you have included an **Intel®**, **3rd Party 802.11b/g/n** or **Qualcomm Atheros WLAN (Combo)** module in your purchase option, make sure that the WLAN module is on before installing the driver.

Use the **Fn + F11** key combination (see *“Function Keys & Visual Indicators” on page 1 - 14*) or **Control Center** button to toggle power to the **Wireless LAN** module. Make sure you install the drivers in the order indicated in *Table F - 3, on page F - 24*. See *“3rd Party 802.11b/g/n WLAN Combo Driver Installation” on page 7 - 26*, *“Intel® WLAN Driver Installation” on page 7 - 27* or *“Qualcomm Atheros WLAN Combo Driver Installation” on page 7 - 30* for driver installation information, however see **overleaf for WLAN configuration information in Windows 8**.

*Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules, however the Qualcomm Atheros WLAN (Combo) module only requires the WLAN driver installation.*

## WLAN Configuration in Windows 8

You can configure a wireless connection using one of the following options, however make sure the Wireless LAN module is turned on (and not in Airplane Mode) before configuration begins.

### Charms Bar

1. Go to the **Charms Bar**.
2. Select **Settings** and then click the **WiFi icon** (it should read **Available** under the icon and **Airplane mode** should be **Off**).
3. A list of available access points will appear.

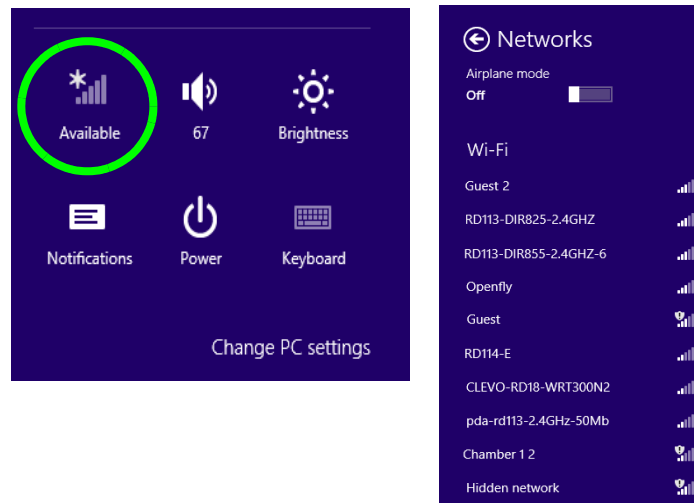




Figure F - 27 - WiFi Settings (Charms Bar) & Networks

## Windows 8

4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to share or connect to devices or not.
7. When you are connected to the network access point it will display the Connected icon **Connected** .
8. Select any connected network and click **Disconnect**  to disconnect from a connected access point.

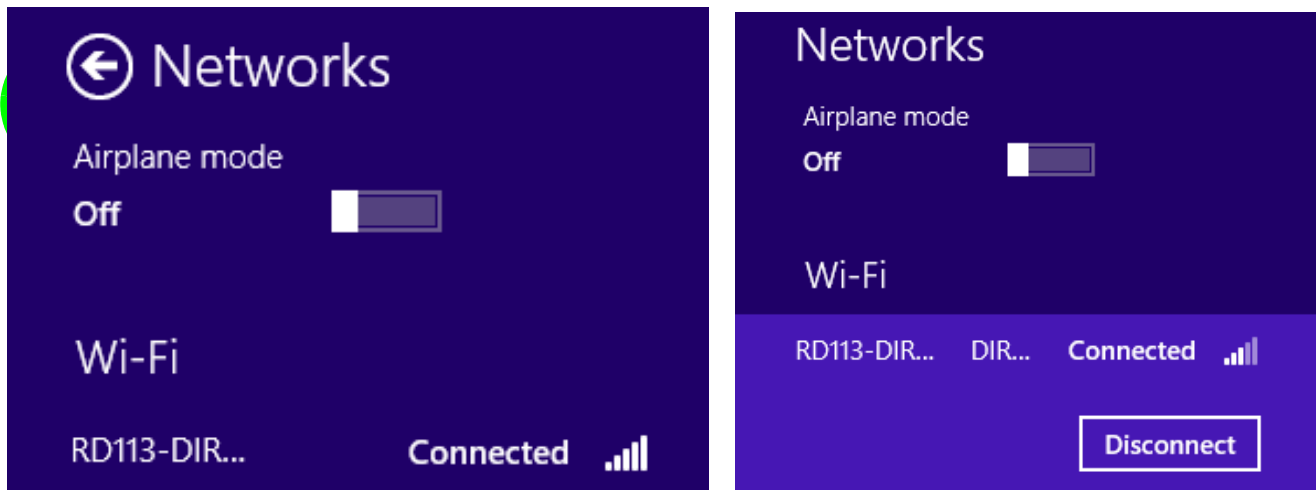


Figure F - 28 - Networks Connected / Disconnect

9. You can click the **Airplane Mode** button to turn the mode On or Off.
10. If you click on **Change PC Settings** (at the bottom of **Settings** in the **Charms Bar**) you can turn **Wireless** or **Airplane Mode** On/Off (see over).

11. You need to either use **Airplane Mode**, or to **turn the WLAN module off** aboard aircraft.

The image shows a screenshot of the Windows 8 'PC settings' application. On the left is a navigation pane with the following items: 'Activate Windows', 'Personalize', 'Users', 'Notifications', 'Search', 'Share', 'General', 'Privacy', 'Devices', and 'Wireless' (which is highlighted in blue). The main area displays two settings:

- Airplane mode**: Turn this on to stop wireless communication. The toggle switch is currently in the 'Off' position (grey).
- Wireless devices**: The 'Wi-Fi' toggle switch is currently in the 'On' position (blue).

To the right of the settings is a red rounded rectangle containing a warning icon (a bell with a lightning bolt) and the following text:

**Wireless Device Operation Aboard Aircraft**


The use of any portable electronic transmission devices aboard aircraft is usually prohibited.

Make sure the module is either **OFF** or in **Airplane Mode** (for **Windows 8** only) if you are using the computer aboard aircraft.

Figure F - 29 - PC Settings (Wireless)

## Windows 8

### Desktop Mode

1. Switch to the Windows Desktop (click the app or use the Windows logo key **+** **D** key combination).
2. Click the wireless icon  in the notification area of the taskbar.
3. A list of available access points will appear.
4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to share or connect to devices or not.
7. Select any connected network and click **Disconnect** to disconnect from a connected access point.

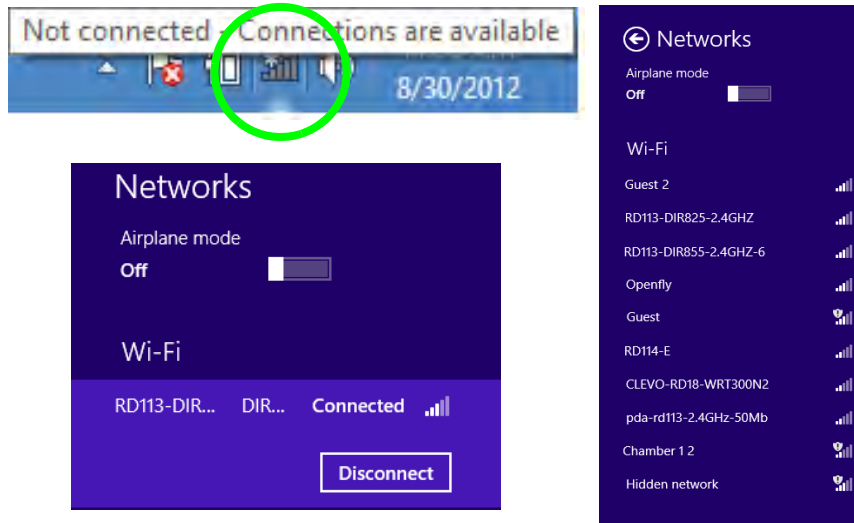


Figure F - 30 - Windows Desktop Taskbar Notification Area WLAN Connection

## Control Panel

If you are in **Category View** do the following (see over for Icon View):

1. Open the **Control Panel** (see *“Windows 8 Control Panel”* on page F - 8).
2. Click the **Network and Internet** control panel.
3. Click **Connect to a network**.

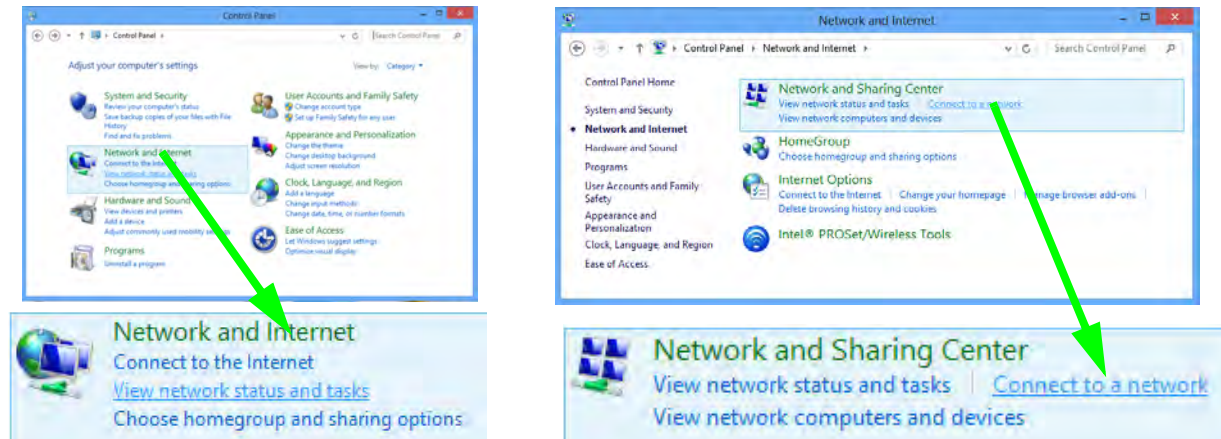


Figure F - 31 - Network and Internet Control Panel

4. A list of available access points will appear.
5. Double-click an access point to connect to it (or click it and click **Connect**).
6. Enter a network security key (password) if required, and click **Next**.
7. You can choose to share or connect to devices or not.
8. Select any connected network and click **Disconnect** to disconnect from a connected access point.

## Windows 8

If you are in **Icon View** do the following:

1. Open the **Control Panel** (see “*Windows 8 Control Panel*” on page F - 8).
2. Click **Network and Sharing Center**.
3. Click **Change Adapter Settings**.
4. Double-click **Wi-Fi**.



Figure F - 32 - Network and Sharing Center Control Panel

5. A list of available access points will appear.
6. Double-click an access point to connect to it (or click it and click **Connect**).
7. Enter a network security key (password) if required, and click **Next**.
8. You can choose to share or connect to devices or not.
9. Select any connected network and click **Disconnect** to disconnect from a connected access point.

## F - 36 Wireless LAN Settings (Windows 8)



## Fingerprint Reader Module (Windows 8)

The fingerprint reader module provides a high level of security for your computer. Make sure you have administrator's rights to your computer, and have a **Windows** password enabled for full security protection.

There are three fingerprint applications supplied with this model. Install the driver from the **Device Drivers & Utilities + User's Manual** disc and follow the appropriate instructions on the following pages.

- See overleaf for driver installation on the two of the applications applicable to **Windows 8**.
- See pages **7 - 46** to **7 - 55** for information on the **AuthenTec TrueSuite** application (for **Windows 7** only).
- See pages **7 - 56** to **7 - 66** for information on the **BioExcess** application (for **Windows 7 & Windows 8**).
- See pages **F - 39** to **F - 47** for information on the **Protector Suite** application (for **Windows 8 only**).



### Password Warning


If you set passwords for any of the security modules, **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

### Protector Suite Fingerprint Reader Driver Installation (Windows 8)

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **2.Install FingerPrint Driver > Yes**.
4. Click **Next > Next > Next**.
5. Click **Finish > Yes** to restart the computer.
6. After installing the driver you will need to install **Microsoft.net Framework (V3.5 or higher)** before running the Protector Suite application. You can go to the Microsoft website, search for the file, download it and then install it, or alternatively you can **enable Microsoft.net Framework from the control panel** by following the procedure overleaf.

### BioExcess Fingerprint Reader Driver Installation (Windows 8)

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **2.Install Fingerprint Driver > Yes**.
4. Click **Next** (the system will take some time to install the application).
5. Click **Finish** to restart the computer.
6. Run **BioExcess** from the **Start** screen, or double click the notification area icon .
7. See pages **7 - 56** to **7 - 66** for information on the **BioExcess** application.

## Protector Suite Application (Windows 8)

### Enabling the .NET Framework 3.5 in the Windows Control Panel

1. Make sure you have a working internet connection.
2. Go to the Control Panel.
3. Click to select **Programs and Features (Programs)**.
4. Click **Turn Windows features on or off** (in the menu on the left).
5. Click to select the **.NET Framework 3.5 (includes .NET 2.0 and 3.0)** check box (the sub menu items are not required).

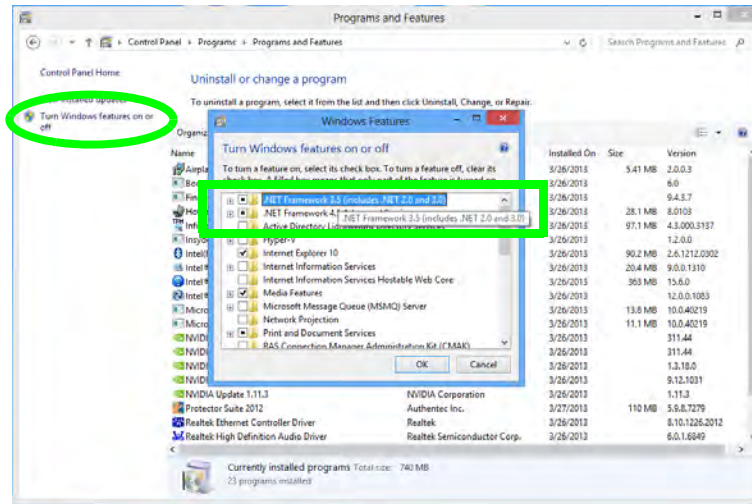


Figure F - 33 - Turn Windows Features On or Off

## Windows 8

6. Click **OK** to install the features required.
7. **Windows** will search for (as long as you have a working internet connection) and install the features.
8. Click **Restart now** to complete the installation.

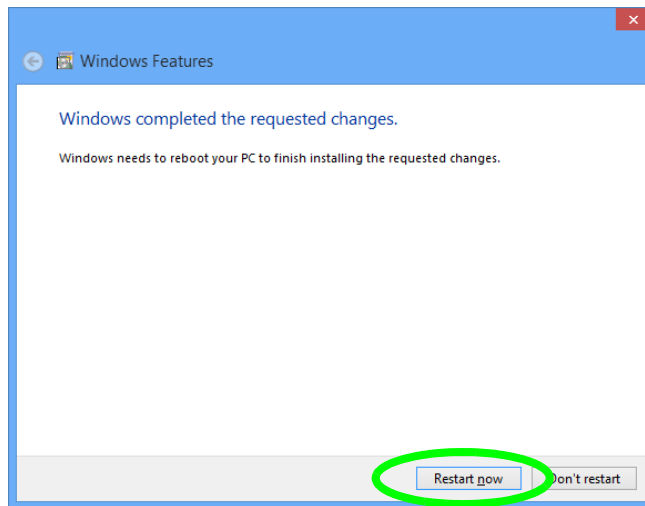



Figure F - 34 - Windows Features (Restart now)

## User Enrollment

1. Run the **Control Center** from the **Start** screen, or double click the notification area icon  (click **Initialize**).
2. On the first run of the program you will be asked to click the **Accept** button to accept the license.
3. If you have not set a **Windows** password you will be prompted to do so (**note**: If you have not set a password **Protector Suite** cannot secure access to your computer).
4. Click **Submit** when you have entered password.
5. You will then be prompted to enroll your fingerprints.
6. Click the button above any of the fingers to begin the enrollment process for that finger (click **Tutorial** to get help with fingerprint enrollment at any time - see over).

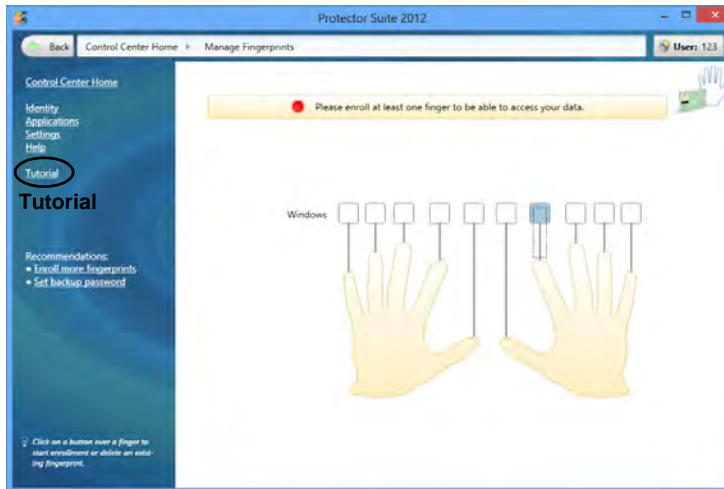


Figure F - 35 - Fingerprint Enrollment (Click Finger to Enroll)

- Put the finger **flat in the center of the reader** until prompted to lift the finger off the reader.

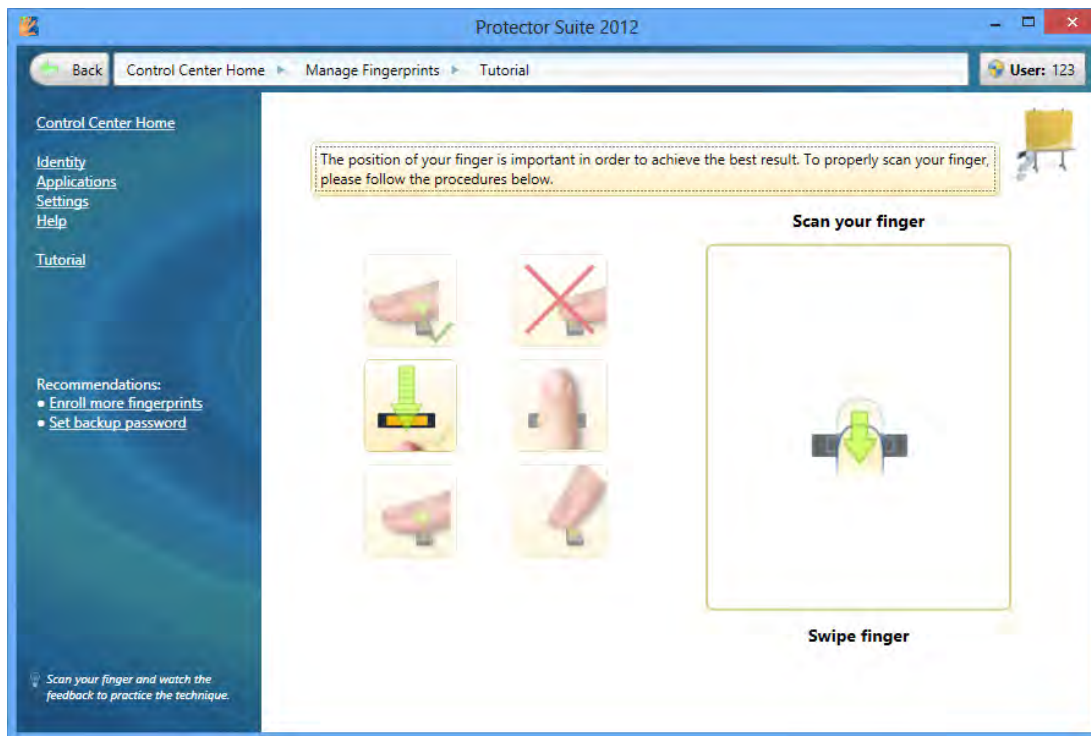


Figure F - 36 - Fingerprint Enrollment Tutorial

- Keep placing the finger flat on the reader, and lifting it off the reader as instructed, until the progress bar reaches **100%** to enroll that finger.

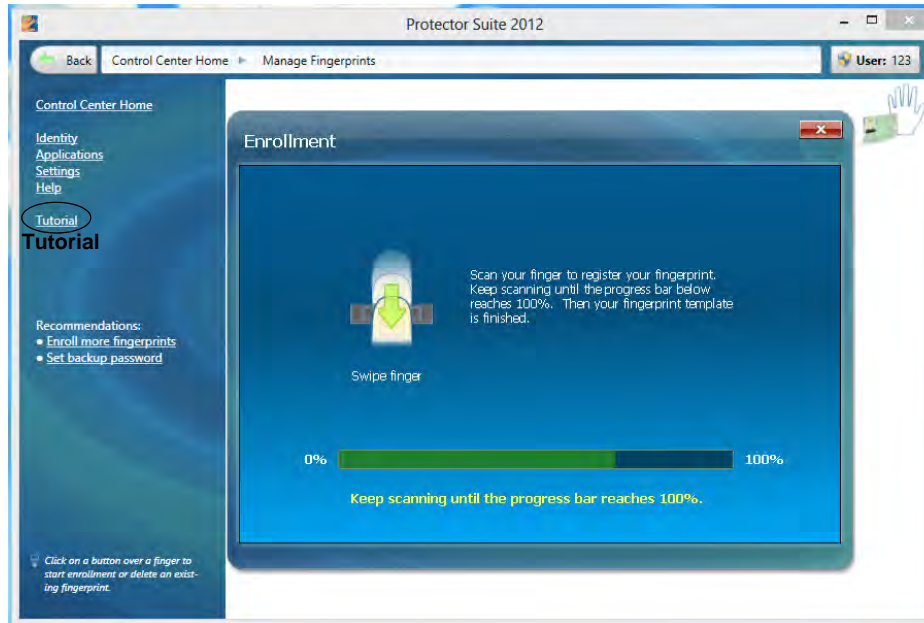


Figure F - 37 - Fingerprint Enrollment Process

- Repeat the process for all the fingers you wish to enroll (see sidebar).
- You can then click any of the sidebar menu headings to go to **Control Center Home**, **Identity**, **Applications**, **Settings** or **Help**.

## Windows 8

11. It is recommended you set a strong backup password.
12. Click **Set backup password** and then enter a password of your choice and click **Apply**.

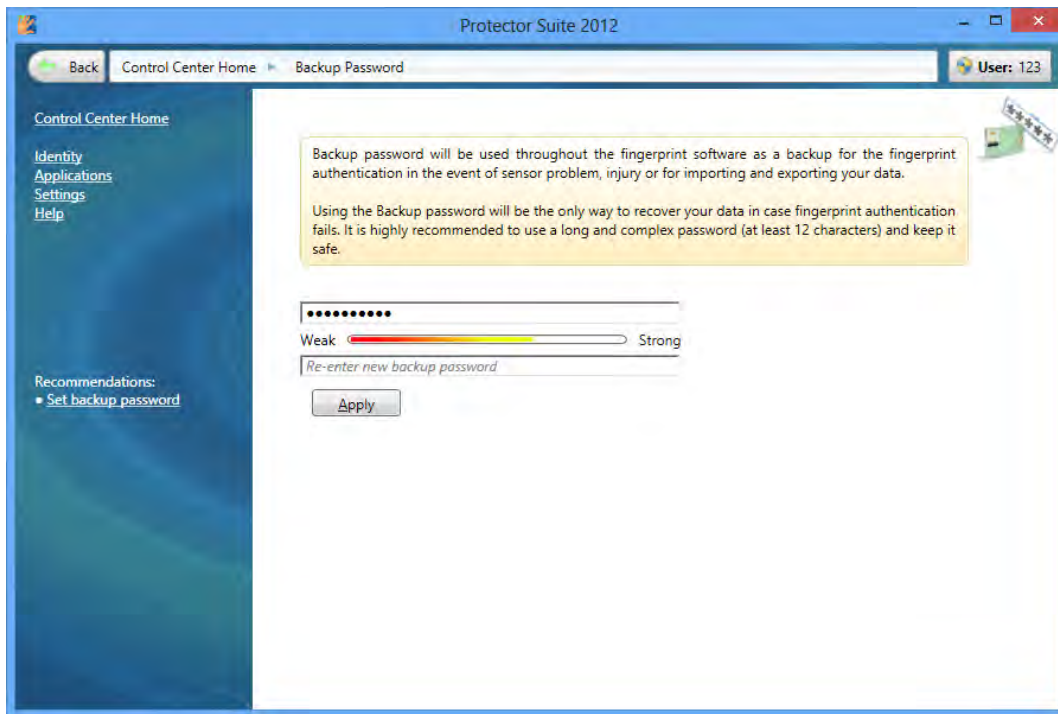



Figure F - 38 - Set Backup Password



- Right-click the taskbar icon  and select **Start Control Center** (and place a finger on the reader) to allow you to **Edit Fingerprints**, register **Applications**, edit **Settings** and access the **Help** menu etc. You can also run the **Control Center** from the **Start** screen.
- Click **“Help”** in **Control Center Home** to get more information on any topic.
- You can also run the **Tutorial**, or **Product Tour** video to get more information.

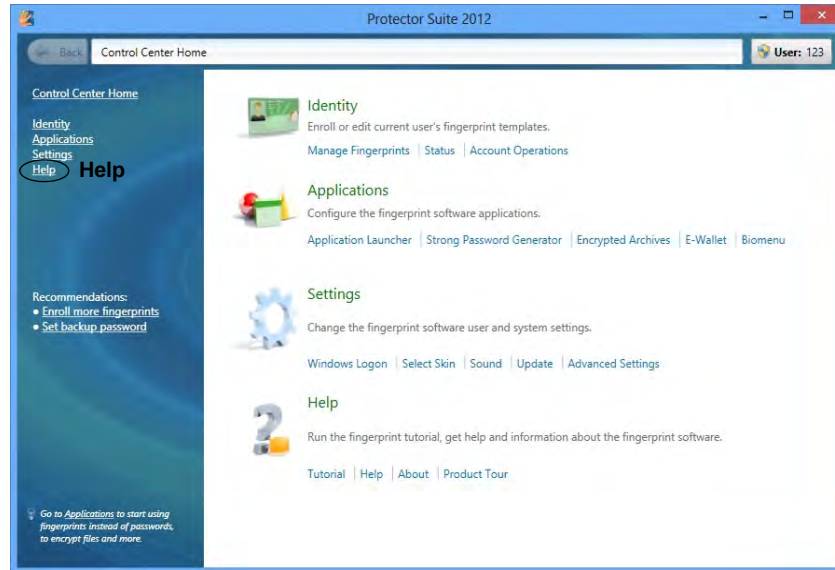


Figure F - 39 - Control Center

- See **“Help” on page F - 47** for further details.

## Windows 8

17. If you place a finger on the reader at any time you can access the **Biomenu** to **lock the computer**, **register websites**, access the **Personal Safe or E-Wallet**, open the **Control Center** and access the **Help** menu etc.

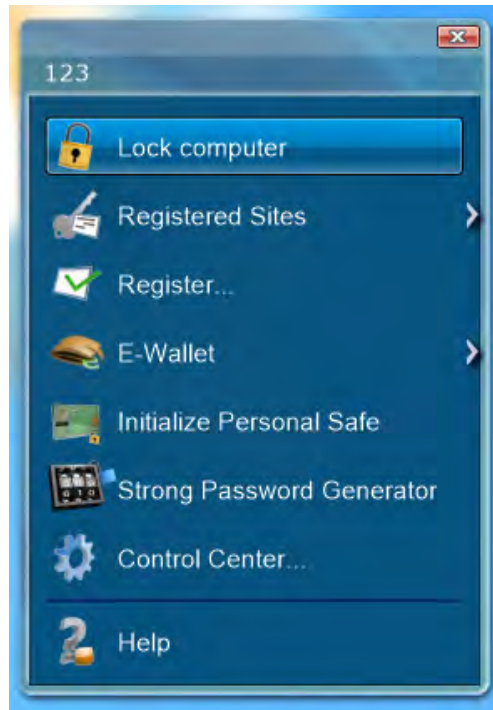


Figure F - 40 - Biomenu

## Fingerprint Control Center Features

### Application Launcher

The **Application Launcher** allows you to register applications to be launched when assigned to a particular finger. Simply copy the application icon on to one of the registered fingers and then click OK to close the application window. Once registered the application will launch when you swipe the appropriate finger across the sensor.

### E-Wallet

The **E-Wallet** can be used to store all your important information such as credit card details, account details etc. It can be used to help you complete complex online forms (e.g. when online shopping) as it stores frequently. You can create E-Wallet records and drag and drop them onto forms when required. See the Help file for more information.

### Personal Safe

The **Personal Safe** is an encrypted area assigned on your hard drive that allows you to store files and folders to be protected by fingerprint protection.

### Strong Password Generator

This is used to generate complex passwords, immune to dictionary attacks.



### Help

For more information on these and other features simply access "**Help**" in the **Fingerprint Control Center** and select the item from the menu on the left.

# Bluetooth Settings (Windows 8)

If your purchase option includes the **Combination Wireless LAN & Bluetooth module** (either **Intel®** or **3rd Party**) then install the driver as instructed in **Chapter 7** (see links below). Note that the **Qualcomm Atheros WLAN (Combo) module** only requires the WLAN driver installation.

Use the **Fn + F12** key combination or **Control Center** button to toggle power to the **Bluetooth** module.



### Bluetooth Data Transfer



Note that the transfer of data between the computer and a Bluetooth enabled device is supported in **one direction only (simultaneous data transfer is not supported)**. Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

- For **3rd party Bluetooth modules** see *“3rd Party Bluetooth (V4.0) Combo Driver Installation” on page 7 - 69.*
- For **Intel Bluetooth combo modules** see the installation procedure see *“Intel Bluetooth Combo Driver Installation” on page 7 - 70.*

## Bluetooth Configuration in Windows 8

You can configure a Bluetooth connection as below, however make sure the Bluetooth module is turned on (and not in Airplane Mode) before configuration begins.

### Desktop Mode

1. Switch to the Windows Desktop (click the app or use the Windows logo key  + **D** key combination).
2. Click the notification area of the taskbar and double-click the Bluetooth icon  (or click and select **Show Bluetooth Devices**).
3. The **Devices** item in **PC Settings** will appear.

OR

### Charms Bar

1. Go to the **Charms Bar**.
2. Select **Settings** and then click **Change PC Settings**.
3. The **Devices** item in **PC Settings** will appear.

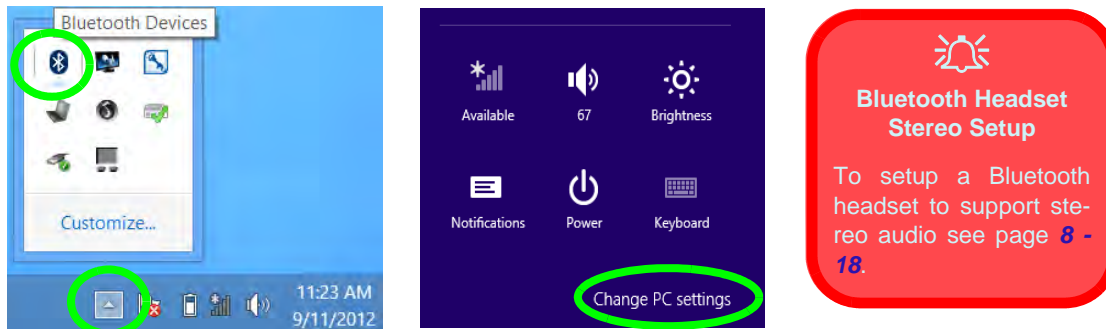


Figure F - 41 - Bluetooth Taskbar Icon & Change PC Settings (Charms Bar -Settings)

## Windows 8

4. Click **Add a Device**.
5. Double-click the device you want to pair with the computer.

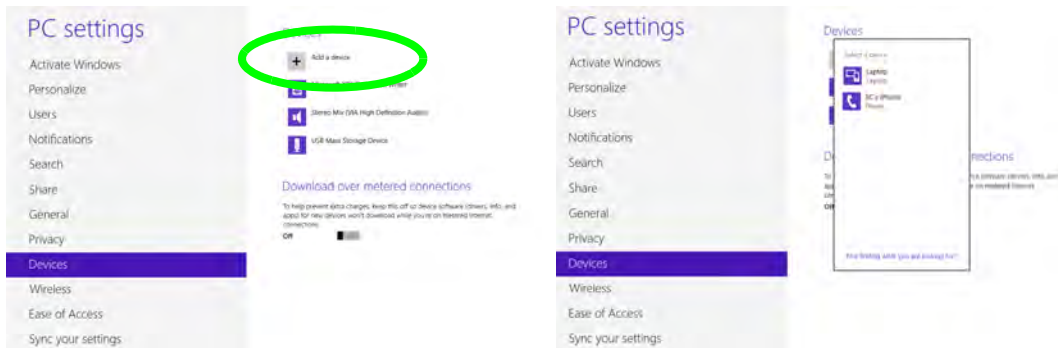


Figure F - 42 - PC Settings (Devices) - Add A Device

6. On first connection the computer will provide you with a pairing code to be entered onto the device.

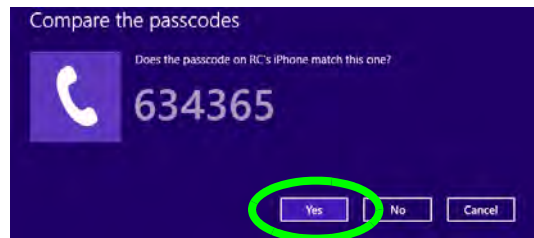


Figure F - 43 - Enter the Passcode

7. Enter the code into your Bluetooth enabled device and click **Yes** on the computer to complete the pairing.



## F - 50 Bluetooth Settings (Windows 8)

8. You need to either use **Airplane Mode**, or to **turn the Bluetooth module off** aboard aircraft.

The image shows a screenshot of the Windows 8 PC settings application. On the left is a navigation pane with the following options: Activate Windows, Personalize, Users, Notifications, Search, Share, General, Privacy, Devices, **Wireless** (highlighted in blue), Ease of Access, and Sync your settings. The main content area displays the 'Wireless' settings for a 'Chunghwa Telecom' device. It includes three sections: 'Airplane mode' (turned Off), 'Wireless devices' (with Mobile broadband, Wi-Fi, and Bluetooth all turned On), and 'Mobile broadband hardware'. To the right of the settings is a red rounded rectangle containing a warning icon and text: 'Wireless Device Operation Aboard Aircraft. The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module is either OFF or in Airplane Mode (for Windows 8 only) if you are using the computer aboard aircraft.'

Figure F - 44 - PC Settings (Wireless)

### To Make your Computer Discoverable to Bluetooth Devices

1. Switch to the Windows Desktop (click the app or use the Windows logo key  + D key combination).
2. Click the notification area of the taskbar, click the Bluetooth icon  and click **Open Settings**.
3. Click **Options**, and make sure that **Allow Bluetooth devices to find this computer** check box (**Discovery**) has a tick inside it.
4. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

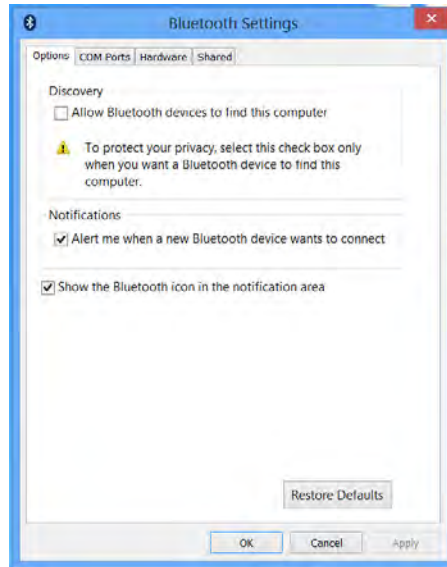


Figure F - 45 - Bluetooth Settings



## RAID Setup (Windows 8)

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0), Mirroring (RAID 1) or Recovery modes you will require **at least two identical** (see sidebar below) hard disks; to configure your system in Parity Across Disks (RAID 5) mode you will require **three hard disks** installed. See [Table , on page F - 54](#) for *Windows 8* RAID information.

Note that the RAID setup in *Windows 8* differs from that outlined for *Windows 7*. You need to setup a RAID before installing your *Windows 8* operating system, and you will need to prepare the following in order to do so.

1. The **Microsoft Windows 8 OS DVD**.
2. A hard disk installed in the Primary HDD bay.  
**AND**  
**For RAID levels 0/1/Recovery:** A **second** (identical) hard disk installed in the Primary HDD bay.  
**For RAID level 5:** A **third** (identical) hard disk installed in the Secondary HDD bay.
3. The **Device Drivers & Utilities + User's Manual** disc.
4. A USB flash drive.
5. An operable computer (to copy files from the **Device Drivers & Utilities + User's Manual** disc to the USB flash drive).



### SATA Mode Selection

The SATA mode selection should be made **before installing your operating system. DO NOT change your selected SATA mode** unless you intend to reinstall your operating system. Make sure you have backed up all your data before doing so.

### RAID Hard Disks

All hard disks in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

RAID Level	Description
RAID 0	Two Identical drives reading and writing data in parallel to <b>increase performance</b> . RAID 0 implements a striped disk array and the data is broken into blocks and each block is written to a separate disk drive.
RAID 1	Two Identical drives in a mirrored configuration used to <b>protect data</b> . Should a drive that is part of a mirrored array fail, the mirrored drive (which contains identical data) will handle all the data. When a new replacement drive is installed, data to the new drive is rebuilt from the mirrored drive to restore fault tolerance.
Recovery	Two Identical drives copying data between a master and a recovery disk. This provides more control over how data is copied between the master and recovery drives, fast volume updates and the ability to view the data in <i>Windows Explorer</i> .
RAID 5	Identical drives (at least <b>three</b> drives must be used) in a parity across disks configuration are used to <b>protect data</b> and <b>increase performance</b> . A RAID 5 array can withstand a single disk failure without losing access to data.

Table F - 4 - RAID Levels



### Array Types

A **Mirrored Array (RAID 1)** provides full data protection, as data can simply be copied from a healthy disk to a replacement for any failed disk.

A **Striped Array (RAID 0)** is **NOT** fault-tolerant. The failure of one drive will result in the loss of all data in the array. It is designed to increase disk performance by spreading the I/O load across the channels and drives.

A **Parity Across Disks (RAID 5)** provides full data protection and increased performance.

## SATA RAID Setup Procedure (Windows 8)

Before setting up the system you will need to copy a driver folder to a USB flash drive or external USB hard disk. This driver folder is included on the *Device Drivers & Utilities + User's Manual disc* but you will need to go to an operable computer and copy the folder to a USB Flash drive or external USB hard disk.

1. Go to the operable computer and insert a USB Flash drive or external USB hard disk.
  2. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive of the operable computer.
  3. Copy the **f6flpy-x64** folder from the location below (D: denotes your DVD drive) on the *Device Drivers & Utilities + User's Manual* disc to the USB flash drive or external USB hard disk.
- **For Windows 8 64bit = D:\Options\00\_IRST\f6flpy\f6flpy-x64**
4. Start-up your notebook computer and press <F2> to enter the **BIOS**.
  5. Go to the **Boot** menu, select **OS Select** and press <Enter> (see page 5 - 17).
  6. Set **OS Select** to "**Windows 8**" and set **UEFI Boot** to "**Enabled**".
  7. Press <Esc> to exit the menu and go to the **Advanced** menu.
  8. Select **SATA Mode** (see page 5 - 9), press <Enter> and select "**RAID Mode**".
  9. Press <F4> and <Yes> to "**Save Changes and Reset**".
  10. After computer restarts press <F2> to enter the **BIOS** again.
  11. Go to **Intel(R) Rapid Storage Technology** (in the **Advanced** menu) and press <Enter>.
  12. Select **Create RAID Volume** and press <Enter>.



Figure F - 46 - Create RAID Volume (Advanced > Intel(R) Rapid Storage Technology)

## Windows 8

13. You can now setup your RAID volume using any two installed disks.
14. Go to **Name:** and press <Enter>.
15. Type a name of your choice for your RAID volume and press <Enter>.

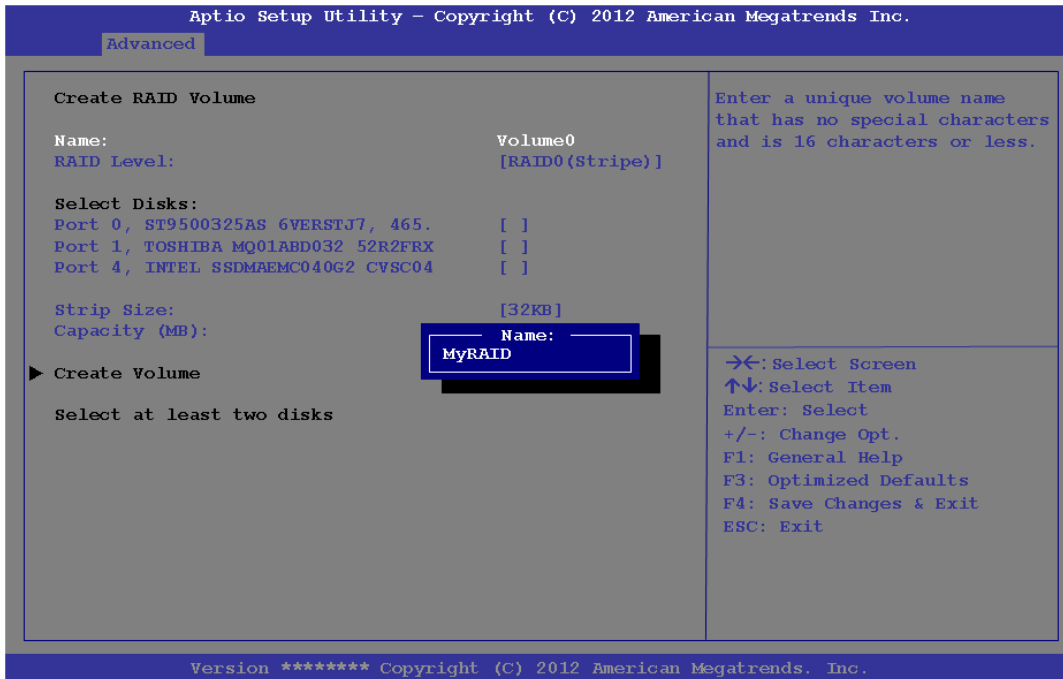


Figure F - 47 - Name the RAID Volume (Advanced > Intel(R) Rapid Storage Technology)

16. Go to **RAID Level:** and press <Enter>.
17. Choose the RAID Level required (see [Table F - 4, on page F - 54](#) for details) and press <Enter>.
  - **RAID0 (Stripe)**
  - **RAID1 (Mirror)**
  - **RAID5 (Parity)**
  - **Recovery**
18. Go to any of the disks listed under **Select Disks:** and select a disk name and press <Enter>.
19. Move the cursor down (use the arrow keys) onto to **X** (o select the disk required and press <Enter>.
- If you have selected a **Recovery** level RAID then you need to select one disk to be **Master disk (M)** and one disk to be the **Recovery disk (R)**

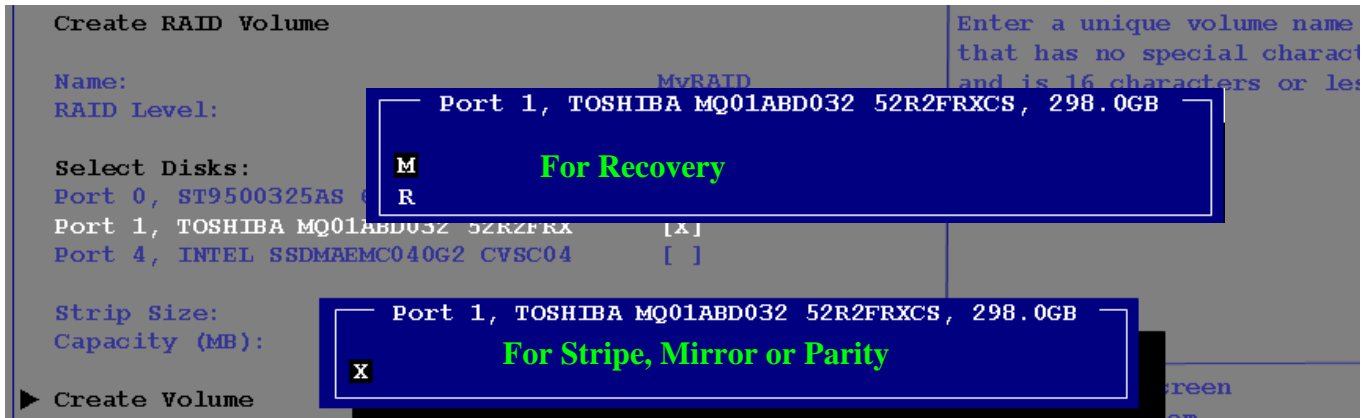


Figure F - 48 - Select Disks (Advanced > Intel(R) Rapid Storage Technology)

## Windows 8

20. You should select two identical disks to form your RAID volume.
21. If you have selected **RAID0 (Stripe)** then you can adjust the “**Strip Size**” to your requirements.
22. If you have selected **Recovery** then you can adjust the **Synchronization** to “**On Request**” or “**Continuous**”.
23. Go to **Create Volume** and press <Enter>.
24. The RAID volume will then be created and the RAID information will be displayed under **Intel(R) Rapid Storage Technology** (in the **Advanced** menu).

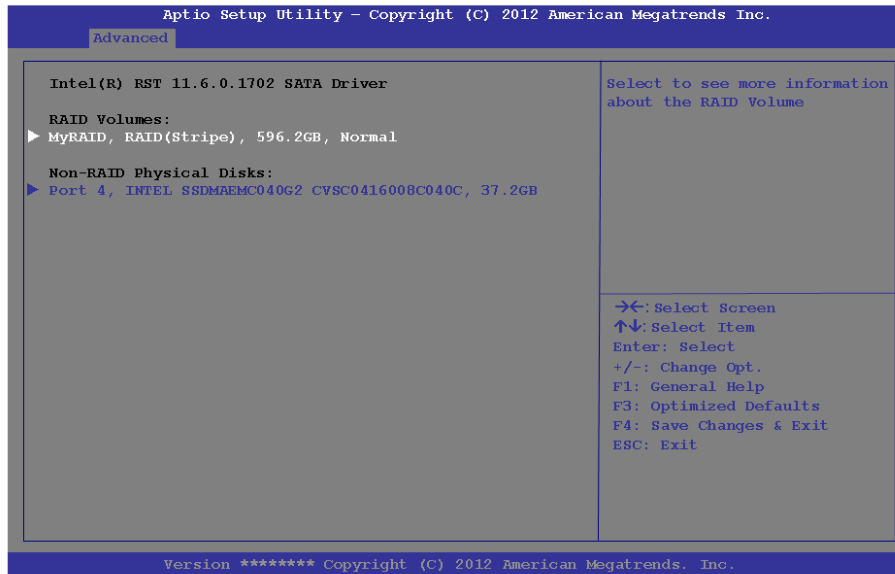


Figure F - 49 - Created RAID Information (Advanced > Intel(R) Rapid Storage Technology)

25. Press <Esc> to exit the menu.
26. Press <F4> and <Yes> to “**Save Changes and Reset**”, however **ensure that the two conditions in the bulleted points below are met** before doing so.
  - Make sure the *Windows 8* OS DVD is in the DVD drive. and as the computer starts up it will automatically boot from the *Windows 8* OS DVD (you will be prompted to press a key to boot from the DVD).
  - Make sure your USB Flash drive or external USB hard disk is attached to one of the USB ports on the computer.
27. Press <F7> as the computer starts up to bring up the boot device menu.
28. Select the DVD drive containing the *Windows 8* OS DVD and press <Enter>.
29. Press a key at system startup to begin installing *Windows* from your *Microsoft Windows 8* disc.
30. Click **Next > Install Now** to continue installing the operating system as normal (see your *Windows* documentation if you need help on installing the *Windows* OS).
31. A prompt will appear to ask you to **Load Driver**.
32. Click **Browse** and browse to the location you copied the files to on your USB Flash drive or external USB hard disk (X: denotes your USB Flash drive or external USB hard disk):
  - **X:\f6flpy-x64**
33. Click **Next**.
34. Follow the on-screen instructions to install the *Windows 8* operating system.
35. Install the *Windows* drivers from the *Device Drivers & Utilities + User's Manual* disc as per [Table 4 - 1, on page 4 - 3](#) (make sure you install the Intel Rapid Storage Technology driver - see overleaf).
36. Run the **Intel® Rapid Storage Technology** application to manage your RAID volume as instructed in “[Intel® Rapid Storage Technology for RAID Systems](#)” on page 7 - 12.

### IRST Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **6.Install IRST Driver > Yes**.
4. Click **Next > Next > Yes > Next > Next**.
5. Click **Finish** to restart the computer (you will need to restart the system again after the computer has rebooted).



## Deleting a RAID (Windows 8)

If you wish to delete an existing RAID then follow the procedure below to do so. However **backup up any necessary files and data before deleting a RAID**, as doing so will result in the loss of all data on the RAID volumes.

1. Start-up your notebook computer and press <F2> to enter the **BIOS**.
2. Go to **Intel(R) Rapid Storage Technology** (in the **Advanced** menu) and press <Enter>.
3. Go to the RAID (listed under **RAID Volumes:**) and press <Enter>.
4. Select **Delete** and press <Enter>.

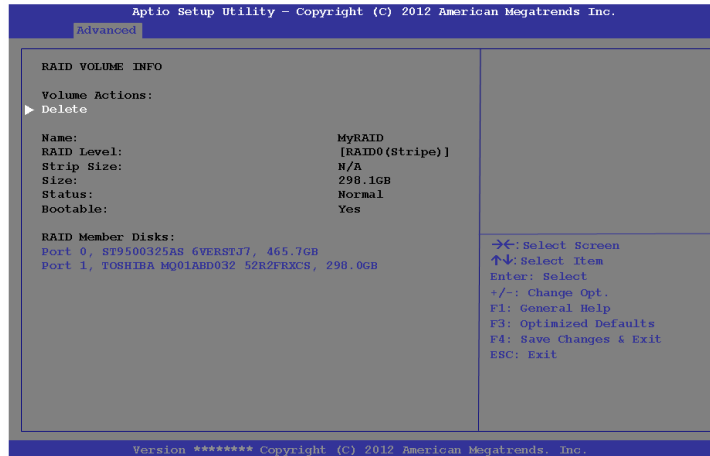


Figure F - 50 - Delete RAID (Advanced > Intel(R) Rapid Storage Technology)

5. Select **"Yes"** (note that all the data on the volumes will be lost) and press <Enter>.
6. The RAID will then be deleted.

